

MANUALE DI OFFICINA WORKSHOP MANUAL MANUEL D'ATELIER WERKSTATTHANDBUCH





## **INDEX**

INTRODUCTION 2				
TECHN	ICAL ENGINE SPECIFICATIONS	4		
SPECIA	L EQUIPMENT	5		
	•			
1 EN	GINE REMOVAL FROM VEHICLE	6		
2 EN	GINE DISASSEMBLY 1	4		
2.1	THERMAL UNIT1	4		
2.1.1	CYLINDER HEAD: DISASSEMBLING THE MECHANICAL TENSIONER	6		
2.1.2	CYLINDER HEAD: DISASSEMBLING THE CAMSHAFT SUPPORT, FIXED PAD AND SPARK PLUG SEAT O-RING	7		
2.1.3	CYLINDER HEAD: REMOVING THE CAMSHAFTS 1.			
2.1.4	CYLINDER HEAD: UNCOUPLING FROM THE	9		
2.1.5	DISASSEMBLING THE CYLINDER AND PISTON 2	1		
2.2	DISASSEMBLING THE IGNITION UNIT,	_		
2.2.1	TIMING CHAIN AND PADS2. STATOR, FLYWHEEL and pick-up unit			
2.2.1	TIMING CHAIN AND PADS2			
2.3	PINION AND SPACER2			
2.4	CLUTCH UNIT AND COOLANT PUMP COVER 2			
2.5	ENGINE LUBRICATION CIRCUIT	_		
2.5.1	OIL PUMPS CONTROL GEARS	_		
2.5.2	HIGH-PRESSURE OIL PUMP			
2.5.3	INTAKE OIL PUMP AND BY-PASS VALVE3	4		
2.5.4	OIL PRESSURE CONTROL VALVE 3			
2.5.5	PAPER OIL FILTER	5		
2.6	COUNTERSHAFT3	6		
2.7	PRIMARY GEAR3	7		
2.8	ELECTRIC IGNITION3	9		
2.8.1	ELECTRIC KICKSTART UNIT4	O		
2.9	EXTERNAL GEARSHIFT UNIT4	1		

2.10	CRANKSHAFT, GEARBOX UNIT AND INTERNAL GEARSHIFT42	
2.10.1	NUT ON LEFT SIDE OF CRANKSHAFT 42	2
2.10.2	OPENING THE CRANKCASE43	3
2.10.3	CRANKSHAFT44	1
2.10.4	INTERNAL GEARSHIFT UNIT AND COMPLETE GEARBOX44	4
2.11	DISASSEMBLY OF PARTS FROM CRANKCASES 46	5
2.11.1	RIGHT-HAND HALF CRANKCASE	ŝ
	2.12.1.1 Piston oil jets46	5
	2.11.1.2 Extraction of the countershaft support bearing	7
2.11.2		
	2.11.2.1 Inner oil filter	3
	2.11.2.2 Extraction of the desmodromic device bearing48	3
3 ENG	GINE ASSEMBLY AND CHECKS 49	9
3.1	HALF CRANKCASE50	)
3.1.1	EXTERNAL RIGHT SIDE51	1
	3.1.1.1 Insertion of the oil seal and countershaft support bearing53	ζ
3.1.2	INTERNAL RIGHT SIDE54	
3.1.3	EXTERNAL LEFT SIDE56	ŝ
3.1.4	INTERNAL LEFT SIDE57	7
3.2	CHECKING THE CONNECTING ROD AND MOTOR SHAFT58	В
3.3	COMPLETE CRANKSHAFT ASSEMBLY 60	0
3.4	GEARBOX UNIT: CHECKS AND REASSEMBLY61	1
3.4.1	GEARBOX UNIT CHECK61	l
3.4.2	PRIMARY UNIT ASSEMBLY62	2
3.4.3	SECONDARY UNIT ASSEMBLY64	1
3.4.4	CHECKING THE FORKS, FORK PINS AND DESMODROMIC DEVICE	7
3.5	GEARBOX AND INTERNAL GEARSHIFT ASSEMBLY 69	9
3.6	CLOSING THE ENGINE CRANKCASE72	2
3.7	BLOCKING THE CRANKSHAFT AT THE TOP DEAD CENTRE AND TIGHTENING THE NUT ON THE LEFT SIDE OF THE CRANKSHAFT74	1
3.8	EXTERNAL GEARSHIFT75	5
3.8.1	CHECKING THE COMPLETE GEAR SHAFT 75	
3.8.2	EXTERNAL GEARSHIFT ASSEMBLY77	7
3.9	CHECKING THE KICKSTART SHAFT UNIT AND ASSEMBLY77	7
3.10	ELECTRICAL STARTER UNIT AND PRIMARY GEAR78	8
3.10.1	CHECKING THE ELECTRICAL STARTER DEVICE ELEMENTS78	3
3.10.2	COUPLING THE IGNITION AND PRIMARY GEARS TO THE MOTOR79	9
3.11	OIL PUMPS: INSPECTION AND REASSEMBLY.81	1
3.11.1	INTAKE PUMP ASSEMBLY83	3
3.11.2	HIGH-PRESSURE PUMP AND CONTROL GEAR ASSEMBLY84	4
3.11.3	CHECKING AND ASSEMBLING THE PRESSURE CONTROL VALVE85	5





## **INDEX**

3.11.4	CHECKING AND ASSEMBLING THE OIL PUMP CONTROL GEARS		
3.11.5	INSERTING THE PAPER OIL FILTER		
3.11.6	CHECKING AND COUPLING THE COUNTERSHAFT88		
3.12	CLUTCH UNIT90		
3.12.1	CHECKING THE CLUTCH CASE, ROLLER BEARING AND INTERNAL CENTRE BEARING 90		
3.12.2	CHECKING THE CLUTCH DISCS91		
3.12.3	CHECKING THE CLUTCH DRUM AND CAP92		
3.12.4	CHECKING THE THRUST BEARING UNIT92		
3.12.5	ASSEMBLING THE CLUTCH UNIT		
3.13	COOLANT PUMP97		
3.13.1	CHECKING AND DISMANTLING THE PUMP UNIT97		
3.13.2	PUMP UNIT ASSEMBLY		
3.14	CHECKING AND COUPLING OF TIMING CHAIN, FIXED AND MOBILE PADS101		
3.15	IGNITION SYSTEM103		
3.15.1	CHECKING THE IGNITION SYSTEM103		
3.15.2	COUPLING OF IGNITION SYSTEM TO CRANKCASE103		
3.16	THERMAL UNIT106		
3.16.1	CHECKING THE PISTON, PIN BOLT AND PISTON		
3.10.1	RINGS		
3.16.2	CYLINDER CHECK108		
	3.16.2.1 Coupling clearance		
3.16.3	CYLINDER HEAD: DISASSEMBLING AND		
	CHECKING AUXILIARY DEVICES		
	3.16.3.1 Lubrication jets and centring pins		
	3.16.3.3 Calibrated discs for valve backlash		
3.16.4	adjustment111 CYLINDER HEAD: DISASSEMBLING AND		
3.10.4	CHECKING THE VALVE UNITS 112		
	3.16.4.1 Springs113		
	3.16.4.2 Valve guides, valves and seats113		
	3.16.4.3 Oil-scraper rings and lower cup115		
3.16.5	CYLINDER HEAD: CHECKING THE CYLINDER HEAD BODY115		
3.16.6	CHECKING THE CAMSHAFTS116		
3.16.7	CHECKING THE CAMSHAFT closing bridges 117		
3.16.8	CYLINDER HEAD: INSERTING THE LOWER CUP AND OIL-SCRAPER RING118		
3.16.9	CYLINDER HEAD: ASSEMBLY OF THE VALVE UNIT119		
3.16.10	CYLINDER HEAD: REPOSITIONING CALIBRATED DISCS. ASSEMBLING ROCKER ARM PINS AND ROCKER ARMS AND COUPLING THE SPARK PLUG		
3.16.11	CYLINDER HEAD: INSERTING THE OIL JETS, CENTRING PINS AND SPARK PLUG O-RING 121		
3.16.12	Piston: fitting the oil-scraper and seal strips, fitting the circlip		
	3.16.12.1 Piston: fitting the oil-scraper and seal strips		
	3.16.12.2 Piston: fitting the circlip		
3.16.13	FITTING THE PISTON TO THE CYLINDER123		
	FITTING THE PISTON-CYLINDER COUPLING TO THE CRANKCASE		
	111L CIVIIVIC/IDL		

i	4 DEA	SSEMBLING THE ENGINE ON THE VEHICLE	170
	3.20	COUPLING THE GEARSHIFT LEVER	.138
	3.19	COUPLING OIL CAPS	.137
	3.18	RELEASING THE CRANKSHAFT	.136
	3.17	PINION COUPLING	.136
	3.16.19	COUPLING THE CYLINDER HEAD COVER GASKETS AND CYLINDER HEAD COVER	135
	3.16.18	CHECKING AND COUPLING THE MECHANICAL TENSIONER TO THE ENGINE	133
	3.16.17	VALVE BACKLASH	131
	3.16.16	COUPLING THE CAMSHAFTS TO THE CYLINDER HEAD AND TIMING	
	3.16.15	COUPLING THE HEAD TO THE CYLINDER	127

#### INTRODUCTION

This publication is intended for workshops specialised in repairing motorbikes and motorcycles.

Where prescribed, use special Betamotor tools.

Use Betamotor spare parts only. For their codes, refer to the spare parts manual for the specific vehicle or version. The warranty and liability on vehicle safety lapses when maintenance or repairs:

- Are NOT performed by workshops specialised in repair of motorbikes and motorcycles.
- Are NOT carried out carefully following the requirements contained in the technical documentation;
- Are NOT carried out using special Betamotor tools, where required;
- Are NOT carried out using Betamotor official spare parts.

Carefully read this manual in its entirety before working on the engine. Good knowledge of all components making up the engine and all the procedures to be followed for inspection and maintenance help lengthen the life of the engine.

The paragraphs contain schematic illustrations that highlight each topic to make the text readily understandable.

#### **Informative note**

Betamotor S.p.A. is committed to a policy of ongoing improvement of its products. This is why you might notice slight differences between the content of this document and the vehicle that you are about to carry out repairs and/or maintenance on. Betamotor S.p.A. models are exported to a number of countries where there are different rules concerning the Highway Code and vehicle type-approval procedures. Betamotor S.p.A. therefore reserves the right to modify its products and technical documentation at any time without prior notice, thank you for your understanding.

#### We respect and defend the environment

Everything we do has an impact on the entire planet and its resources. Betamotor S.p.A., wishing to safeguard the interests of the entire Community, would like to make customers and technical operators aware of ways of using the vehicle and the disposal of its parts in total compliance with standards in force in terms of environmental pollution, waste disposal and recycling.

#### **SAFETY**

### Carbon monoxide

- Exhaust gases contain carbon monoxide, which is poisonous. Carbon monoxide may cause loss of consciousness and lead to death. If the engine needs to be started, make sure the location is well-ventilated. Never start the engine indoors.
- The engine can be started indoors only if fitted with the appropriate exhaust gas extraction devices.

#### Petrol

- Petrol is extremely flammable and can be explosive under certain conditions.
- Keep sources of heat, sparks and flames away from the work area.
- · Always work in a well-ventilated area.
- Never use petrol as a solvent for cleaning. Do not handle it unless strictly necessary.
- Never use petrol to clean components by means of compressed air.
- Keep out of the reach of children.

#### **Engine oil**

• Engine oil can cause skin conditions if it remains in contact with the skin often and for prolonged periods.

- If you touch engine oil, wash the parts with soap and water as soon as possible.
- In case of contact with the eyes, rinse them with plenty of water and seek medical advice.
- If swallowed, do not induce vomiting in order to prevent the product from entering into the lungs;seek immediate medical advice. If you believe the product has entered the lungs, take the person concerned to hospital immediately.
- Waste oil contains dangerous substances that are harmful for the environment. In order to change it one must be equipped for disposal, in compliance with applicable laws.
- Do not discard waste oil into the environment.
- Keep out of the reach of children.

#### **Coolant liquid**

 In some situations, the ethylene glycol contained in the coolant is flammable and its flame is invisible. Should ethylene glycol catch fire, it can cause burns even though its flame is invisible.





- Do not bring the coolant into contact with hot parts.
   These parts could be hot enough to cause the liquid to ignite.
- The coolant (ethylene glycol) may irritate the skin and is poisonous if swallowed.
- Should the coolant come into contact with the skin, immediately remove contaminated clothing or footwear and wash with soap and water. In the event of contact with the eyes, rinse with plenty of clean water and seek medical advice immediately. Should it be swallowed, do not induce vomiting in order to prevent the product from entering the lungs. Administer clean water, immediately take the person concerned to hospital, and show this product to hospital staff.
- In the event of exposure to a high concentration of vapours, move the person concerned to an uncontaminated area and seek medical advice if necessary.
- Do not remove the radiator cap when the engine is still hot. As the coolant is pressurised, it may spurt out violently and cause burns.
- The coolant contains dangerous substances that are harmful for the environment. In order to change it one must be equipped for disposal in compliance with applicable laws.
- Do not disperse coolant into the environment.
- Keep out of the reach of children.

### **Hot parts**

 The engine and the exhaust system get very hot and remain at that temperature for a long time, even after the engine has been turned off. Wait for them to cool down before handling these parts or carrying out work on areas around them. Wear insulated gloves.

### **WARNINGS**

The information contained in this paragraph is important to ensure the operations carried out on the engine are performed without causing damage.

- Before disassembly, thoroughly clean the motorcycle.
- While disassembling it, clean all the parts and place them in containers accurately following the order of disassembly.
- Always use special tools wherever necessary and when required.
- Always use glues, sealant and lubricants wherever required. Follow the indications concerning their technical features.
- Always replace parts such as gaskets, O-rings and safety washers with newly supplied parts.
- When loosening or tightening nuts or screws, always start with the larger ones or from the centre. Always adhere to the specified tightening torques.
- · Use only Betamotor original spare parts.






## **TECHNICAL ENGINE SPECIFICATIONS**

Туре	Single cylinder, 4-stroke, liquid-cooled with countershaft and electric starting
Bore x stroke RX 450	97x60.8
Displacement [cm³] RX 450	449.3
Compression ratio RX 450	13.5:1
Distribution	4 valves
	TRANSMISSION
Primary transmission	31/72
Gear ratio 1°	14/29
Gear ratio 2°	16/27
Gear ratio 3°	19/27
Gear ratio 4°	20/24
Gear ratio 5°	27/27
Secondary drive	Chain-type





### **SPECIAL EQUIPMENT**

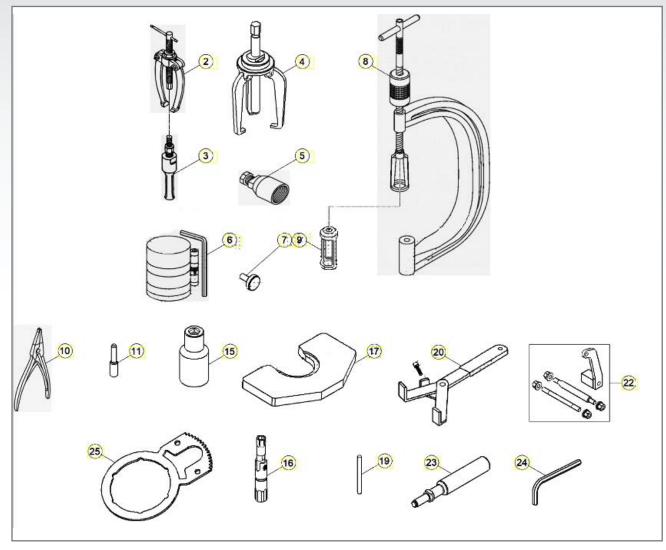

- 2. Bushing extractor code 36.25081.000
- 3. 20-30mm inner bearing extractor code 006.14.016.00.00
- 4. Gearwheels extractor code 006.14.015.00.00
- 5. Flywheel extractor code 049.14.000.00.00
- 6. Elastic bands for segments code 006.14.017.00.00
- 7. Chain tensioner equipment code 006.14.005.00.00
- 8. Valve spring assembly tool code 01.00043.000
- 9. Valve spring assembly insert code 006.14.003.00.00
- 10. Special ring clamp code 36.25097.000
- 11. Screw to lock crankshaft to the TDC code 006.14.011.00.00
- 15. 36 mm casing nut wrench code 006.14.002.00.00
- 16. Special wrench for spark plug RR4T MY'10 code 020.44.010.00.00
- 17. Connecting rod disassembly tool code 029.14.007.50.00
- 19. Valve guide differential control gauge code 006.14.018.00.00
- 20. Clutch inner hub fastening equipment code 006.14.004.00.00
- 22. Engine fastening equipment code 006.14.014.00.00
- 23. Pin bolt elastic ring tool code 022.14.020.00.00
- 24. Special wrench code 006.44.000.00.00
- 25. Special wrench code 037.14.002.50.00

#### **Symbols**



Value Tightening torque



Medium resistance threadlocker




Silicone paste




Grease




## 1 ENGINE REMOVAL FROM VEHICLE

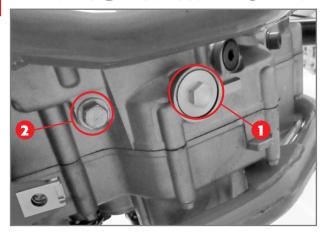

Screw 1 for draining motor oil and 2 for draining gear oil.

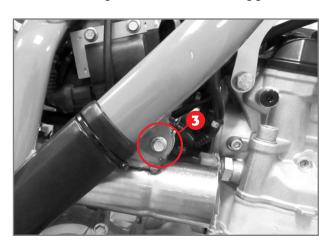

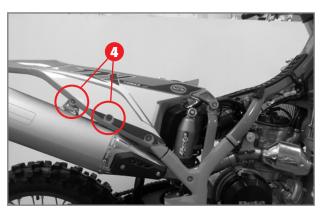



Remove screw 1 to empty the motor oil, and remove screw2 to empty the gear oil.

### ATTENTION!

Waste oil contains dangerous substances that are harmful to the environment. In order to change it one must be equipped for disposal, in compliance with applicable laws. Do not discard waste oil into the environment.

Remove the exhaust silencer. Loosen the screw 3.


Remove the screws **4**. Remove the silencer from the vehicle.


Drain the cooling system through screw **5** and let the liquid outflow into a container (the cooling circuit contains 1.3l of liquid).


Remove the radiator cap.





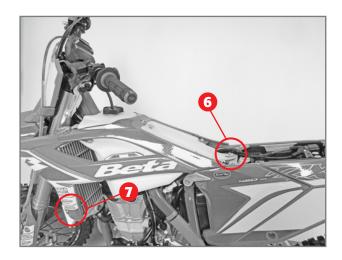

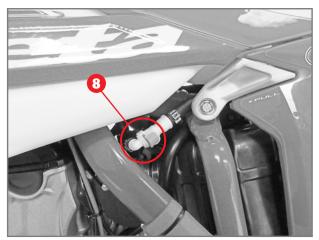

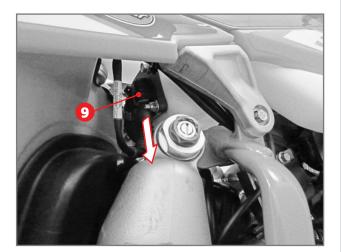

Remove the seat.

Remove the screw 6 fastening the tank to the frame, and the screws 7 (one per side) fastening the side panel to the radiator.

Disconnect the tank ventilation pipe.

Disconnect the petrol pipe by pressing the relevant button of quick coupling **8**.

#### ATTENTION!

Fire hazard! Fuel is easily flammable.

Do not carry out the operation near open flames or lit cigarettes and always turn off the engine.




Wipe off any traces of spilled fuel immediately.

Disconnect connector **9**.






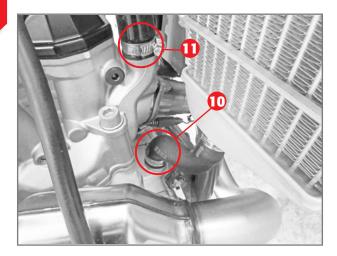





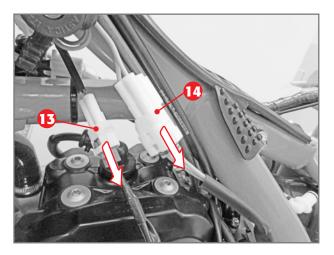

Lift the tank from the back and remove it backwards.


Loosen the three straps **10**, **11** and **12** and disconnect the radiator pipes from the engine.


Disconnect the spark plug cap. Cut all the straps that bind the electric motor system to the frame.


Release the connectors 13 and 14.






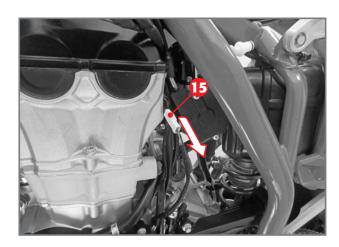

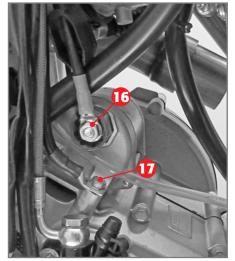

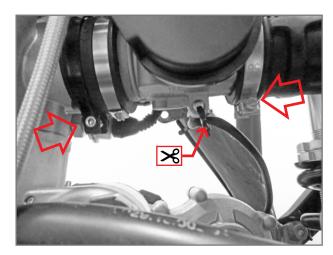

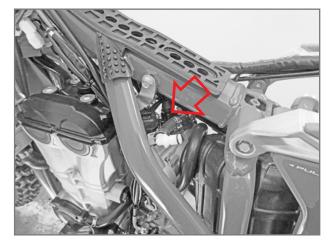

Release the connector 15.


Remove the nut **16** that secures the start motor cable and the ground screw **17**.


Loosen the throttle body straps from the air filter sleeve.


Disconnect the electrical connectors from the top section of the throttle body.





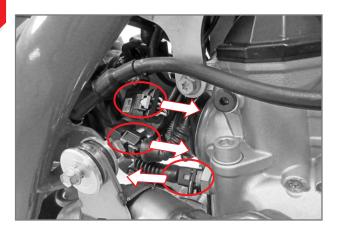

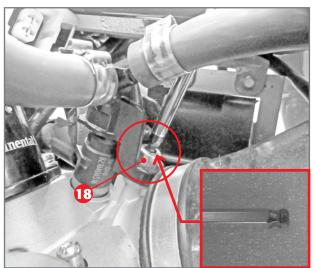

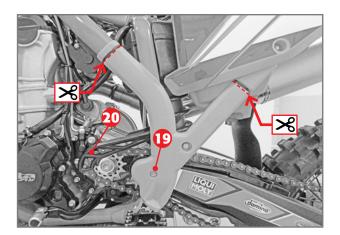



Disconnect the electrical connectors from the sides of the throttle body.

Remove the screw **18** fastening the injector to the throttle body, using a spanner as shown in the picture. Remove the entire injector from the throttle body.

### **ATTENTION!**

Make sure no foreign objects get into the injector housing. It is recommended to plug the housing with a clean cloth.


Remove the screw **19** holding the frame guard in place (one on each side) and cut off the corresponding plastic straps.


Remove the pinion guard 20.


Loosen the rear wheel nut to allow the wheel to move towards the front part of the vehicle.


Rotate the rear wheel lifting the chain in the pinion zone, so that the chain of the pinion itself is released.



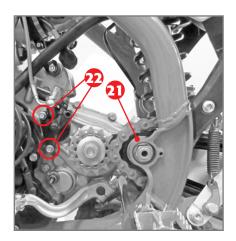

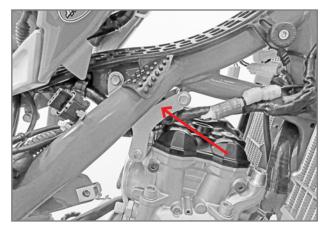

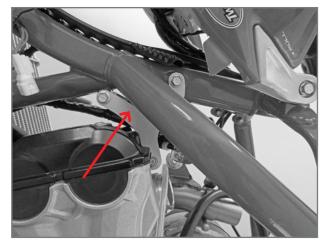

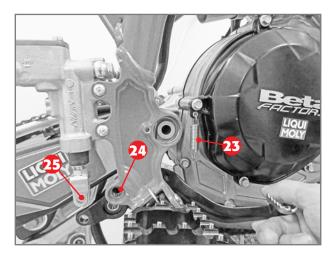

Rest the chain against the upper wedge 21.

Remove the screws **22**fixing the clutch actuator to the crankcase half.

### **ATTENTION!**


Do not activate the clutch lever with actuator decoupled from engine.


Remove the head connections.


Release and remove the brake pedal return spring 23, the bolt from the seat 24 and the pin with the cotter pin from the seat 25.





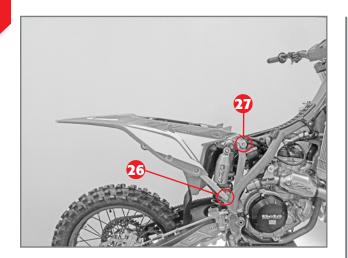

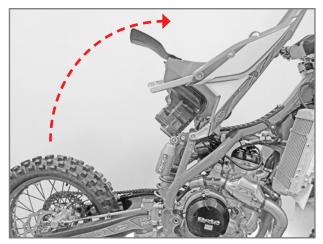

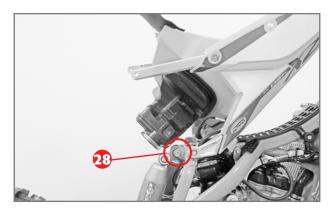



Remove the subframe lower fixing screws **26** (one on each side) and loosen the upper screws **27** (one on each side).


Rotate the entire filter box unit.


Remove the throttle body.

Remove the shock absorber upper pin 28 and the shock absorber lower pin 29.

Remove the shock absorber.



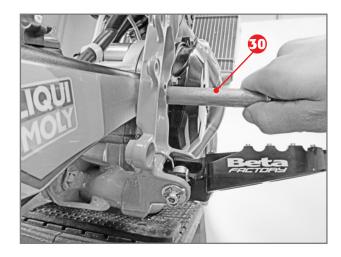

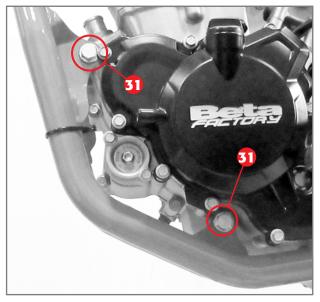


Remove the swingarm pin 30.

Move the complete swing-arm unit towards the rear.


Remove the engine pins 31.

Extract the engine from the frame and place it on the dedicated stand code 36.25132.000 with dedicated front fixing bracket code 006.14.014.00.00.


# 2 ENGINE DISASSEMBLY

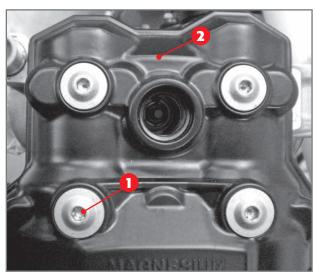

The four screws 1 of the cylinder head cover 2.

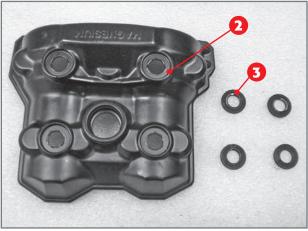

The cylinder head cover 2 and the four gaskets 3.

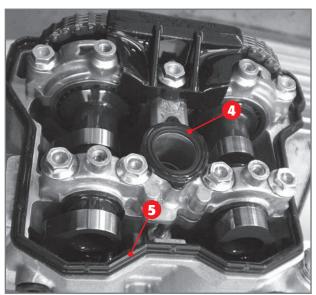

Spark plug gasket 4 and cylinder head cover gasket 5.

### 2.1 THERMAL UNIT


The thermal unit is comprised of the head, cylinder and piston.

Before removing the cylinder head, bring the piston to the TDC and block the crankshaft: proceed as shown below.


Remove the 4 screws 1, the cylinder head cover 2 as well as the 4 screw gaskets 3.

Remove the spark plug gasket 4 and the cover gasket 5.




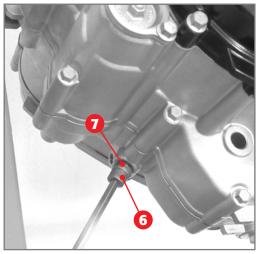

Crankshaft blocking screw 6 with copper washer 7.

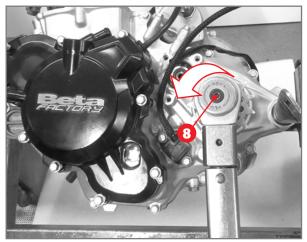

Rotation of transmission shaft.

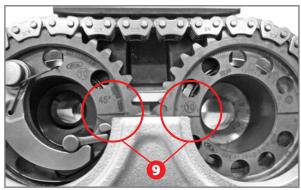

Alignment of camshafts.



Blocking the crankshaft at TDC. Please note the locking screw 6 and the movement of the transmission shaft set with the open-end spanner.

Remove the crankshaft blocking screw **6**, remove the copper washer **7** and put the screw back into its seat without tightening it all the way.

Alternatively, use the special engine locking tool (code 006140110000).


After having engaged the 5th gear, turn the transmission shaft 8 anti-clockwise - using an open-end spanner or similar - until the notches 9 on the profiles are aligned.

Turn the transmission shaft in such position and, at the same time, turn the shaft blocking screw **6** manually until it engages in the seat present on the crankshaft, preventing its rotation.


This way the crankshaft is blocked, by means of the screw **6**, at the Top Dead Centre (TDC) and now all the parts can be disassembled.





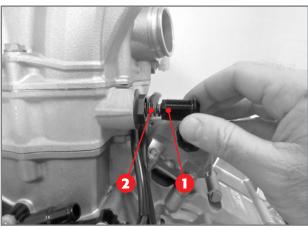

Cap and spring removal.

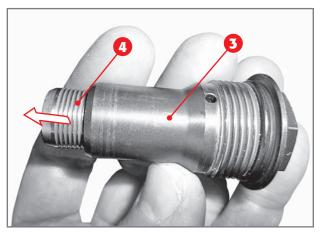

Tensioner support complete with piston.

#### **CYLINDER HEAD: DISASSEM-**2.1.1 BLING THE **MECHANICAL TENSIONER**

A chain which is not well-tensioned can cause:

- excessive vibrations of the chain which could make it skip teeth on the camshafts thus damaging the engine;
- incorrect and premature wear of the support bearings of the camshafts.


The engine is equipped with a mechanical tensioner in order to provide the chain with proper tensioning.

To remove it, proceed as follows: remove the cap 1 and the spring 2.

Fully unscrew the tensioner support 3 from the cylinder.


To remove the piston 4, just push it out from the tensioner support 3.



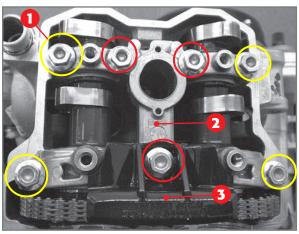


Fixing screws 1, camshaft support 2 and fixed pad 3.

The four outer screws outlined in yellow must be removed first.

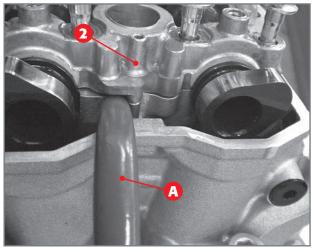

Uncoupling camshaft support 2 from cylinder head.

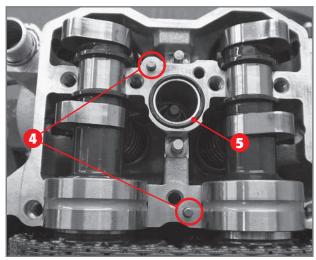

Two centring pins 4 and spark plug housing O-ring 5.

### 2.1.2 CYLINDER HEAD: DISASSEM-BLING THE CAMSHAFT SUP-PORT, FIXED PAD AND SPARK PLUG SEAT O-RING

To remove the camshafts, disassemble the camshaft support 2 and the fixed pad 3. Then loosen the seven screws 1 of the camshaft support, starting with the four outer ones (indicated in yellow in the figure) and then the inner ones. Remove the fixed pad 3.

#### ATTENTION!

Disassemble the camshafts only after having disassembled the hydraulic tensioner.


Using a plastic rod **A** or something similar, lever the head surface and the camshaft support **2** in order to lift it and remove it.

When uncoupling, pay attention to the two centring pins 4 located underneath the camshaft support.


Remove the spark plug housing sealing O-ring 5 between the cylinder head and the camshaft support.






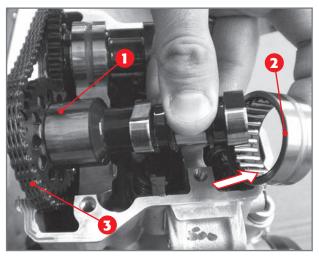

Removal of intake camshaft 1, bearing 2.

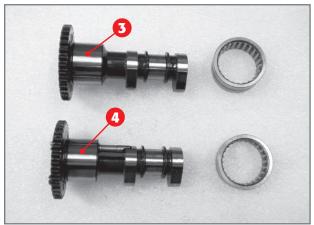

Camshafts (3 intake, 4 exhaust) with bearings.

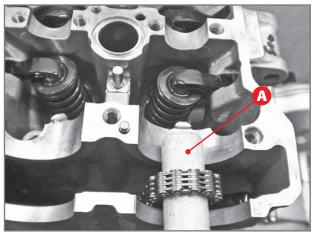

Plastic rod to support chain.

#### 2.1.3 **CYLINDER HEAD: REMOVING** THE CAMSHAFTS

Lift the intake camshaft 1, pull out the bearing 2 and remove the chain 3 from the gear on the shaft.

### ATTENTION!


The hydraulic tensioner must already have been removed in order to remove the camshafts.

In order to remove the exhaust camshaft 4, repeat the operations described for the removal of the intake camshaft.


### ATTENTION!

Make sure the chain does not fall inside the compartment dedicated to it. For this purpose, it is recommended to place a plastic rod (or the likes) A between the chain and the head.




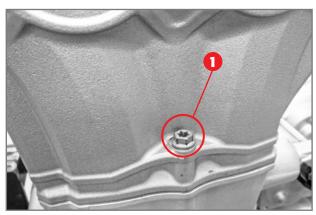

Chain-side head fixing screw.

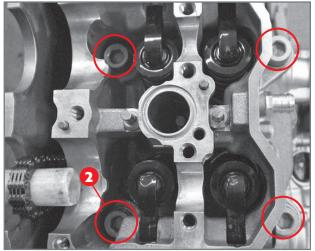

Head fixing screws 2.

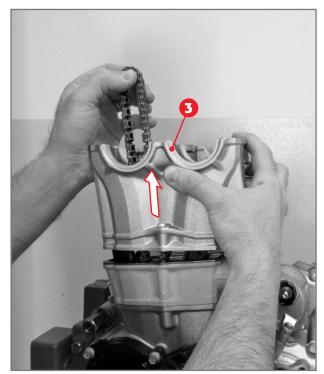

Head removal 3.

### 2.1.4 CYLINDER HEAD: UNCOU-PLING FROM THE CYLINDER

Five screws fasten the head to the cylinder. Remove the cylinder head screw 1 on the outside of the chain-side cylinder head.

Remove the four cylinder head fixing screws **2**, in a criss-cross pattern. Start with one of the two screws outside the cylinder head compartment. Then remove the respective washers.

Lift the cylinder head **3** with one hand and at the same time with the other hold the chain in tension. With the cylinder head lifted a few centimetres, drop the chain inside the compartment and pull out the head.

#### ATTENTION!


Should the chain fall inside, place it in tension before lifting the head.

### **ATTENTION!**

During lifting of the head, pay attention to the centring bushes.





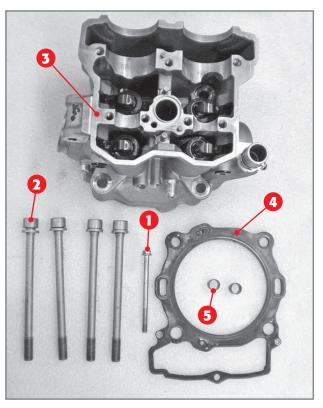


Cylinder head elements:


- 1) M6x80 screw; 2) M10x1.25 cylinder head screws, 3) Complete cylinder head; 4) Cylinder-head gasket; 5) Centring bushes.

Remove the head gasket 4 and the two centring bushes 5.




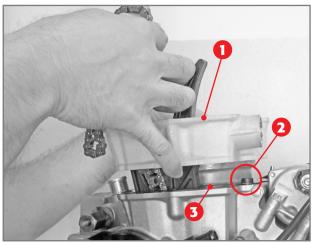


Cylinder removal.

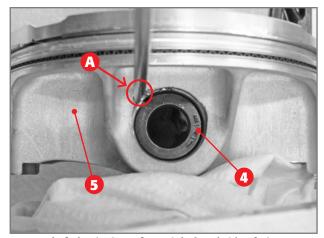

Removal of elastic ring 4 from right hand side of piston.

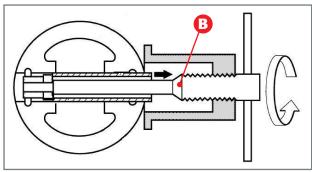

Removal of pin bolt.

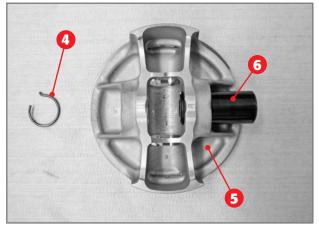

Bottom view of piston 5, elastic ring 4 and pin bolt 6.

### 2.1.5 DISASSEMBLING THE CYLIN-DER AND PISTON

Lift the cylinder 1 by a few centimetres, remove the two centring bushes 2 (both located on the chain side) to prevent them from falling inside the crankcases and continue removing the cylinder. Remove the cylinder gasket 3.

Place a clean cloth between the piston and the crankcase to keep foreign objects or simple solid residues from falling inside the base. Using a suitable tool to insert the specific seat **A**, remove the elastic ring **4** on the right hand side of the piston **5**.

#### ATTENTION!

Be careful not to drop the elastic ring inside the engine.

Remove the pin bolt using a universal extractor for pin bolts **B**.


Remove the piston and the pin bolt from the connecting rod foot.

In the figure, it is possible to see the piston 5 (bottom view), the circlip 4 and the pin bolt 6.





Removal of gear lever.

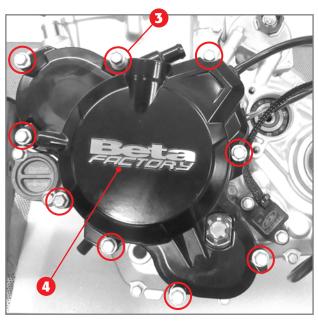

Fixing screws 3 of ignition cover 4.

#### 2.2 **DISASSEMBLING THE IGNI-**TION UNIT, TIMING CHAIN **AND PADS**


The ignition unit consists of the flywheel (or rotor), the pick-up and the stator, which is one with the flywheel cover.

#### 2.2.1 STATOR, FLYWHEEL AND PICK-**UP UNIT**

Remove the screw 1 which connects the gear lever 2 to the drive shaft.

Remove the screws 3 which fasten the flywheel cover 4 to the left crankcase half. Remove the flywheel cover and the gasket placed between the crankcase and the cover.




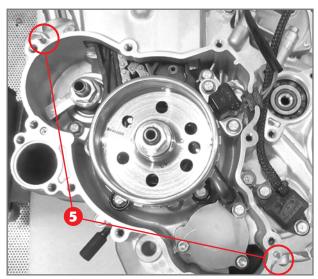

The two flywheel cover centring pins 5.



Nut 6 which fastens flywheel 7 to the crankshaft (injection version).

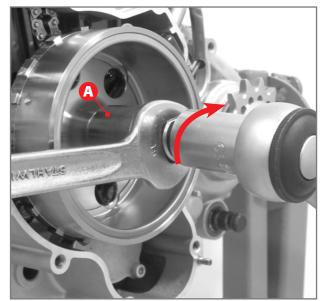

Starter flywheel removal (injection version) with special gear puller A.


Pay attention to the two centring pins **5** on the crankcase half.

Remove the tightening nut **6** which fastens the flywheel **7** to the crankshaft.


Once the nut has been unscrewed, pay attention to the special elastic washer (8 shown in the following images) placed between the nut and the flywheel.

To remove the flywheel, screw in the dedicated extractor **A** (code *049.14.000.00.00*) on the threaded part on the flywheel itself and tighten the screw on the extractor using a spanner.



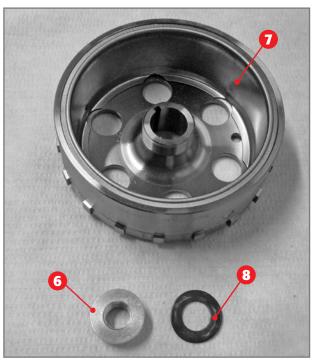


Flywheel 7, nut 6 and special washer 8.

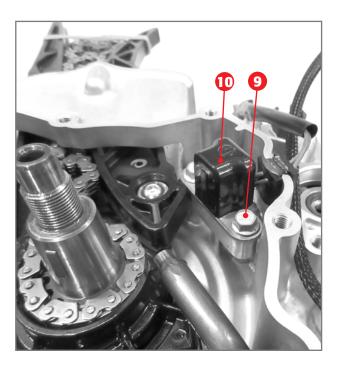


The image to the side shows the flywheel **7** (rear view), the special elastic washer **8** and the tightening nut **6**.


Remove the screws 9 and the pick-up unit 10. Remove the unit from the crankcase.



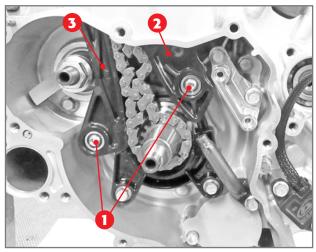

Fixing screws 1 of mobile pad 2 and fixed pad 3.

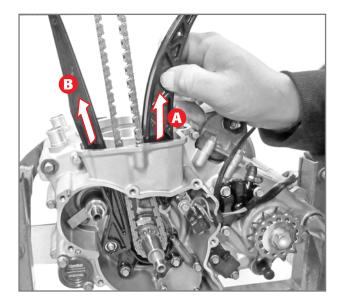

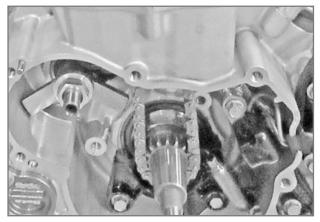

Extraction of chain pads.


## 2.2.2 TIMING CHAIN AND PADS

Remove the fixing screws 1 of the mobile pad 2 and the fixed pad 3.


Extract pad A and then pad B by pulling them up.





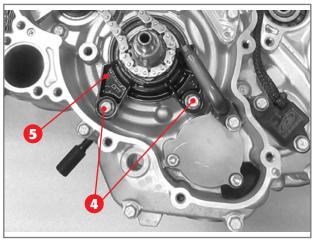

Chain guard protection and oil jet.

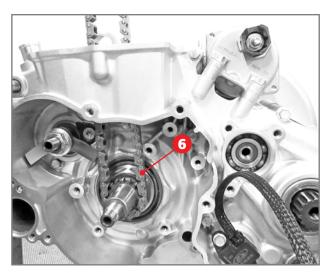


Removal of timing chain.


Remove the two screws 4 and then the chain guard 5. Pay close attention to the respective bushes while extracting the mobile and fixed pads and the timing chain.

Remove the timing chain 6, freeing it from the gear on the crankshaft, and pull it downwards.




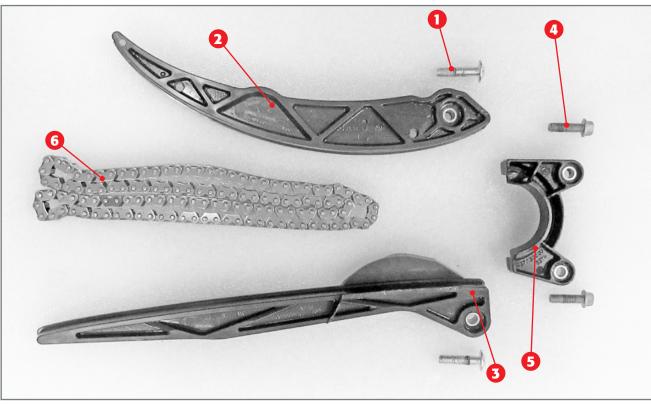

Two pad fixings screws 1; mobile pad 2; fixed pad 3; oil jet fixing screw 4; chain guard 5; timing chain 6.

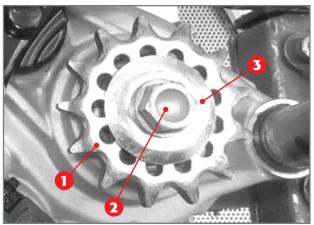

Pinion 1, screw 2 and washer 3.

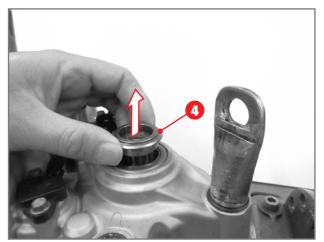


Pinion spacer 4.

### 2.3 PINION AND SPACER


In order to remove the pinion 1, loosen the screw 2 completely and take off the washer 3.

After removing the pinion, pull off the spacer 4.




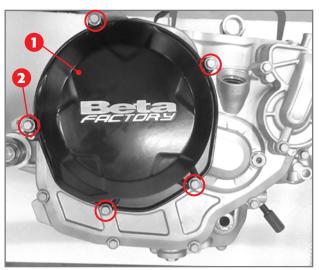

Outer clutch cover 1 and respective screws 2.

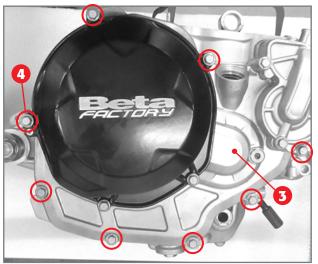

Inner clutch cover 3 and respective screws 4.

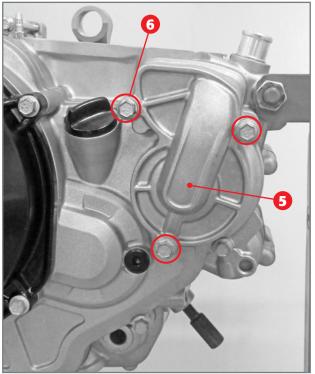


Pump cover 5 and respective screws 6.




#### **CLUTCH UNIT AND COOLANT** 2.4 **PUMP COVER**

In order to access the clutch unit, the outer clutch cover 1 must be removed by loosening the screws 2.


On the other hand, when doing a complete overhaul of the clutch unit, of the other elements housed in the outer right side of the crankcase half or of the engine, the inner clutch cover 3 must be removed by loosening the screws 4 and the water pump cover 5 loosening the screws 6.

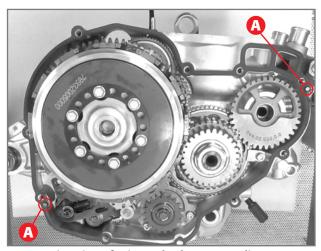

Two centring pins A for inner clutch cover coupling.

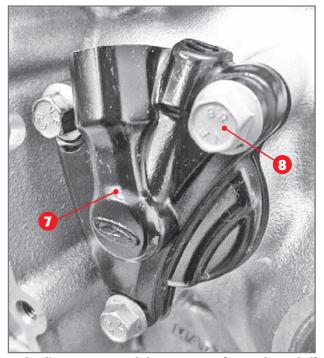

Hydraulic actuator 7 and three screws 8 for crankcase half coupling.

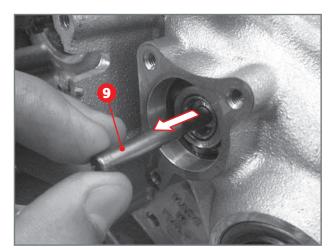


Extraction of clutch rod 9.


During disassembly, pay attention to the two reference pins **A** which are located between the right-hand half crankcase and the inner clutch cover.


If only the clutch actuator pipe was removed during the disassembly of the engine from the vehicle, remove the complete hydraulic actuator **7** from the outside left crankcase half by fully undoing the three screws **8** that secure it to the crankcase half. Remove the gasket in between the actuator and the crankcase half.


Extract the clutch control rod 9.



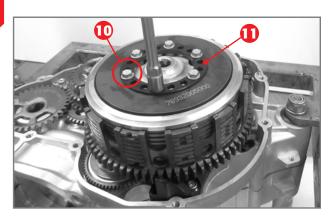

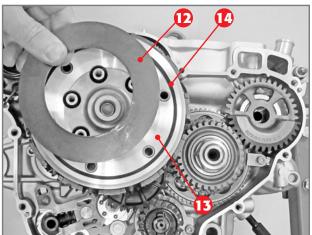

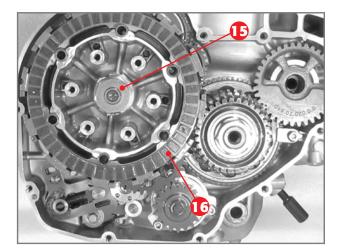

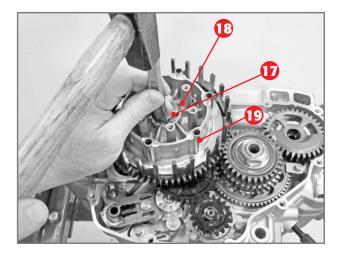

Remove the screws 10 that secure the ring 11 to the clutch drum.

Remove the Belleville washer 12, the clutch pressure cap 13 together with the ring 14.


Then remove the complete pressure plate unit 15 and the clutch disc unit 16.


In order to complete the disassembly of the clutch unit, it is necessary to open the safety washer 17 using a cutting chisel and remove the nut 18.

### ATTENTION!

Do not remove the sliding pins 19.



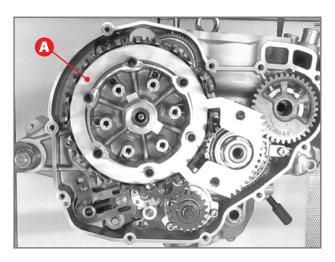

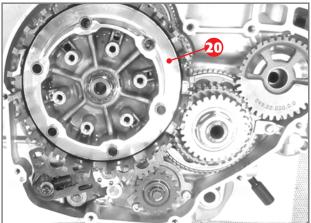


To unscrew nut **18**, the clutch drum must be blocked with the appropriate tool **A** (cod. *037.14.002.50.00*). Then remove the nut and relevant safety washer.

### ATTENTION!

Do not use the pneumatic gun.

Remove the clutch drum 20 complete with sliding pins and then remove the shim washer 21, the clutch case 22, the roller cage 23 and the centre bearing 24.

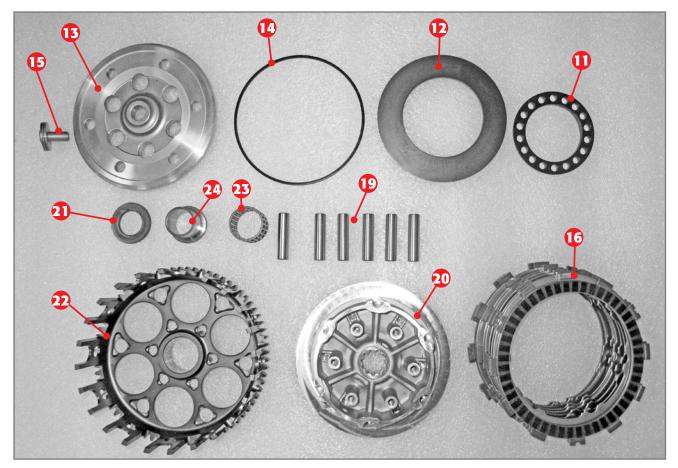

11 Ring, 12 Spring washer, 13 Pressure plate, 14 Ring, 15 Thrust bearing, 16 Clutch disc unit, 19 Slip pins, 20 Clutch drum, 21 Needle bearing, 22 Slew bearing, 23 Spacer washer, 24 Clutch bell.





#### **ENGINE LUBRICATION CIRCUIT:**


- 1) High-pressure pump;
- 2) Paper oil filter;
- 3) Crank mechanism;
- 4) Piston oil jets;
- 5) Hydraulic tensioner;
- 6) Cylinder head oil jets;
- 7) High-pressure valve;
- 8) Internal filter;
- 9) Low-pressure pump;
- 10) By-pass valve;
- 11) Wire metal filter;
- A) Ignition unit compartment;
- B) Crank mechanism compartment.

#### 2.5 **ENGINE LUBRICATION CIRCUIT**

The high-pressure pump (or delivery) 1 - with less displacement - sends the oil purified by the paper filter 2 to the crank mechanism 3, to the piston oil jets 4, to the tensioner 5 and to the cylinder head jets and camshafts\* 6. The valve 7 controls the pressure.


When oil has lubricated the cylinder head and has seeped through the tensioner, it flows along the timing chain to the ignition unit compartment A. When oil has lubricated the crank mechanism and the pistoncylinder coupling, it goes to the crank mechanism compartment B from which it is sucked by an intake pump (or recovery) 9 - with higher displacement -, passing through the oil filter 8 and sent to the ignition unit compartment A. There it is sucked once again by the pump 1 after being filtered through the wire metal filter 11.

The valve 10 controls the pressure between the external casing on the ignition unit side and the crank mechanism compartment.

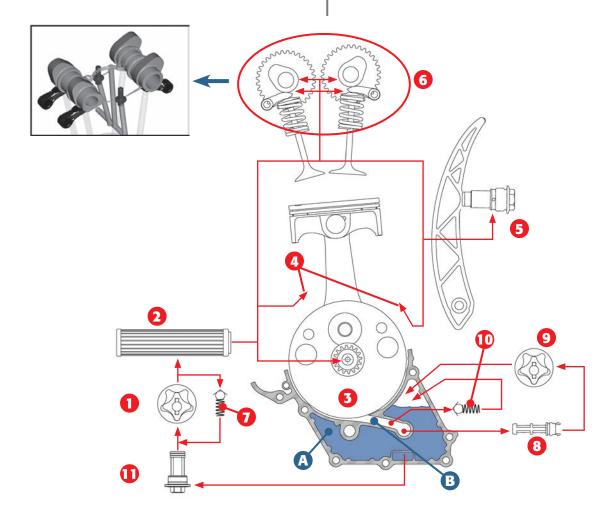


<sup>\*</sup> Part of the lubricant sent to the cylinder head is used for the hydrodynamic support of the camshafts.



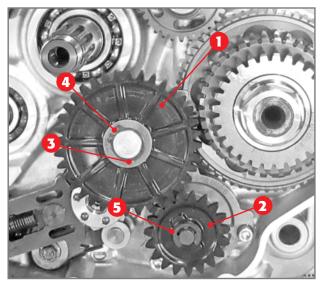


Gear unit for oil pump control.

- 1) Gear meshing with clutch gear;
- 2) Oil pumps control gear;
- 3) Circlip;
- 4) Thrust washers;
- 5) Benzing ring

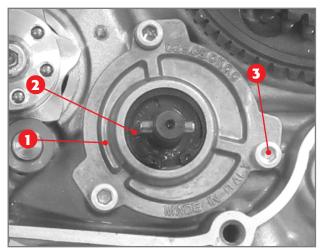

Disassembly of high-pressure pump cover.

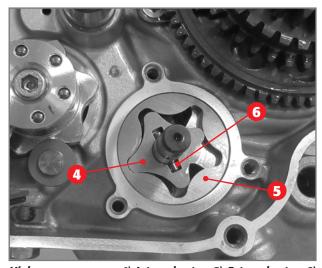

High-pressure pump. 4) Internal rotor; 5) External rotor; 6) Roller.

### 2.5.1 OIL PUMPS CONTROL GEARS

The two oil pumps are controlled by a gear unit driven by the clutch gear.

In detail, the gear 1 engages with the clutch case, and 2 is the oil pump control gear.

To dismantle the gear 1, remove the circlip 3 and thrust washers 4 (one below the gear).

To disassemble the gear **2** simply remove the Benzing ring**5**.


### 2.5.2 HIGH-PRESSURE OIL PUMP

The high-pressure pump, located in the external right crankcase half, is enclosed under the cover 1 which can be disassembled by removing the roller 2 and the screws 3.


After having removed the cover, extract the internal rotor **4**, the external rotor **5** and the roller **6**.






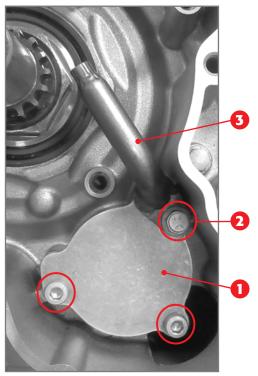

Cover and screws of low-pressure pump.

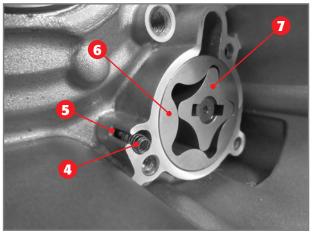

Low-pressure oil pump and by-pass valve.

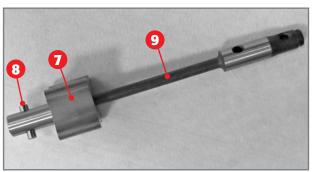

Internal rotor 6, roller 7 and drive shaft 8.

#### INTAKE OIL PUMP AND BY-2.5.3 **PASS VALVE**


The intake pump and the one-way valve are in the left crankcase half (on the outside) inside the ignition unit compartment.

They are enclosed under the cover 1, which is removed by removing the screws 2 and the jet 3.

Extract the one-way valve consisting of the spring 4 and the ball 5.


Then extract the external rotor 6 and the internal rotor 7 together with the roller 8 and the drive shaft 9.



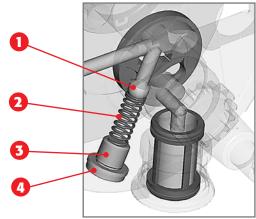


Pressure control valve layout.



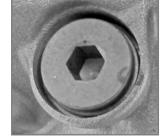


Rivet on pressure regulator.

Pressure regulator.

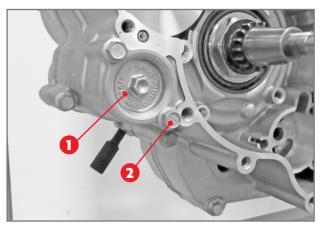

Paper oil filter cap 1 and relative fixing screws 2.

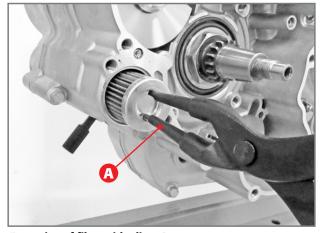

Extraction of filter with pliers A.

# 2.5.4 OIL PRESSURE CONTROL VALVE

The pressure control valve is located in the bottom of the right-hand side crankcase near the motor oil drain plug.

The valve consists of the ball 1 and the spring 2 kept in place by the screw 3 and washer 4. To disassemble, simply remove the protection rivet with a 6mm drill tip.

## ATTENTION!

Protect the mechanical parts from any shavings.

In order to disassemble the valve, remove the screw, pull out the washer, the spring and the ball.


## 2.5.5 PAPER OIL FILTER

In order to extract the paper oil filter, remove the cover 1 by loosening the two screws 2 completely. Once the cover has been removed, use a pair of opening pliers A to extract the filter.

While extracting the cover, be careful of the specific O-ring applied onto the cover.






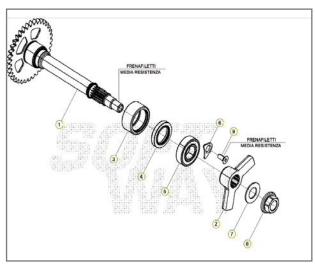

Exploded view of countershaft.

- 1) Shaft;
- 2) Counterweight;
- 7) Elastic washer;
- 8) M12x1 nut.

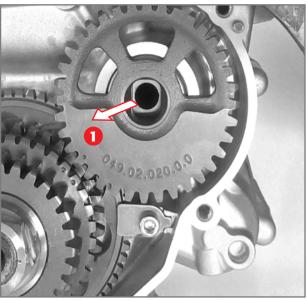

Extraction of countershaft.

#### 2.6 **COUNTERSHAFT**

The countershaft has the task of balancing a part of the inertial forces produced by the crank mechanism. The countershaft is mainly made up of the shaft 1 and counterweight 2. The elastic washer 7 and nut 8 have the task of assuring coupling of the complete shaft to the base.


#### ATTENTION!

Do not use the pneumatic gun.


In order to disassemble the shaft, remove the nut 8 which can be accessed through the ignition unit compartment. Extract the elastic washer 7 and the counterweight.

Pull the countershaft out through the right-hand side crankcase 1.




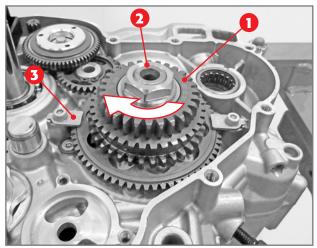

Primary gear 1 and relative nut 2.

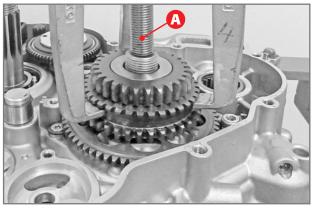

Extraction of primary gear with appropriate extractor A.

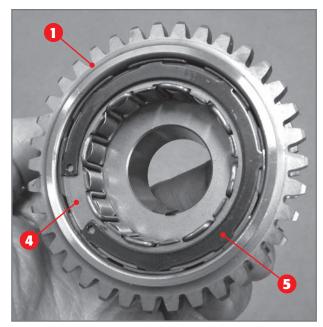

Primary gear 1, complete with free wheel 2 and specific circlip 3.

## 2.7 PRIMARY GEAR

The primary gear 1, located in the right crankcase half, is fastened to the crankshaft.

In order to disassemble it, remove the nut 2 which must first be previously heated using a blow-dryer or similar instrument.

#### ATTENTION!

To be unscrewed, the nut 1 must be rotated clockwise.

#### Note

It is recommended to previously remove the safety stops from 3in order to prevent deterioration while disassembling the gear 1.

Extract the primary gear using the relevant extractor **A**. (code *006140150000*)

Notice that the primary gear houses the free wheel device 4 inside it, which can be removed by taking out the circlip 5.







Remove the Woodruff key **6**.




- EXPLODED VIEW OF ELECTRIC KICKSTART.
  1) Starter motor;
  - 4) Torque limiter;
  - 7) Idler wheel;
- 9) Ignition gear;
- 10) Roller bearing HK2516;
- 11) Free wheel.

## 2.8 ELECTRIC IGNITION

Electric ignition can be achieved by means of the starter motor 1. The starter motor engages with the gearwheel 4, which acts as a torque limiter.


The gearwheel 4 (torque limiter) transmits motion to the idler wheel 7, which will then engage with the starter gear 9.

The roller bearing 10 supports the starter wheel 9, while the free wheel 11 is internally engaged on the starter wheel 9 and externally on the primary gear, thus allowing it, depending on rotation direction, to pull the crankshaft.

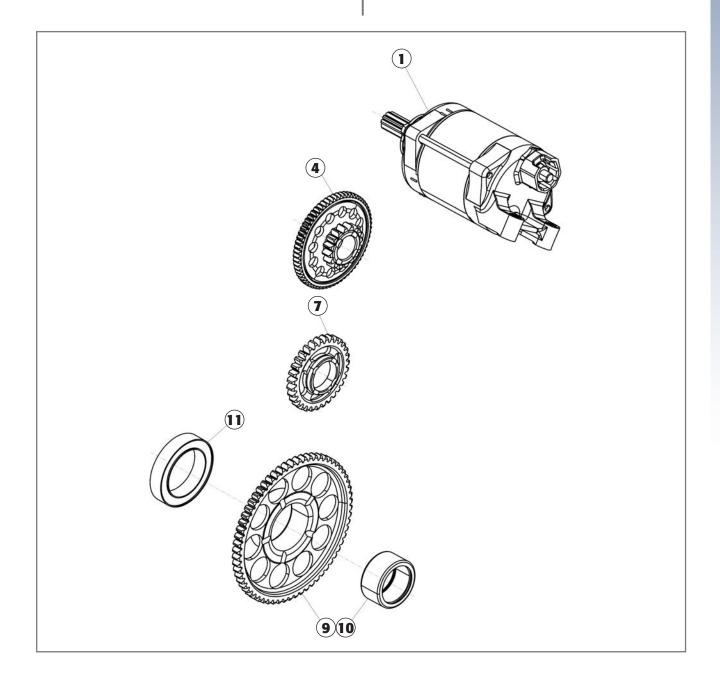







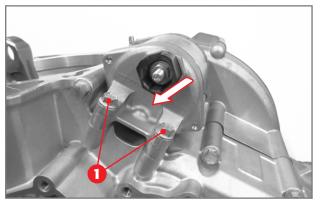


Screws 1 fixing the starter motor to the crankcase.

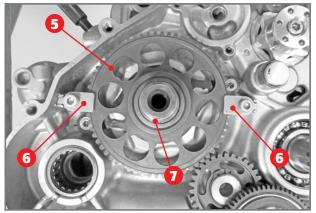

Removal of pin 6.

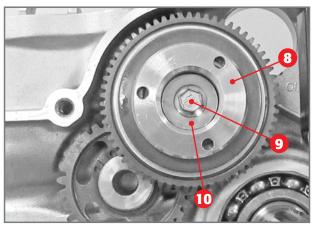

Torque limiter 9, screw 8 and washer 10.

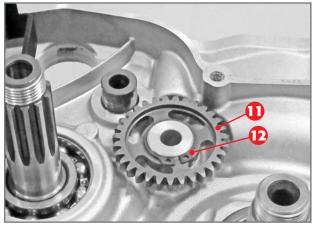

Idler wheel 11 of electrical kickstarter device.

## 2.8.1 ELECTRIC KICKSTART UNIT


Remove the two screws 1 which fasten the starter motor to the crankcase and pull out the starter motor.

To extract the kickstart gear 5, it is necessary to disassemble the primary gear (see par. 2.7), the safety stops6 and the key 7, unless this operation has already been carried out as instructed in par. 2.7. The kickstart gear is pulled out manually.


In order to disassemble the torque limiter **8**, completely loosen the screw **9** which fastens the torque limiter to the crankcase. Pull out the washer **10** together with the limiter itself.

In order to remove the idler wheel 11, just remove the circlip 12 and pull out the gear.




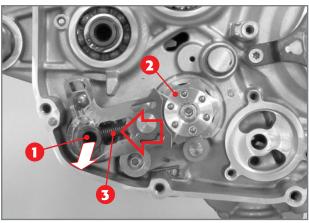


Disassembly of gear shaft.

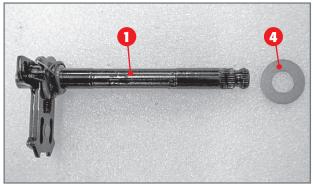

Gearshift with washer.

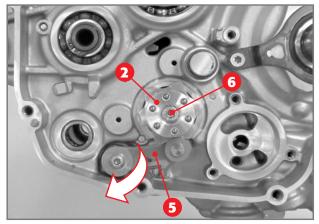

Disassembly of stop cam.

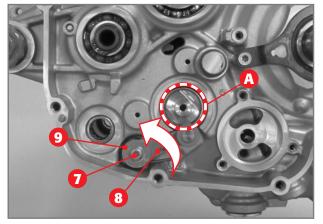

Disassembly of cam stop lever.

#### 2.9 EXTERNAL GEARSHIFT UNIT

The external gearshift consists of the drive shaft 1 on which the movable and fixed pawls are applied. The fixed pawl is the guide of the movable pawl, which has the task of engaging the stop cam 2. In its turn, this is fastened to the internal gearshift and is kept in the fixed position by the cam stop lever.


In order to disassemble the drive shaft, just keep the movable pawl return spring 3 compressed and extract the shaft together with the specific washer 4.

In order to disassemble the stop cam 2, keep the cam stop lever moved 5, loosen the screw 6 and pull out the stop cam.


In order to disassemble the stop lever, loosen the screw 7 enough to allow the lever to move axially and go over the cylinder segment A of the desmodromic device. Bring the return spring 8 to the rest position and remove the screw, the washer 9, the spring together with the spacer (not shown in the image) and finally the cam stop lever.





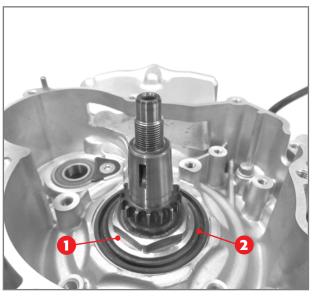

Crankshaft fixing nut B.

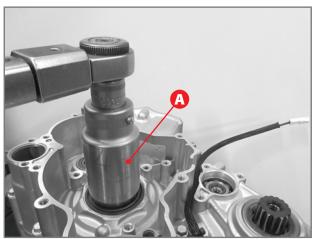

Removal of crankshaft blocking nut with special socket wrench A.

#### 2.10 CRANKSHAFT, **GEARBOX UNIT AND INTERNAL GEAR-**

To access the crankshaft, gearbox unit and internal gearshift, the left and right crankcases must be detached. Below are the required instructions.


#### **NUT ON LEFT SIDE OF** 2.10.1 **CRANKSHAFT**

In order to loosen the nut 1 on the left-hand side of the crankshaft, heat it with a blow-dryer or similar instrument. Upon completion of this operation, loosen the nut using the special socket wrench A (code 006140020000) and remove it.


#### ATTENTION!

When reassembling, the oil seal 2 must be replaced as the heating required for dismantling will damage it.



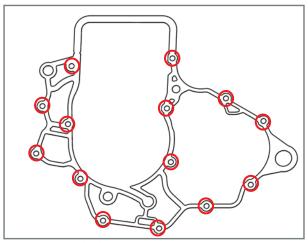


Fixing screws of left side casing.

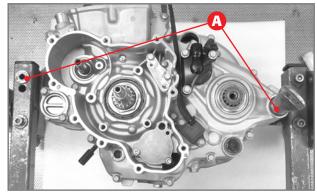

Two screws A fastening the engine to the support stand.



Disassembly of crankcase.

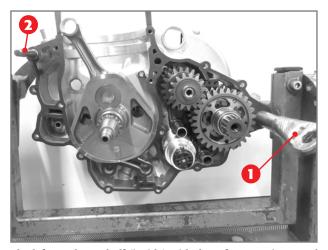

The left crankcase half (inside) with the reference pins 1 and 2.

## 2.10.2 OPENING THE CRANKCASE

Remove the screws as shown in the figure.

Loosen the two screws **A** which fasten the engine to the support stand.


Hit the left crankcase half gently with a rubber or plastic hammer until it detaches from the right crankcase half. Remove the two screws blocking the engine to the equipment and disassemble the crankcase manually.

## ATTENTION!


The gearbox unit and the crankshaft must remain inside the right crankcase half.

Remove the back 1 and front reference bushes 2 to position the crankcase correctly. Remove the gasket between the two half-casings.




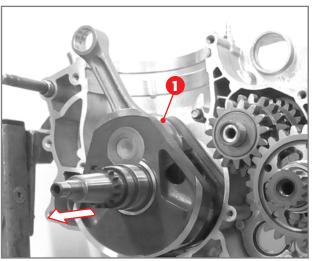

Extract the forks together with the drive bushes.

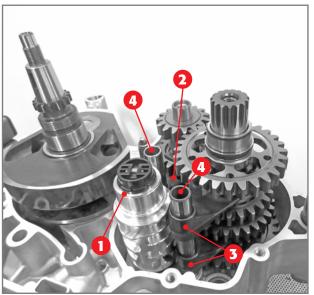

Removal of fork support pins 4.

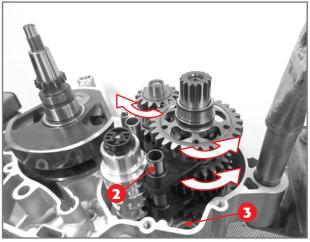

Disengaging the drive forks from the desmodromic device.

#### 2.10.3 **CRANKSHAFT**

Remove the crankshaft fixing screw.

The crankshaft 1 can be pulled out manually. Should there be resistance, tap the right end of the crankshaft lightly with a plastic or rubber hammer.

#### 2.10.4 INTERNAL GEARSHIFT UNIT AND COMPLETE GEARBOX

The internal gearshift unit is made up of the desmodromic device 1 on which the fork 2 and two forks 3 are engaged. The forks, supported by the pins 4, drive the sliding wheels of the gearbox, allowing the desired ratio to be engaged. The desmodromic device is controlled by the stop cam present in the external gearshift unit (par. 2.10)


Extract the two pins 4 manually so that the forks can be released and removed.

Rotate the forks 3 driving the sliding wheels on the secondary shaft anticlockwise.


Execute the same operation, although in reverse, on the fork2 which drives the sliding gear on the primary unit, to release it from the desmodromic control.

Extract the desmodromic device.




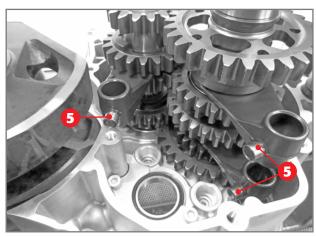

Extraction of forks from gearbox unit.

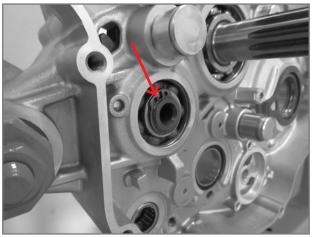

Removal of the circlip.

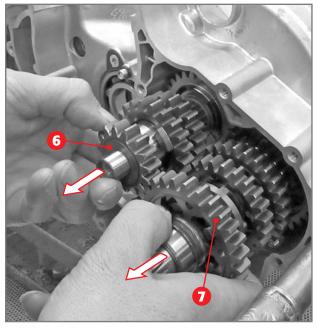

Extraction of complete gearbox unit: 6 primary unit, 7 secondary unit.

Extract the forks together with the guide bushes 5.


## ATTENTION!


Ensure that the circlip on the secondary shaft has been removed (par. 2.9).

Extract the whole gearbox unit consisting of primary 6 and secondary 7 unit.



Safety devices present on the inside of the right crankcase

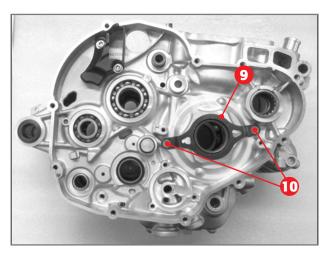

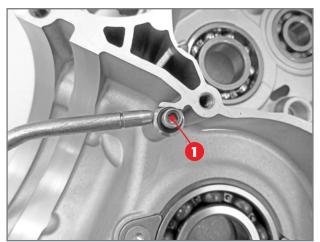

Location of piston oil jets.

#### **DISASSEMBLY OF PARTS** 2.11 FROM CRANKCASES

Once the crankcases have been detached, it is necessary to remove the various components attached to it.

The correct positioning of some bearings applied to the crankcases is ensured by locking devices such as plates or simple screws. In order to disassembly these bearings, the safety devices must be disassembled as well.

#### 2.11.1 **RIGHT-HAND HALF CRANKCASE**

On the inside, the plates 1 are those which assure the correct positioning of the support bearing of the crankshaft. All you need to do is remove the two screws 2 to disassemble them.

The plate **3** is the one relating to the main shaft support bearing of the gearbox. It can be disassembled by removing screw 4.

The plate 5 holds the bearing of the secondary shaft of the gearbox in place. It can be disassembled by removing screw 6.

The screws 8 hold the retaining plate 7 of the desmodromic device support bearing in place.

On the outside the oil seal blocking plate 9 is applied. It can be removed by taking off the two screws 10.


#### 2.12.1.1 Piston oil jets

In order to allow the check and cleaning of part of the lubrication circuit, it is advisable to blow compressed air into the piston oil jets 1.


The other oil jet is located on the left casing (par. 2.12.3).






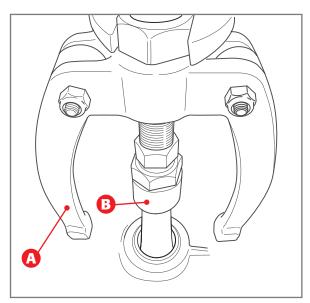

Extraction of countershaft bearing.

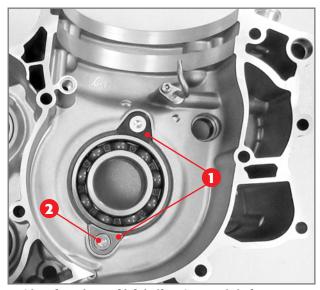

Inside safety plates of left half-casing crankshaft.

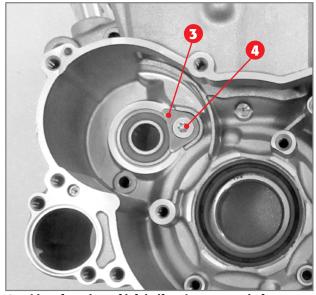

Outside safety plate of left half-casing countershaft.

# 2.11.1.2 Extraction of the countershaft support bearing

To extract the countershaft bearing, use extractor **A** (code 3625081) together with extractor **B** (code 006140160000). It is recommended to place two aluminium plates between the legs of the extractor and the crankcase half.


## 2.11.2 LEFT-HAND HALF CRANK-CASE

On the left crankcase half, three safety plates are present, two of which are applied internally and one is external.

The plates 1 on the inside are the ones relative to the crankshaft support bearing of the gearbox. They can be disassembled by removing the two screws 2.


The plate **3** is the one relative to the bearing which supports the countershaft. It can be disassembled by removing the screw **4**.

For checking and cleaning part of the lubrication circuit, it is advised to use compressed air in the piston 5 oil jet.

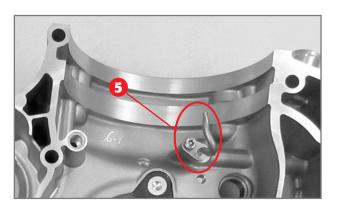






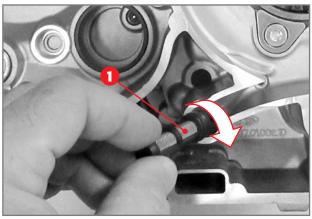

Disassembly of inner filter.

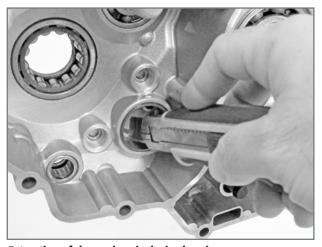

Extraction of desmodromic device bearing.

#### **Inner oil filter** 2.11.2.1

The inner oil filter 1 must be pulled out from the inside of the left crankcase. Its removal can be aided by using a soft pin to push it from the outside towards the inside, tapping with a small hammer.

#### **Extraction of the desmodromic** 2.11.2.2 device bearing

Simply use a cutter to remove the bearing dedicated to the device on the inside left crankcase half. Should it appear scratched or damaged, it must be replaced.



# **3 ENGINE ASSEMBLY AND CHECKS**

Before reassembling the engine, a series of important controls must be carried out to ensure correct functioning of the engine. The bearings must be replaced if there is any play or jamming during rotation. The bushing or the plain shaft bearings must be replaced if worn, cracked or scratched.

It is however recommended to refer to the periodical maintenance table.

In order to insert the bearings in the crankcase halves, bring the crankcase halves to a temperature of 150°C and keep them at that temperature for 20 minutes. Place said crankcase halves on a large surface where their whole seal surface can rest. When the bearings cool down, they drop into their seats on their own.





#### DETAILED VIEW OF CRANKCASE UNIT.

- 1) Engine crankcase;
- 4) Crankcase gasket;
- 5) Grub screw;
- 6) Grub screw;
- 7) 17x21x19 bush;
- 8) Crankcase oil filter
- 9) 8x1.5 ring;
- 10) 15x18x12.5 bush;
- 11) Water connector;
- 15) Complete oil jet;
- 16) 6x1.5 O-ring;
- 17) Jet;
- 18) Jet;
- 19) 4x15.8 pin;
- 20) 4.0x9.8 pin;
- 22) Cap;
- 23) Plate;
- 24) M5x10 screw;
- 30) 5x12 screw;
- 31) Bush;
- 32) Conveyor;
- 37) Copper washer;
- 38) TDC screw;
- 44) Jet;
- 45) M4x10 screw;
- 46) 3.5x1.5 O-ring;
- 47) Connector.

#### 3.1 HALF CRANKCASE


The crankcase halves have some parts that require care, and their integrity and condition must be checked. The checks and assembly operations of the individual parts coupled to the crankcases are described below. Clean the threading and oil passages thoroughly using a degreaser and compressed air.

#### ATTENTION!

It is absolutely necessary to replace the crankshaft oil seals present on the outside of the left and right crankcase halves. This is due to the extreme heating they undergo when being disassembled.

In general, the crankcase halves must be replaced when:

- The oil pump guards have scratches or signs of meshing (par. 2.11);
- in case they do not fit into their seats, once the new bearings are inserted and the crankcase half is left to cool off.

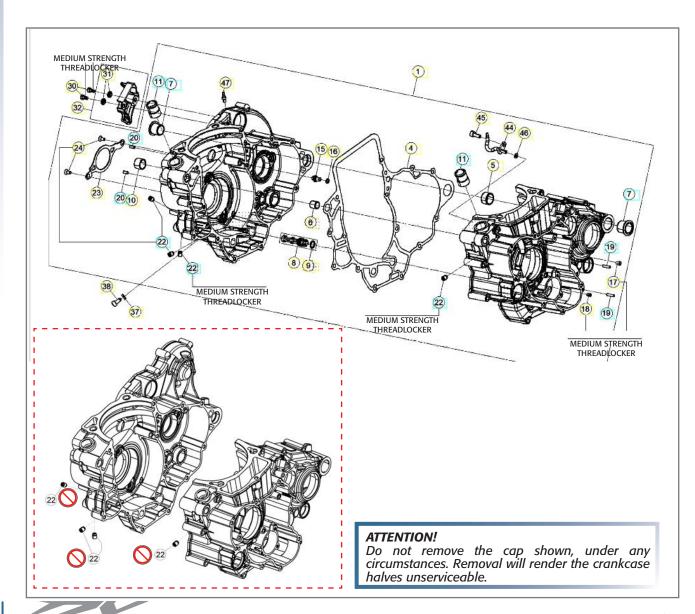




## 3.1.1 EXTERNAL RIGHT SIDE

Pull out the crankshaft oil seal 1 and replace it. Check that the oil seal fixing plate 2 is not bent. If so, have it replaced.

Check the integrity of the oil incline **3**.

The table below contains indications for fixing the screws of the above-mentioned elements.


	Screw size		where the door	wind a colonia de conse
Screw number	Threading diameter [mm]	Threading length [mm]	Threadlocker application	Tightening torque [Nm]
5	M5	10	Medium-strength threadlocker	8
6	M5	12	Medium-strength threadlocker	4

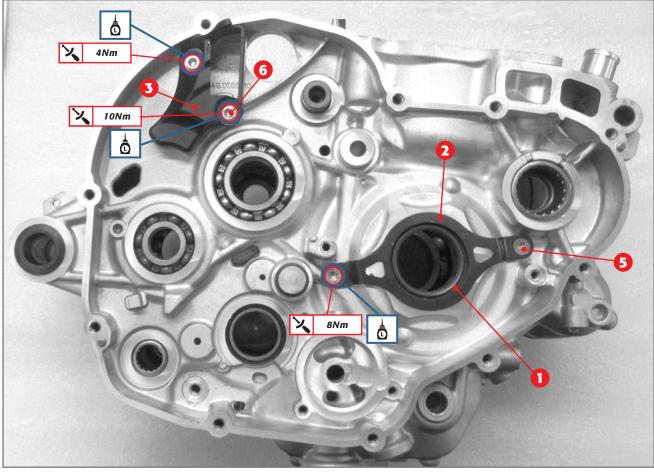


Elements present on external right crankcase half.






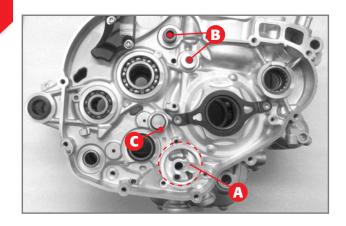

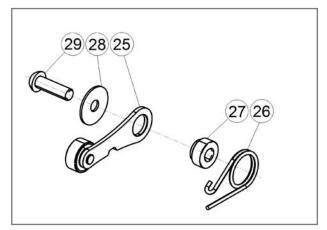

**EXPLODED VIEW OF STOPPING DEVICE** 

- 25) Lever; 26) Spring;
- 27) Spacer;
- 28) 6x20x1 washer;
- 29) M6x20 screw

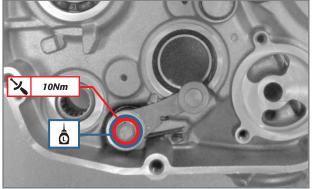

Stopping device coupled with the crankcase half.

The crankcase half will definitely need to be replaced


- the oil pump compartment **A** shows deep scratches or meshing signs;
- the two pins **B** for the idler wheel and torque limiter show traces of abnormal wear or meshing;
- the bushing C of the idle gear of the oil pump control is damaged.

Apply the gear stopping device as follows.


Keeping the tightener on the lever 25 facing towards the crankcase half, apply the spacer 27 onto it, by inserting the smaller diameter segment in the lever. Apply the spring 26 so that the hook inserts into the groove present on the lever 25 and then apply the washer 28 and the M6x20 screw 29, whose threading must be spread with medium strength threadlocker.

Apply the entire device on the crankcase half so that the straight segment of the spring rests on the edge of the engine carter half. Tighten the screw to the indicated torque.




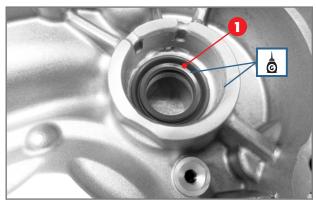

Application of oil seal 1.

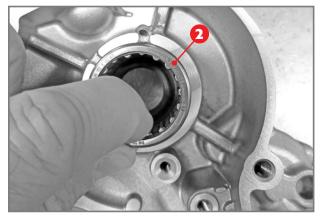

Insertion of bearing 2.

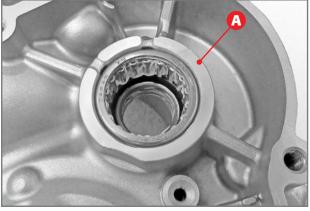

Oil seal and bearing unit coupled to the left crankcase half.

# 3.1.1.1 Insertion of the oil seal and countershaft support bearing

In order to insert the oil seal and countershaft support bearing, proceed as follows.

Grease the oil seal and bearing housing. Insert the new oil seal 1 greasing the inside of it.

Apply the new bearing **2** paying close attention that it is aligned with its seat.

Use a press or similar instrument to push the bearing until the outside surface is flush with the surface **A**.






#### 3.1.2 **INTERNAL RIGHT SIDE**

Check the flatness of the crankshaft 2 bearing retaining plates 1, of the main shaft bearing retaining plate 3, of the secondary shaft bearing retaining plate, and 4 of the desmodromic device bearing retaining plate. The table below carries the indications for application of the fixing screws of these plates and for fixing the desmodromic device support bearing.

Screw number	Screw size		Threadlasker	Tinktonio atomora
	Threading diameter [mm]	Threading length [mm]	Threadlocker application	Tightening torque [Nm]
5	M6	12	Medium-strength threadlocker	8
6	M6	12	Medium-strength threadlocker	8
7	M6	12	Medium-strength threadlocker	8
8	M5	10	Medium-strength threadlocker	4

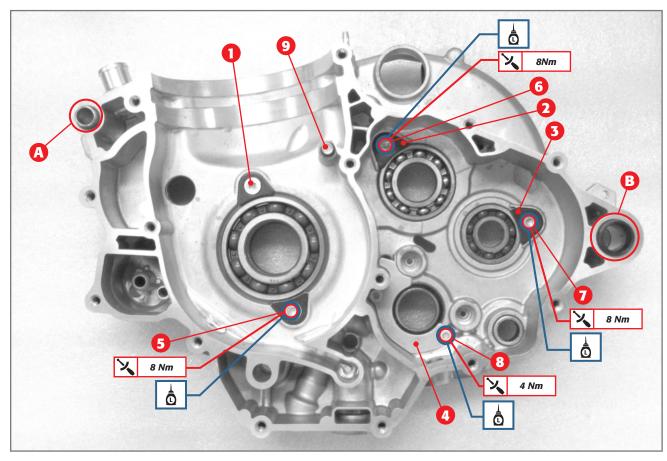


Elements present in the internal right side carter.


Insert the two reference bushes A and B in their respective housings.





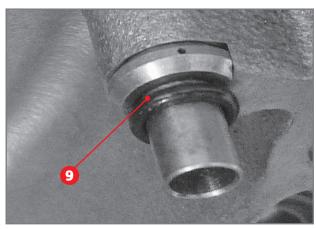

Piston oil jet O-ring and detail of through hole.

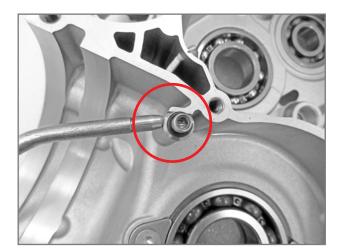

Make sure the piston oil jets are positioned correctly and free of obstructions.

Make sure that O-ring **9** is correctly positioned by checking its state. Should the O-rings have cracks or deformations, they must be replaced.

**Note:** blow compressed air into the oil jet on the outlet side. So that the internal filter can be cleared from any dirt





#### 3.1.3 **EXTERNAL LEFT SIDE**


Make sure that oil jets 1 and 2 are not obstructed. In case they have been replaced, couple them to the crankcase using a small amount of medium strength threadlocker, being careful that the threadlocker does not block the holes. Then tighten them all the way.

Make sure that the oil passage A is well clean, and the countershaft bearing retaining plate 3 is not deformed. If it is, replace it.

The table below carries the indications for application of the screw 4.

The crankcase half will definitely have to be replaced if the oil pump compartment B has deep scratches or signs of meshing.


Screw number	Screw size		Threadlocker	Tinktonio atomora
	Threading diameter [mm]	Threading length [mm]	application	Tightening torque [Nm]
4	M6	12	Medium-strength threadlocker	8

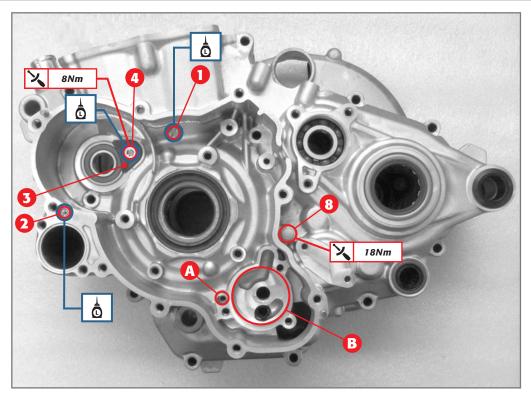

Elements present on external left crankcase half.





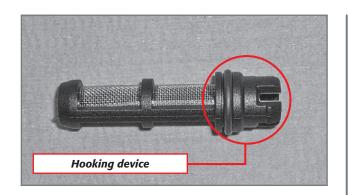

## 3.1.4 INTERNAL LEFT SIDE

Clean the inner filter thoroughly and check the integrity both of the wire metal and the hooking device. Should the filter be deteriorated in any of these parts, replace it.


Check the state of the two crankshaft bearing retaining plates 1. If they are deformed, have them replaced. The table below carries the indications for application of the screws.

Insert the inner filter **3**in its seat **A** present in the crankcase and push it all the way down until you hear the hooking device click.

Apply the oil jet 4 after application of O-ring 5.

Apply the screw **6** after application of medium resistance threadlocker. Tighten to the specified torque.


Screw number	Screw size		Threadlasker	Tiektonine tonova
	Threading diameter [mm]	Threading length [mm]	Threadlocker application	Tightening torque [Nm]
2	M6	12	Medium-strength threadlocker	8
6	M4	10	Medium-strength threadlocker	6

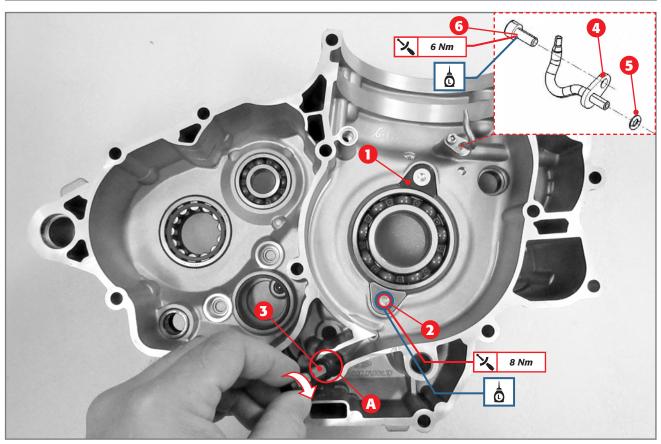

Elements present on inside left crankcase half.





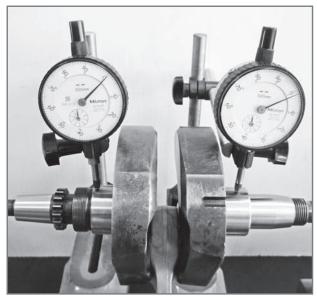

Deflection/Off-centring of crankshaft.



Connecting rod axial play.



Connecting rod radial play.



## 3.2 CHECKING THE CONNECT-ING ROD AND MOTOR SHAFT

After having checked the state of wear of the coupling surfaces, check the offset of the half shaft axes by placing the crankshaft in between two tailstocks or similar instrument. Control the maximum measurement variation during a complete turn, using comparators positioned on the coupling surfaces with the crankshaft bearings.

Allowed limit value: 0.03mm

Check the axial play between the connecting rod head and the half shafts.

Recommended play: 0.42÷0.65mm

Check the radial play of the connecting rod head bearing by placing the crankshaft on a stable support. Then position a comparator in axis with the connecting rod, and pressing lightly in the direction of the crank lever axis, check that the measurement detected does not exceed the service limit.


## Maximum play: 0.04mm

If play is greater, replace the connecting rod.


Make sure that the chain control gear is free of chipping or signs of abnormal wear. Replace the crankshaft should it be deteriorated.

The distance between the two opposite sides of the half shafts must be:

64 mm ±0.05 (450 cc)

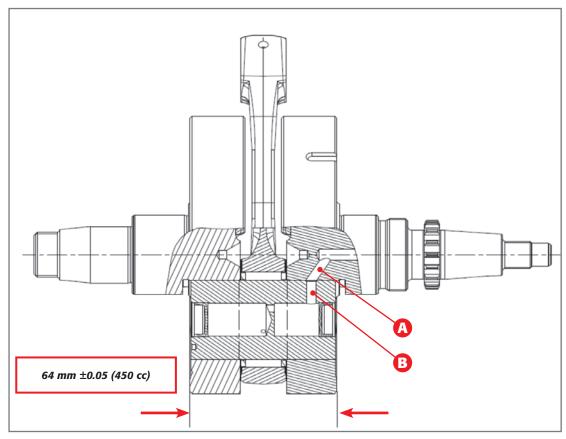

Crankshaft oil passages.

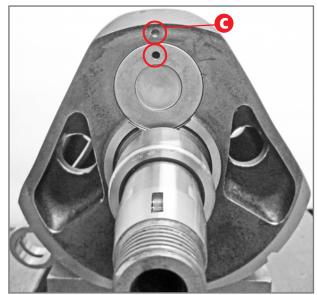

Half shaft and crank lever pin bolt references C.

If the two half shafts are detached for replacement of the connecting rod, pay close attention when repositioning the crank lever with respect to the half shafts. The holes for oil passage **A** on the half shaft must coincide with those present on the crank lever **B**. Incorrect positioning would cause an irregular oil flow rate thus damaging the connecting rod head bearing. The references **C**, which must be aligned, are found on the half shaft on the flywheel side and on the crank lever of the pin bolt.







Bore meter verification of inside diameter of connecting rod foot.


Use a bore meter to check the inside diameter of the connecting rod foot which must not exceed the following service limit:

## 19.04 mm (450 cc)

Remember that the measurement must be made placing the axis of the feeler in parallel with the axis of the connecting rod.

#### 3.3 **COMPLETE CRANKSHAFT ASSEMBLY**

When all the aforementioned controls have been carried out and the worn parts replaced, grease the crankshaft oil seal on the right crankcase half and couple the crankshaft to the left crankcase half. Keep the gear present on the crankshaft towards the left. In order to carry out this operation, you must just push the shaft axially towards the crankcase.

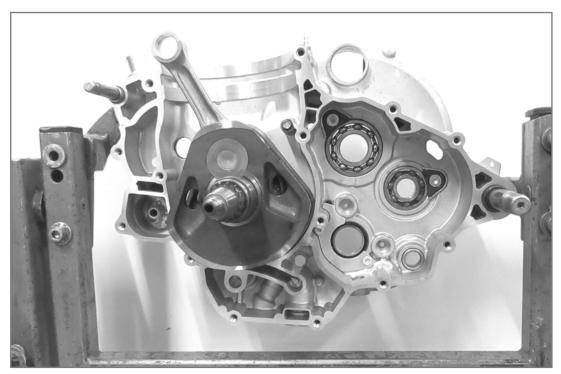


Insertion of crankshaft in the right crankcase: note the position of the gear.





Checking wear of forks and gearwheels

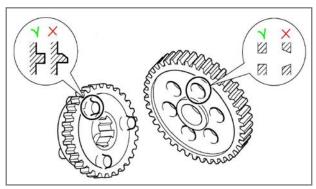

Check gear couplings

# 3.4 GEARBOX UNIT: CHECKS AND REASSEMBLY

The gearbox unit consists of the gearshift and of the gearbox proper. The gearshift in its turn is divided into external and internal gearshift.

The checks and procedures for inspecting and reassembling these units to the engine are set out below.

#### 3.4.1 GEARBOX UNIT CHECK

While holding the gearbox units horizontal, use a thickness gauge to check the axial play between the gearshift forks and the gearwheels. The measured play must not exceed the service limit indicated below:

#### service limit: 0.4mm


If the measured axial clearance is greater, before replacing either the gearwheels or the forks, check the state of wear of the latter (par. 2.4.4).


Remove the various elements and check that:


- the support surfaces of the main shaft and secondary shaft show no abnormal wear or signs of seizure;
- the sides of the teeth are free from chipping or abnormal wear;
- the sliding areas of the gearwheels show no abnormal wear or traces of seizure;
- the front claw clutches of the gearwheels are not chipped or rounded;
- · the roller bearings are intact and efficient;
- none of the thrust washers show traces of abnormal wear or meshing.
- · Should any of these defects be found, replace the concerned parts.





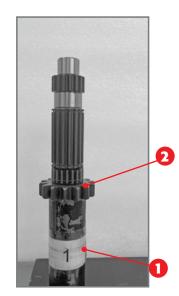

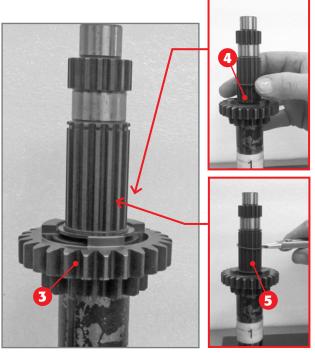

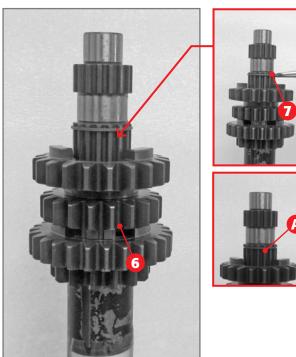

#### **PRIMARY UNIT ASSEMBLY** 3.4.2


Before proceeding with reassembly, clean all the parts thoroughly and oil with gear oil. Always replace the circlips.


Clamp the main shaft 1 (using protective jaws), as shown in the figure. Apply the roller bearing 2.

Apply gear 3 (V), washer 4 and circlip 5.

Insert gear 6 (III - IV) and circlip 7, taking care to place it in groove A.




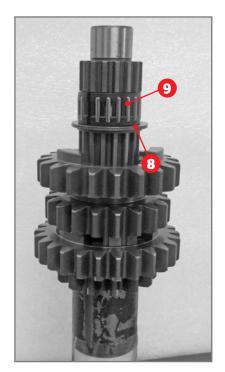

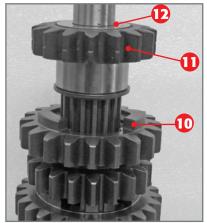

Apply the toothed washer **8** so that it engages in the broaching and the roller cage **9**.

Insert gears 10(VI),11 (II) and the washer 12.

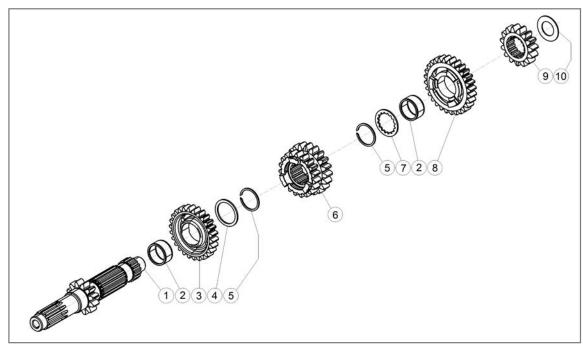


**EXPLODED VIEW OF PRIMARY UNIT:** 


1) Gearbox main shaft; 2) Roller cage; 3) Fifth gear on primary unit 4) Thrust washer 26.32.1,5; 5) Circlip; 6) Third and fourth gear on primary unit; 7) Washer 23.32.1,5; 8) Roller cage; 9) Second gear on primary unit; 10) Washer 17.30.1







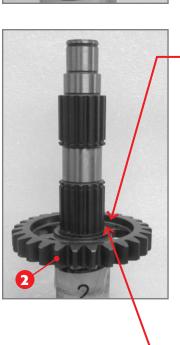

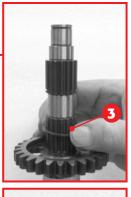





#### **SECONDARY UNIT ASSEMBLY** 3.4.3

Before proceeding with reassembly, clean all the parts thoroughly and oil them by using gear oil. Always replace the circlips.

Clamp the secondary shaft (using protective jaws), as shown in the image.


Apply the roller cage 1.


Insert gear 2 (I), washer 3 and circlip 4.


Insert the sliding gear 5 (V) and the circlip 6.





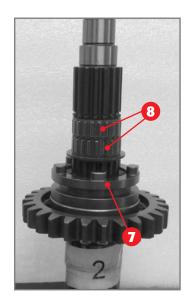

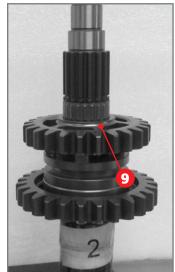

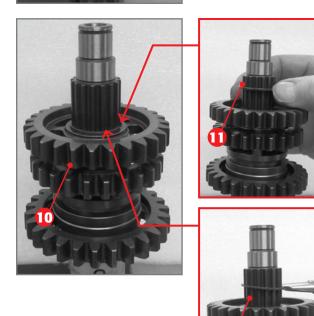


Insert washer 7 and the two roller cages 8.

Insert gear 9 (IV).

Insert gear 10 (III), washer 11 and circlip 12.





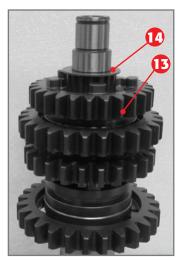






Insert gear 13 (V) and washer 14.

Insert roller cage 15 followed by gear 16 (II) and washer 17.

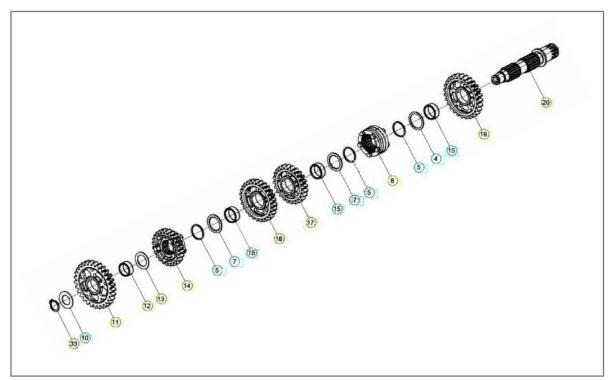

#### **EXPLODED VIEW OF SECONDARY UNIT:**


4) Thrust washer 26.32.1.5; 5) Circlip; 7) Thrust washer 23.32.1.5; 10) Thrust washer 17.30.1; 11) First gear on secondary unit; 12) Roller bush K 20.24.10; 13) Thrust washer 20.30.1; 14) Fifth gear on secondary unit; 15) Roller bush K22.26.10; 16) Third gear on secondary unit; 17) Fourth gear on secondary unit; 18) Sixth gear on secondary unit; 19) Second gear on secondary unit; 20) Secondary shaft



## **CHECKING THE FORKS, FORK** 3.4.4 PINS AND DESMODROMIC **DEVICE**

The internal gearshift consists of:

- two forks 13 which drive two gears on the secondary
- one fork 14 which drives one gear on the primary unit;
- three guide pin bushes 15;
- two fork pins 16;
- desmodromic gearshift 18 whose rotation drives the forks thus selecting the desired gear.

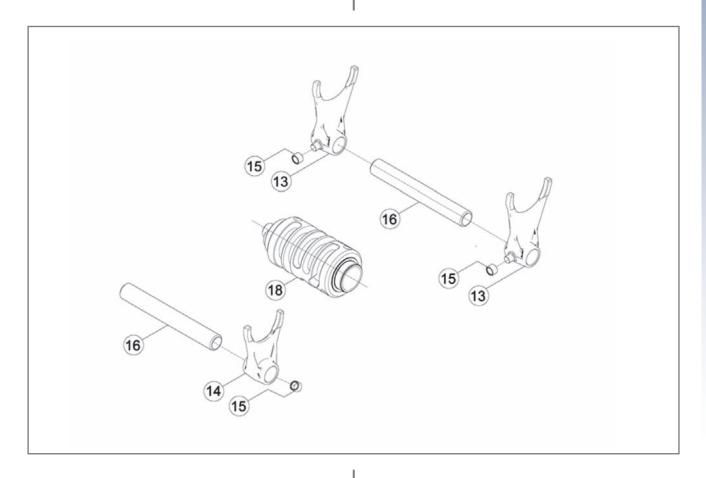


**EXPLODED VIEW OF INTERNAL GEARBOX CONTROL UNIT:** 


- 13) 1st 4th fork; 14) 5th-6th fork;
- 15) bush;
- 16) fork pin;
- 18) desmodromic control

Make sure that the guide pins that support the bushes 15 have no traces of meshing or abnormal wear and that the bushes are not worn.






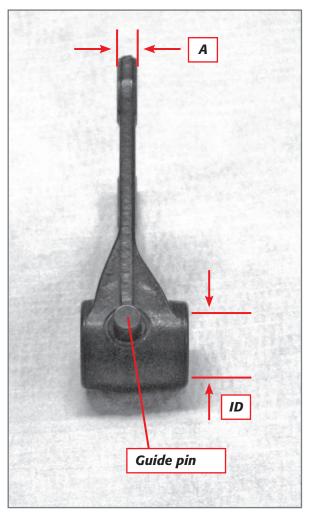

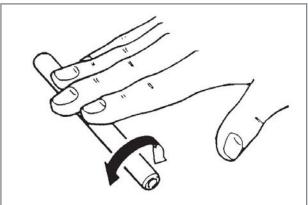

Fork pin check

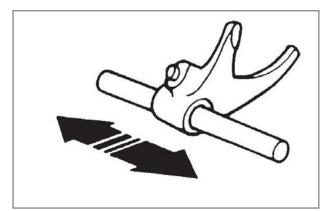

Check fork sliding on pin



Make sure the distance **A** between the outer faces of the fork is not less than the minimum indicated below:

## Minimum acceptable distance: 4.25mm

Check to make sure that the inside diameter D of the fork pin seats is below the limit:

#### Fork inside diameter limit: 13.83mm


Make sure that the fork pins on which they slide have an outside diameter above the limit (to be measured in the sliding areas of the forks and in the housing areas with the crankcases):

## Fork pin outside diameter limit: 13.75mm


Make sure that the desmodromic control device has no corroded or worn areas, especially in the grooves in which the guide pins of the forks are engaged.

Roll the fork pin on a perfectly flat surface: if deformations are present, proceed with replacement.


Slide the gearshift forks on the respective pins: if the movement is difficult and jamming occurs, replace both the fork and the pin.

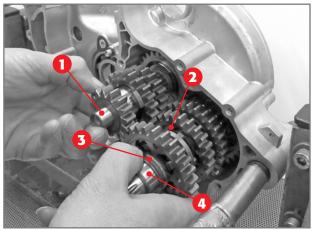


Insertion of gearbox in left crankcase.

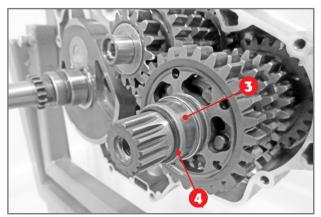

Detail of centre bearing 3 and O-ring 4 coupled to the secondary shaft.

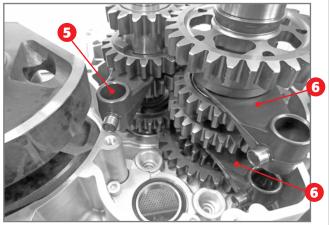

Application of forks to gearwheels.

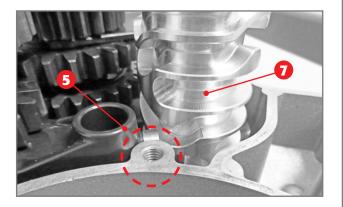

# 3.5 GEARBOX AND INTERNAL GEARSHIFT ASSEMBLY

Insert the entire primary 1 and secondary unit 2 into the respective seats on the left crankcase half simultaneously. Remember to oil the gears with plenty of gear oil and to grease the shafts supporting them with graphite grease in the mating areas with the bearing. Make sure that all the parts slide properly.

Insert the centre bearing **3** and the O-ring **4** on the secondary unit.


Introduce the forks together with the guide bushes on the gear tracks. Namely: the smaller fork **5** drives the sliding gear on the primary unit, while the other two (**6**) drive the sliding gears on the secondary unit.

**Note:** the two forks **6** are interchangeable and their positioning is univocal, since the drive pin must face the desmodromic device. Place the forks in their original positions if none of the components are replaced.


Insert the desmodromic device in the specific bearing. The operation is made easier by placing the desmodromic **7** in a way that the third track from below is facing the fork **5** as shown in the figure.






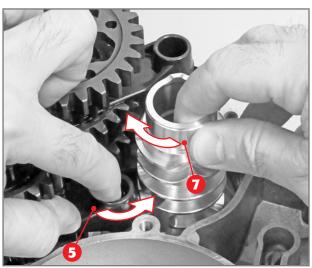

Positioning of fork 5 of the primary unit in the central guide of desmodromic device 7.

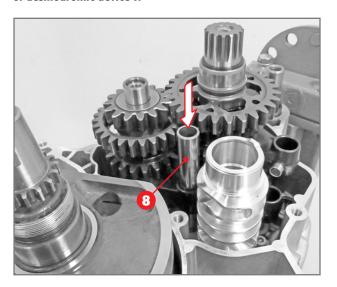

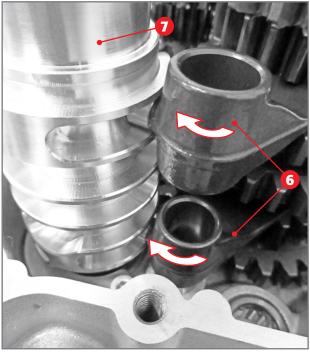

Positioning of the secondary unit forks 6. In the external guides of the desmodromic device 7.


Rotate the desmodromic **7** clockwise and the fork **5** anticlockwise until both parts are connected.

Insert the fork pin 8.

Position the two forks **6** of the secondary unit in the external guides of the desmodromic device **7** and, just like the primary unit fork, insert the fork pin first in the pins and then in its proper seat.


Remember to oil the shafts, forks and the desmodromic device with plenty of gear oil.



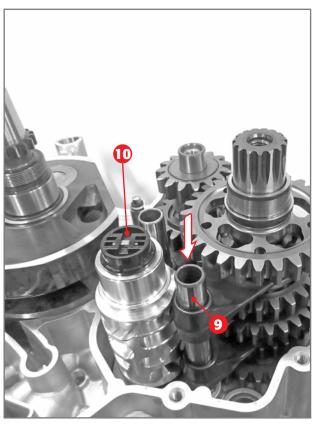

Insert the fork pin 9 and the gear sensor 10.

Place a new crankcase gasket.

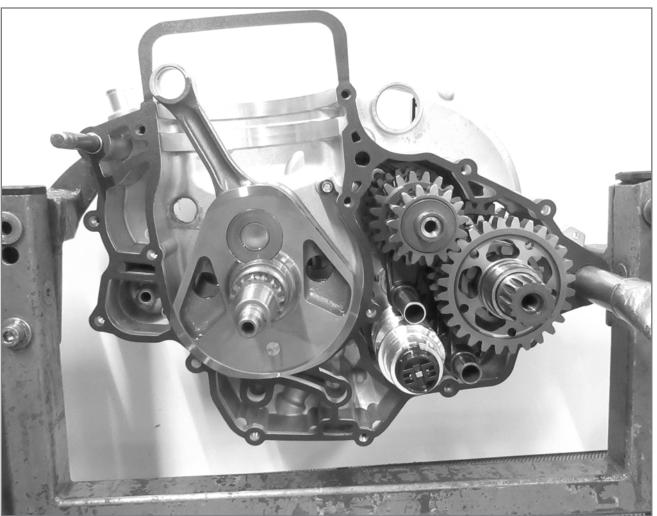

View inside the right crankcase with crankshaft, oil jets, gearbox shafts complete with gearwheels, internal gearshift and gasket.





# 41) 41 42 41 41)

Positioning of crankcase coupling screws.

### 3.6 **CLOSING THE ENGINE CRANK-CASE**


Put the left crankcase half near the right crankcase half. Make sure that the shafts and the pins on both the crankcases are aligned with their corresponding housings and the crankcase half is not in disarray. To facilitate progressive nearing and aligning of the two crankcase halves, connect two screws on opposite sides and tighten them bit by bit. If the crankcase halves tend to capsize, do not insist tightening them. Rather loosen the screws and reposition the crankcase correctly.

Make sure that the two crankcase halves match perfectly one with the other. Assemble the screws according to their length as indicated in the figure. The table below contains indications for applying these

It is recommended to tighten them in a criss-cross pattern using a torque of 10Nm.

Insert the two screws to secure the engine to the engine support (code 3625132 000).

	Screw size		Threadlocker	Tiebtoning toyang
Screw number	Threading diameter [mm]	Threading length [mm]	application	Tightening torque [Nm]
41	M6	60	NO	10
42	M6	70	NO	10

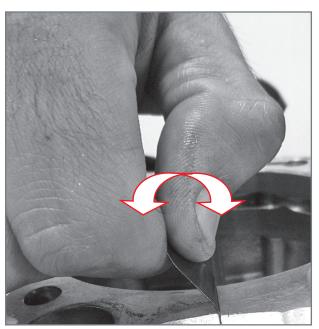


Cutting extra piece of gasket between engine crankcase


Cut the extra piece of gasket in between the two crankcase halves in the area of the cylinder.

This can be done easily by bending the gasket several times.





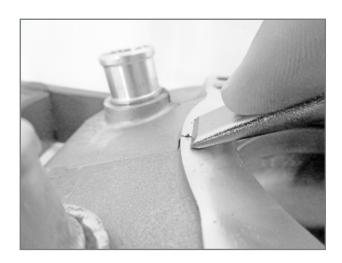

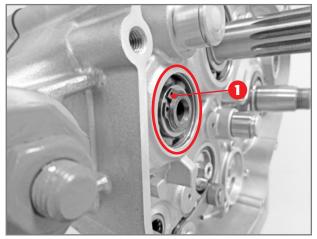

# ATTENTION!


Should there be any leftovers, proceed to remove them paying attention to not scratching the surface of the crankcase halves.


Apply circlip  ${\bf 1}$  on the gearbox secondary as shown in the figure.



# 37 38

To block the crankshaft, apply only the screw 38 to the crankcase.

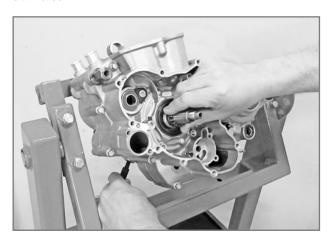

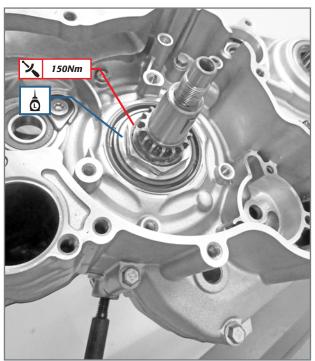

Nut on left side of crankshaft.

# 3.7 **BLOCKING** THE **CRANK-**SHAFT AT THE TOP DEAD **CENTRE AND TIGHTENING** THE NUT ON THE LEFT SIDE **OF THE CRANKSHAFT**

To block the crankshaft in the Top Dead Centre, insert the special conical-end screw 38, without applying the washer 37 or the special engine locking tool code 006140110000, in its seat on the right crankcase half. Spread the threading on the left-hand side of the crankshaft with medium strength threadlocker. Cover the threading on the left-hand side of the crankshaft with medium strength threadlocker.

Tighten the nut using the special socket wrench (code 006140020000) to the indicated torque.




# 3.8 EXTERNAL GEARSHIFT

Before reassembling the external gearshift, check its state of use. While for the stop cam it is enough to make sure it is free from abnormal wear or meshing, the gearshift drive shaft needs more in-depth inspections.


# 3.8.1 CHECKING THE COMPLETE GEAR SHAFT

With the complete device, make sure that the distance between the movable pawl and the drive shaft is between **0.35÷0.80mm**.

Should the distance be greater, replace the movable pawl.

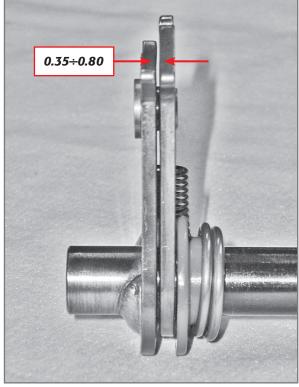

Allowed distance between shaft and pawl.

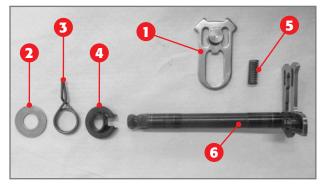


Complete drive shaft: 1) Movable pawl; 2) Thrust washer; 3) Gearshift return spring; 4) Spring guide; 5) Spring; 6) Gearshift drive shaft.

In order to replace the movable pawl 1, disassemble the thrust washer 2, the return spring of the gearshift 3, the spring guide 4, the spring 5, which must be compressed and pulled out of its seat, and the pawl, moving it completely towards the shaft 6.





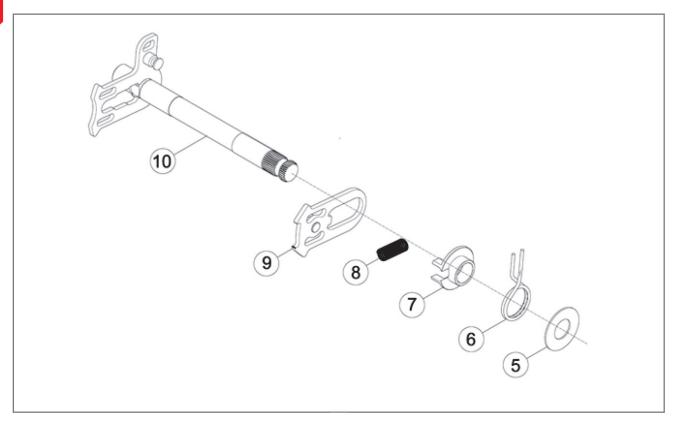


# **EXPLODED VIEW OF GEARSHIFT.**

- 5) 14x30x1 thrust washer;
- 6) Gearshift return spring;
- 7) Spring guide;
- 8) Pawl return spring;
- 9) Movable pawl; 10) Gearshift shaft.


For reassembly, couple the movable pawl 9 to the drive shaft 10 and, while compressing it, insert the spring 8 between the movable pawl and the drive shaft. Then apply the spring guide 7, the gearshift return spring 6 and finally the thrust washer 5 (14x30x1).


The gearshift return spring must be positioned as in the figure to be able to carry out its function.

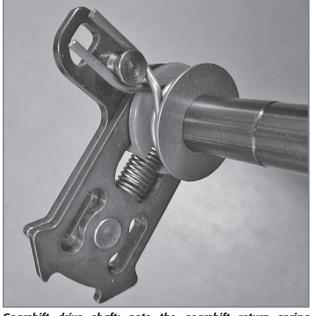

Gearshift drive shaft: note the gearshift return spring position.



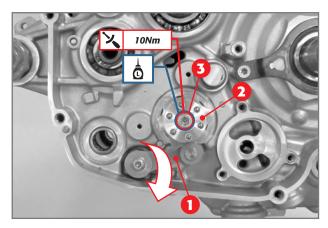

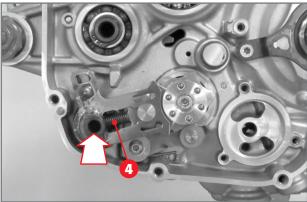

POSITIONING OF STOP CAM ON DESMODROMIC DEVICE.

- 1) Stop lever;
- 2) Stop cam;
- 3) M6x30 screw;
- 4) Movable pawl return spring.

# 3.8.2 EXTERNAL ASSEMBLY

n such a way that the

**GEARSHIFT** 

Keeping stop lever moved 1 in such a way that the spring is compressed, position the stop cam 2 on the protruding end of the desmodromic gearshift (external right crankcase). The stop cam has only one correct position, which is determined by the specific shape of the end of the desmodromic device and of the bottom part of the stop cam.

Fit the M6x30 fixing screw **3** after having applied medium-resistance threadlocker: tighten to the indicated torque.

Insert the drive shaft together with the washer in its seat keeping the return spring **4** of the movable pawl pressed.

Should you wish to test correct operation of the entire gear unit, just temporarily couple the external gearshift lever and simulate the operation of changing gears, by lifting and lowering the gearshift lever and having the main shaft of the gear unit rotate. The whole device works properly if no abnormal jamming occurs.


Please note that if the unit operates without oil, the device is noisier than usual.

# 3.9 CHECKING THE KICKSTART SHAFT UNIT AND ASSEMBLY

In order to disassemble all the parts of the kickstart shaft, pull off the washer 11 at the end of the shaft (on the side of the spring 16), the spring 16, the kickstart sleeve 14 and the lever return spring 8, which must be pulled in the radial direction so that it is extracted from its hole to be unfastened from the shaft. Pull out the kickstart spacer 9.






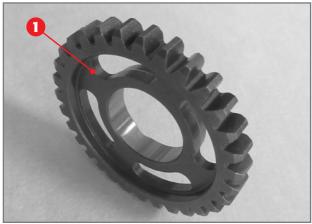


Idler wheel 1.



Torque limiter 2.

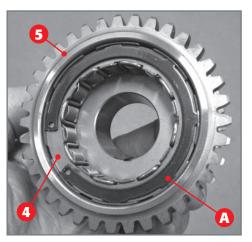

Free wheel coupled to the primary gear.

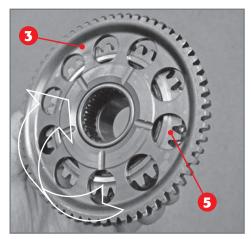

Primary gear complete with free wheel coupled to ignition aear.



# 3.10 ELECTRICAL STARTER UNIT AND PRIMARY GEAR

Carry out the following controls before assembly.

# 3.10.1 CHECKING THE ELECTRICAL STARTER DEVICE ELEMENTS

Make sure that the teeth of all the gearwheels of the device are intact, free from chipping or signs or abnormal wear.

Pay attention to the teeth of the idler wheels 1 and torque limiter 2 and between the gears and respective support pins. Replace them if they show signs of meshing or seizure.


Make sure there are no traces of meshing on the housing of the roller bearing on the starter gear 3. Mount the starter gear temporarily on the crankshaft, together with the roller bearing and check to see if there is excessive play.

To check the correct functioning of the free wheel 4 proceed as follows.


Insert the starter gear **3** on the free wheel **4**and primary gear unit **5**. Keeping the primary gear blocked **5** and turning the kickstart gear **3** clockwise, it must run freely. Turning the kickstart gear **3** anti-clockwise, it must be blocked without idling.

To replace the free wheel, disassemble the special circlip **A** and remove the free wheel.


During disassembly make sure that the lugs on the outer edge of the special circlip **A** are coupled in the slots of the free wheel and in the groove inside the primary gear.

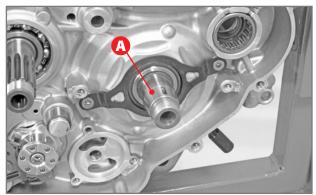

Conical segment A on right side of crankshaft.

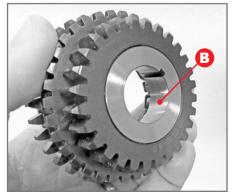


Conical segment B main gear.

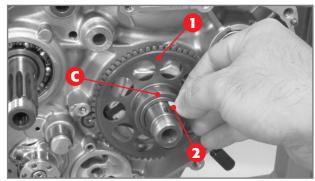

Positioning Woodruff key in specific seat.



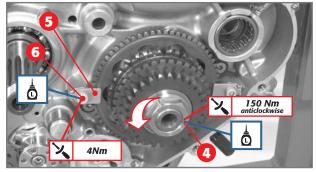

Coupling primary gear to crankshaft.

# 3.10.2 COUPLING THE IGNITION AND PRIMARY GEARS TO THE MOTOR

Thoroughly degrease the conical part **A** on the right side of the crankshaft and **B** of the primary gear.

Lubricate the segment **C** of the starter gear **1** with motor oil and couple it to the crankshaft. Insert the Woodruff key **2** in the specific seat. Apply the primary gear **3** to the crankshaft and while turning the gear clockwise, push it towards the crankcase half until you perceive meshing between the gear and the Woodruff key.

Insert the locking nut 4 applying the threading with a medium strength threadlocker and tighten to the indicated torque.


# **ATTENTION!**

it must be tightened anti-clockwise.


Apply the two safety plates **5** bound to the casing with screws **6**. Tighten to the specified torque.






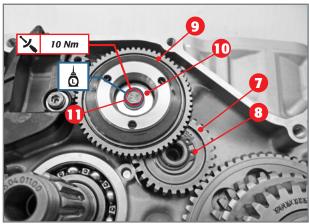


Coupling electrical starter gear unit.

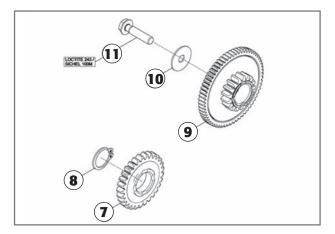

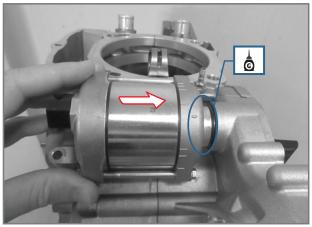

Insertion of the start motor in the crankcase half. Note zone G to be greased.

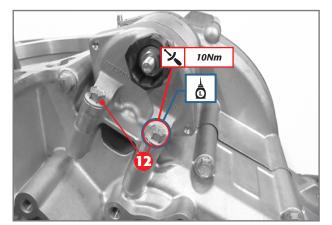

The two fixing screws 12 of the start motor.



Lubricate the pin of the idler.

Couple the idler wheel  ${\bf 7}$  to the pin and apply the circlip  ${\bf 8}$  .

Couple the torque limiter **9** to the pin on the crankcase half. Insert the washer **10** and the screw **11** after having spread the threading with medium strength threadlocker.


Tighten the screw to the indicated torque.

Apply a light layer of grease in the area shown and insert the motor in its housing.

Apply medium strength threadlocker on the two screws 12 and tighten them to the indicated torque.

# 3.11 OIL PUMPS: INSPECTION AND REASSEMBLY

As shown in paragraph 1.5, the motor is equipped with two oil pumps: one is for intake (higher displacement) located in the outside of the left crankcase half and the other for high-pressure (less displacement) located on the outside of the right crankcase half. The two pumps are driven by a gear cascade meshing with the clutch case.

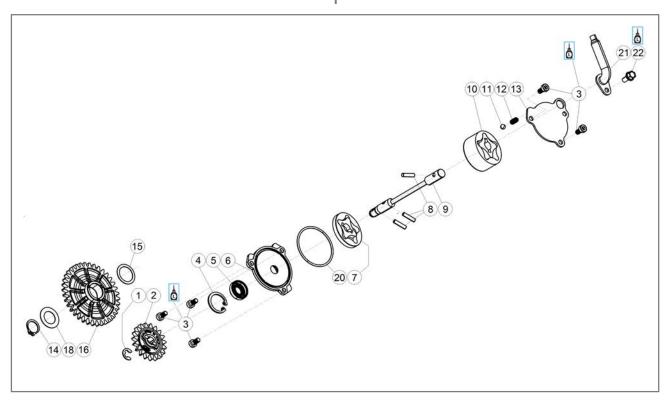

# EXPLODED VIEW OF OIL PUMP UNIT.

- 1) Benzing ring;
- 2) Oil pumps control gear;
- 3) M5x12 screw;
- 4) Circlip;
- 5) Oil seal;
- 6) High-pressure pump cover;
- 7) High-pressure oil pump;
- 8) Roller; 9) Oil pump shaft;
- 10) Intake pump;
- 11) Ball;
- 12) Spring;
- 13) Low-pressure pump cover;
- 14) Circlip;
- 15) 18x23x0.5 washer
- 16) Idler gear;
- 18) 15x25x0.5 washer
- 20) 45x2 O-ring;
- 21) Oil jet;
- 22) 5x12 screw

# Proper operation of the pump depends:

- On the sliding surface with the rotors;
- On the radial play between the two rotors and between the external rotor and pump compartment;
- On the axial play of the rotors with respect to the sliding surfaces;
- On the O-ring seal and the oil seal (on the highpressure pump cover).





Oil intake pump: note the dot on the two rotors. The dot must face the inside of the engine.

Should the sliding surfaces with the rotors present deep or evident traces of corrosion, replace the deteriorated

To measure the radial play between the internal and external rotor and between the external rotor and the crankcase, proceed as follows:

Note: Insert the two rotors in their specific seat with the reference dot facing the inside of the engine.


Using a thickness gauge, check that the play does not exceed that allowed, equal to:

# Maximum radial play: 0.20mm

Take a thickness gauge again and a rectified reference surface and verify that the axial play does not exceed the maximum allowed amount:

# Maximum axial play: 0.1mm

Should play be greater, replace the rotors.

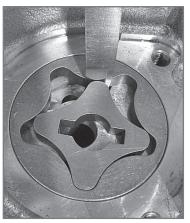


Evaluation of radial play between internal and external rotor.




Evaluation of radial play between external rotor and crankcase.

if needed.

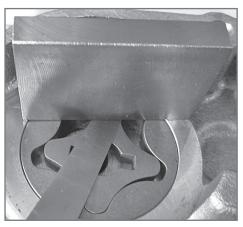

Evaluation of axial play between rotors and sliding surfaces.

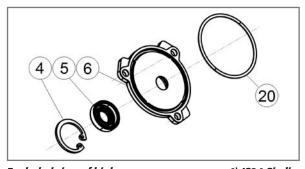

Exploded view of high-pressure pump cover. 4) JS24 Circlip; 5) 10x22.6 oil seal; 6) Oil pump cover; 20) 45x2 O-ring.



Checking oil pump control shaft.






Also check that the drive shaft is not too marked in the area A where the oil seal slides.


As for the high-pressure pump (located in the outside right crankcase half), one must check that the oil seal 5 is not worn (it is recommended to replace it). In order to disassembly it, the circlip 4 must be removed. Check the state of use of the O-ring 20 and replace it

# 2

Shaft intake pump internal rotor and roller unit.

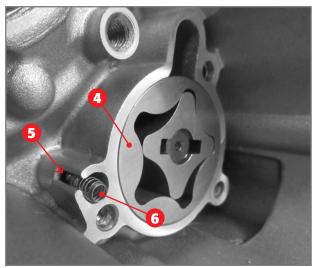

Complete intake pump coupled to the crankcase.

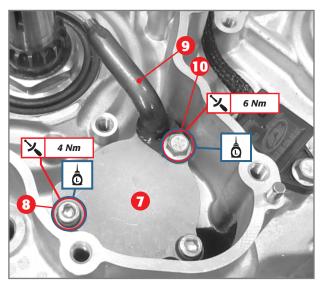

Coupling the oil intake pump cover to the crankcase.

# 3.11.1 INTAKE PUMP ASSEMBLY

Insert the internal rotor 1 on the shaft 2 so that the dot on the front of the rotor faces inwards. Then insert the roller 3 on the shaft.

Use motor oil to lubricate the seat of the rotors on the outside of the crankcase half, insert the external rotor 4 and the internal shaft-rotor unit in its proper seat. Insert the ball 5 (diameter 5.5mm) and the respective compression spring 6.


Lubricate with motor oil and, while rotating the protruding segment of the drive shaft (from the outside of the right crankcase half), make sure it rotates freely and does not jam.

Apply the cover **7** and fasten it using the screws **8**, after placing the threadlocker: tighten to the specified torque.


Apply the oil jet **9** and fasten it using the screw **10**, after placing the threadlocker. Tighten to the specified torque.





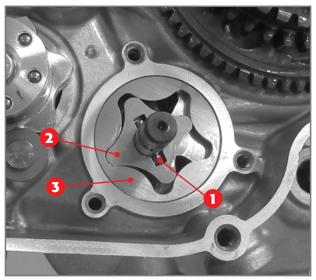

Coupling the high-pressure pump rotors to the control shaft.

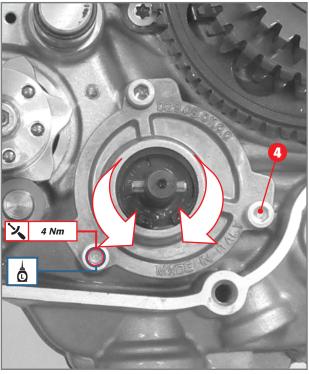

Coupling high-pressure pump cover to crankcase.

# **HIGH-PRESSURE PUMP AND** 3.11.2 **CONTROL GEAR ASSEMBLY**


Lubricate the area where the pump is housed (outside right crankcase half), and insert the roller in its hole 1. Then insert the internal rotor 2 and the external rotor 3, making sure to position them with the reference dot facing the inside of the engine.

Lubricate the pump body with motor oil.

Grease the oil seal, insert the cover in the end of the shaft and press towards the crankcase. Insert the three screws 4 after having applied them with spread medium strength threadlocker. Tighten them to the indicated torque.


Turn the shaft holding on to the protruding end and make sure it rotates freely without getting jammed.



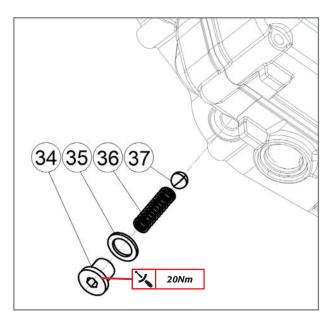

# PRESSURE CONTROL VALVE.

- 34) Screw;
- 35) Thrust washer;
- 36) Spring;
- 37) Ball.

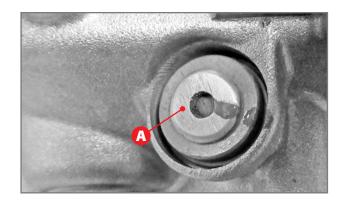

# 3.11.3 CHECKING AND ASSEMBLING THE PRESSURE CONTROL VALVE

The pressure control valve is made up of the ball **37**, spring **36**, calibrated washer **35** and screw **34**. Check the length of the free spring on this component: Service limit: **29.5mm** 

Tighten the screw to the indicated torque.

# ATTENTION!

If one of these elements making up the control valve is not inserted, engine functioning will be jeopardised.

# ATTENTION!


Always restore the original thickness value of the washer **35**. If this must be replaced, replace it with one of the same original thickness.


# ATTENTION!

Once valve assembly is complete, apply a 6 mm diameter x 8 mm length aluminium rivet A in the hexagonal slot. This device prevents accidental dismounting of the pressure regulation valve.






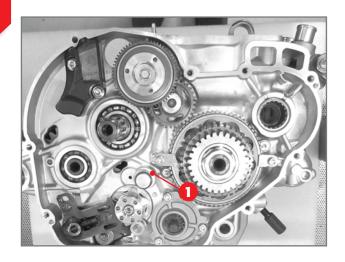

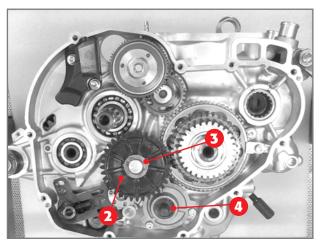

Coupling pump control gearwheels to crankcase.

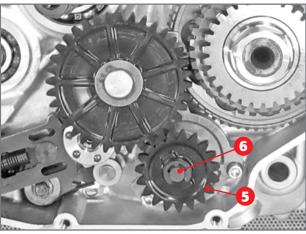

Coupling pump control wheel.

# 3.11.4 CHECKING AND ASSEM-BLING THE OIL PUMP CON-TROL GEARS

The oil pumps are controlled by a gearing cascade which is driven by the clutch case.

The gearwheels, being made of plastic, must not have chips, grains or signs of abnormal wear.

Couple the thrust washer 1 to the pin and lubricate it with gear oil.


Couple the pump control idler wheel **2** to the pin so that the most protruding segment faces the casing. Then insert the thrust washers **3** and circlips to prevent the wheels from coming off the pins.

Note: check for the roller 4.


Couple the oil pump control wheel 5to the end of the shaft so that the groove on the gear inserts into the roller. Then apply the Benzing ring 6, so that the gear does not slip off.



Paper oil filter application.

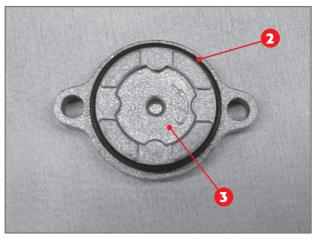

Paper oil filter cover complete with O-ring.

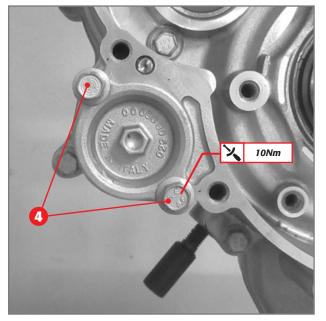

The two paper oil filter cover fastening screws.

# 3.11.5 INSERTING THE PAPER OIL FILTER

Lubricate the rubber gasket on the filter. Insert the filter 1 into its housing and push it towards the inside of the engine as far as it can go.

Insert the O-ring **2** onto the oil filter cover **3** and apply the unit to the crankcase half.

Apply the two M6x16 screws **4** to be tightened to the indicated torque.







## **CHECKING AND COUPLING** 3.11.6 THE COUNTERSHAFT

Check the state of use of the areas where the shaft rests on the bearing. Should they show signs of abnormal wear, have the shaft replaced. Make sure that the toothed segment of the shaft does not have traces of abnormal wear.

# **EXPLODED VIEW OF COUNTERSHAFT**

- 1) Shaft;
- 2) Counterweight;
- 7) Elastic washer;
- 8) M12x1 nut

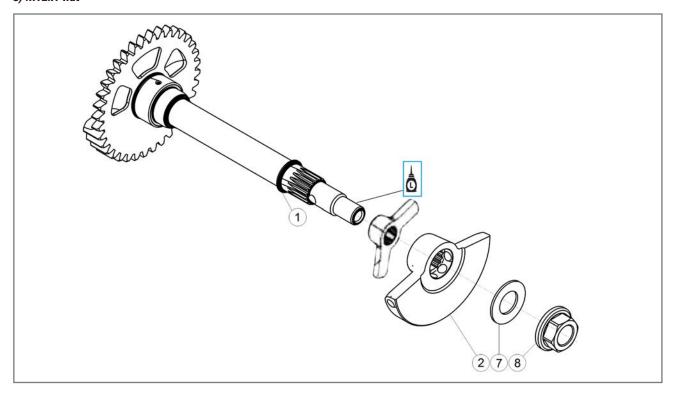

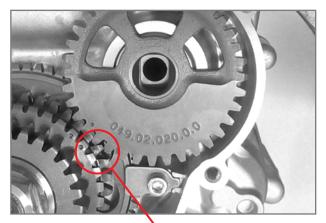

Coupling countershaft to crankcase.




Enlargement of references.


Grease the oil seal and insert the countershaft in its seat. Position it so that the reference sign on the shaft is between the two reference signs on the primary gear.





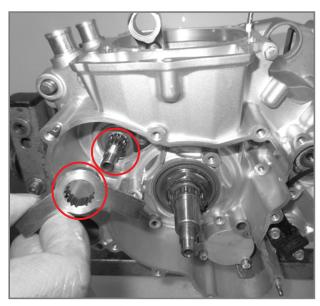

Detail of grooved profiles for coupling.

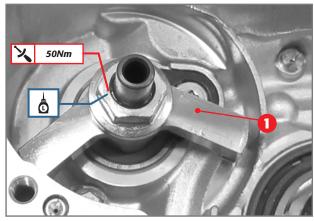


Countershaft nut.

While keeping the countershaft in place, insert the counterweight on the left side depending on the position set by the grooved shaft.

Then couple the elastic washer and the nut 1 after having applied medium strength threadlocker on their threading. The nut must be tightened to the indicated torque.





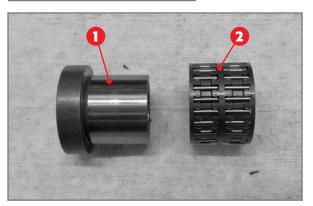

### 3.12 **CLUTCH UNIT**

Before reassembling the clutch unit, it is required to carry out some checks on the various components described below.


### 3.12.1 **CHECKING** THE **CLUTCH** CASE, ROLLER BEARING AND **INTERNAL CENTRE BEARING**


Before reassembling the clutch case, make sure that the sides of the teeth A, designated for main transmission and B, designated for meshing with the kickstart idler gear and oil pumps, have no superficial nicks or abnormal wear.


Check the condition of the internal centre bearing 1 which must show no traces of meshing or abnormal wear. Check the condition of the roller bearing 2. If worn, it must be replaced.





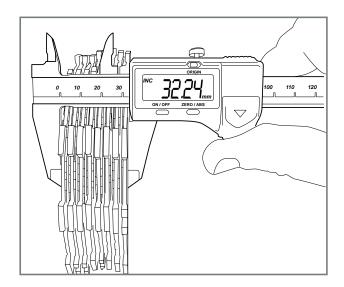

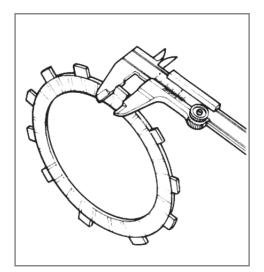

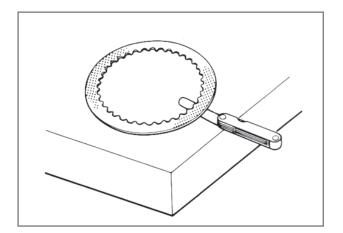

# 3.12.2 CHECKING THE CLUTCH DISCS

The clutch discs are divided into driving and driven: eight driving discs and seven driven discs.

The driving discs have cork inserts on both sides which wear out due to the driven discs sliding on them. One needs to check that the thickness of the clutch pack (driven and driving discs) is not lower than a minimum set value equal to:

minimum thickness of complete disc pack: 31.6mm

The other measurement that needs to be checked is the thickness of the teeth of each driving disc, which must not be less than the minimum set at:


minimum driving disc tooth thickness: 13.3mm


Also check the distortion of the driven discs. This operation is carried out by placing the driven discs on a perfectly flat surface and using a thickness gauge to check that any gap between the disc and the surface is not greater than:

allowable distortion of driven discs: 0.10mm





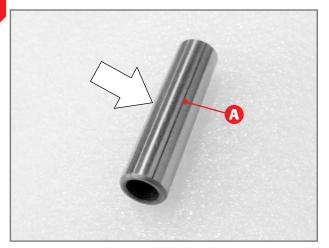

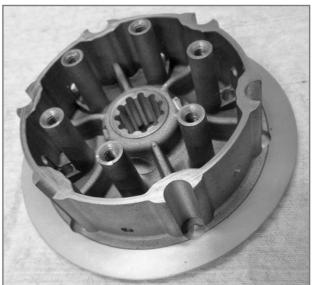

# B A

Thrust bearing device.

# 3.12.3 CHECKING THE CLUTCH DRUM AND CAP

The clutch drum engages with the driven clutch discs by means of the sliding pins **A**: make sure that the area shown in the figure is free from meshing or abnormal wear. If so, replace the sliding pins.

Make sure that the disc friction area is free from scratches, meshing or abnormal wear. If so, replace the clutch drum

Also check that the radial holes on the clutch drum are not obstructed and are free from sediments.

# 3.12.4 CHECKING THE THRUST BEARING UNIT

Check the condition of the bearing and the surfaces on which it rests.


To check the thrust bearing, it is sufficient to simulate the rotation of the front centre bearing **A** in relation to the rear centre bearing **B**, once the unit is assembled, to ensure that it runs smoothly.

Look for any meshing or signs of wear on the sliding surfaces. If there are any signs of deterioration, replace the whole unit.



### **CLUTCH** 3.12.5 **ASSEMBLING** THE **UNIT**

Lubricate the end of the primary gearbox shaft, the internal centre bearing 4 and the roller bearing 5. Fit the roller bearing 5 and the centre bearing 4 on the clutch case 1. Mount the unit on the primary shaft; in order to make insertion of the clutch case easier, slightly turn the kickstart idler gear (optional), the idler gear for oil pump control and the case, thus making meshing easier. Fit the washer 6, which the clutch drum 2 rests against. Fit the sliding pins 35 on the drum. Apply the safety washer 7 and, after applying medium strength threadlocker, fit the lock nut 8.

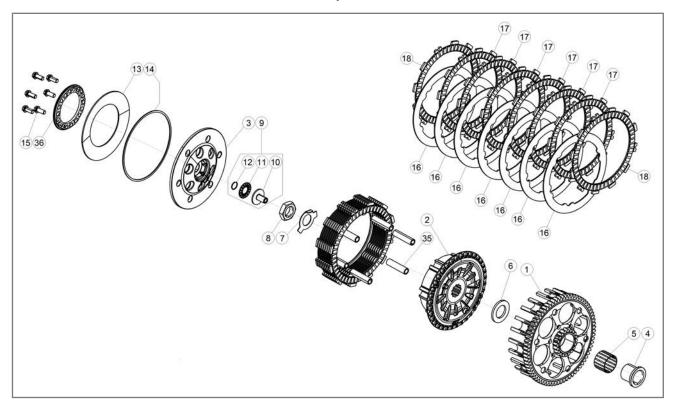



# **EXPLODED VIEW OF CLUTCH UNIT:**


- Main transmission crown
- 2) Clutch hub
- 3) Pressure plate
- 4) Main transmission crown bushing
- 5) Rolled bushing
- 6) Washer
- 7) Washer
- 8) Nut
- 9) Complete lifter clutch push rod assembly
- 10) Lifter clutch push rod assembly
- 11) Bearing cage 12) Circlip
- 13)
- Spring washer
- 14) Ring
- Special screws 15)
- Clutch driven disc 16)
- Clutch driving disc 17) Clutch driving disc
- Ring





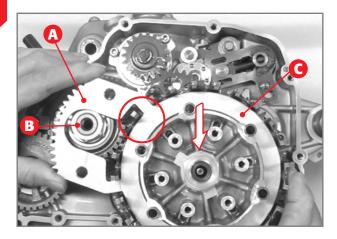

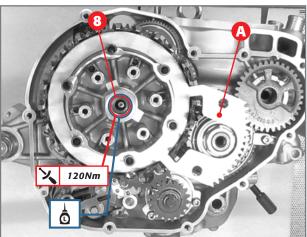

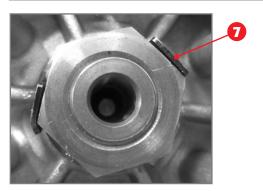



**Note:** We recommend that you rest the special tool **A** (code 029.14.002.50.00) against the assembled unit and check that the special tool is correctly positioned with respect to the clutch case and the nut of the primary gear **B** before fitting the safety washer **7** and the nut **8**.

In other words, the special tool must connect the two arms on the resting slots of the driving discs, and rest against the surface of the clutch drum **C**.

To tighten the nut **8** the clutch drum must be blocked with tool **A** (code 037.14.002.50.00). Tighten to the specified torque.

Having tightened the nut, fold the two locking fins on the safety plate.


Lubricate the clutch discs with gear oil and apply the driving disc with BLUE edge and a driven disc.


Then alternate the driving discs with GREEN edge and the driven discs.

The other driving disc with BLUE edge will close the disc pack.

Please note that the driven discs must be inserted so that the connecting radius on the teeth faces inwards towards the engine.



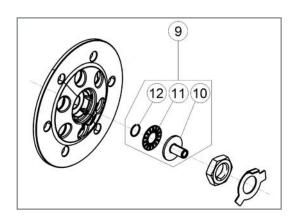

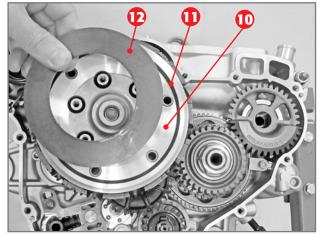

Clutch cap assembly

Insert the thrust bearing assembly **9** (after lubricating it with gear oil) in the hole on the gearbox main shaft and check free axial sliding.

Fitting the pressure plate **10**, the ring **11** and the spring washer **12**.

# ATTENTION!


The spring washer must be fitted so that the side with the larger diameter rests on ring 11.



Detail of correct fitting of the spring washer.



Fit the ring as shown in the diagram by positioning it so that a screw lines up with the II mark.

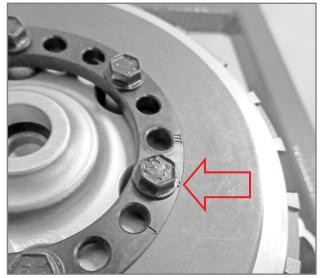


Ring position.








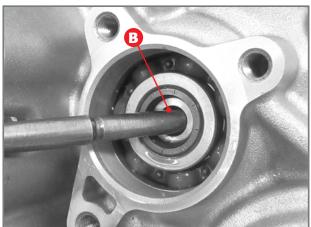

Insertion of clutch rod in housing B.

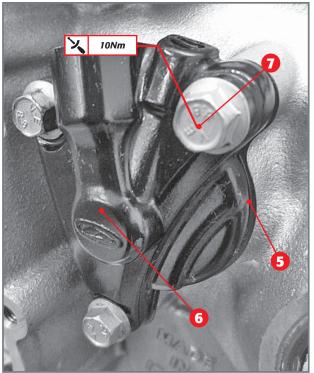

Application of the gasket 5, actuator 6, M6x30 screw 7 and two M6x20 screws 8.

Proceed to tighten the six screws in a criss-cross pattern and tighten to the indicated torque.

Insert the clutch rod in the seat **B** from the left side of the engine, turning the smaller section towards the inside of the engine.

If only the clutch actuator pipe was removed during the disassembly of the engine from the vehicle, operating on the actuator as well, proceed as follows.

Apply the gasket **5**, the complete hydraulic actuator **6**, the M6x30 screw **7** and the two M6x20 screws **8** to the left crankcase half. Tighten the three screws to the indicated torque.



### EXPLODED VIEW OF WATER PUMP UNIT.


- 1) Water pump unit;
- 2) 5.5x1 O-ring;
- 3) Bearing;
- 4) Oil seal;
- 5) Bush;
- 6) Impeller;
- 7) Washer;
- 8) Blind nut;
- 9) Septum;
- 10) Cover;
- 11) 6x10x2 copper washer;
- 12) M6x25 screw;
- 13) M6x60 screw.

### 3.13 **COOLANT PUMP**

The water pump must assure the correct flow rate of coolant, depending on the set rotation speed, in order to remove the required amount of heat from the power

The shaft 1 is supported by two bearings while sealing of coolant and gear oil is ensured by the O-ring 2 and oil seal 4.

The impeller 6 is fastened to the shaft 1 and the coupling is ensured by tightening the nut 8 onto the

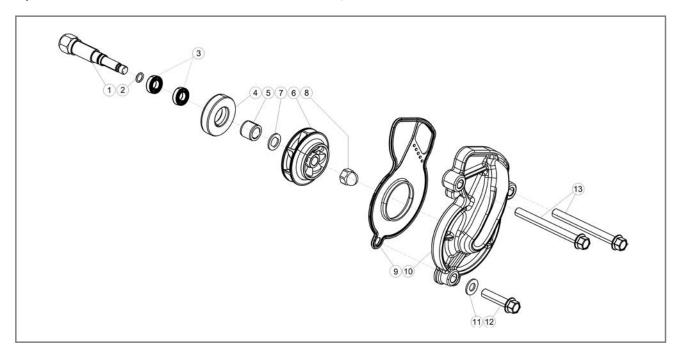



Inner clutch cover with water pump.

### CHECKING AND 3.13.1 **DISMAN-**TLING THE PUMP UNIT

Disassembly of the entire pump unit can be done only with the entire clutch cover removed.

Disassembly of the pump unit is performed by removing the nut 8 which allows you to extract the impeller 6, the washer 7, and the shaft 1. This can be removed by pressing the threaded part of shaft towards the inside of the clutch cover.


Extract the oil seal 4 and, heating the bearings 3, remove them.

Once the shaft is pulled off 1 from the crankcase, it is recommended to replace the O-ring 2.


Replace the oil seal 4 every time and if the bush 5 is marked in the area of contact with the oil seal, replace it as well.






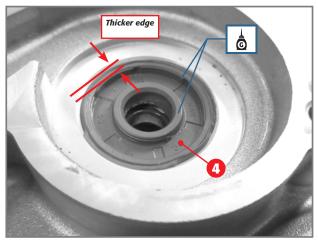

Application of oil seal on inner clutch cover.

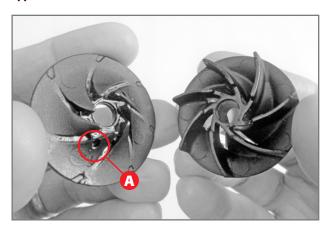

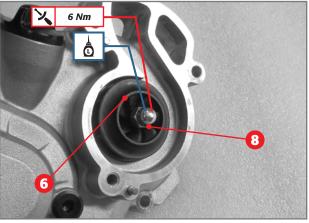

Complete coolant pump unit.

# 3.13.2 PUMP UNIT ASSEMBLY

Heat the concerned area to couple the bearings **3** to the inner clutch cover. They must be pushed until they are flush with the shoulders on the pump body.

Grease the oil seal housing. Position the oil seal 4 so that the thicker edge faces the outside of the cover. Insert the oil seal in the inner clutch cover, having it enter the seat very slowly to keep it from deteriorating.

**Note:** the water pump impeller is made up of two parts.

It is recommended to clean the slots and the pinhole **A**. Recouple both parts.

Couple the shaft 1 with the O-ring 2 to the inner clutch cover and then insert the bush 5, the washer 7, and the impeller 6.


Then couple the blind nut **8** to the threaded segment of the shaft after having applied medium strength threadlocker. Tighten it to the indicated torque.

When coupling is complete, check that the pump unit turns freely without meshing or friction.


Check the axial play of the pump unit. Make sure it is not beyond 0.3 mm.


It is recommended to replace the gasket in between the inner clutch cover and the pump cover.



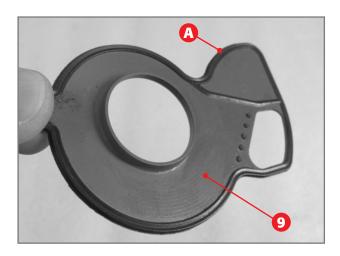




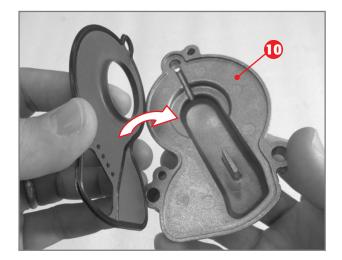

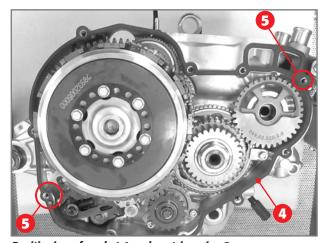

 Positioning of gasket 4 and centring pins 5.



Couple the septum to the water pump cover 10.


Apply a new gasket 4 placed between the right crankcase half and the inner clutch cover using the two reference pins 5 to keep it in place.









Application of complete inner clutch cover on right crankcase.

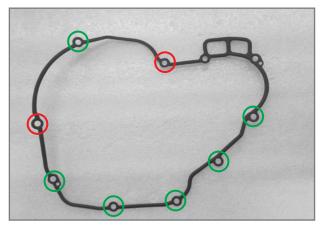

Positioning of M6x25 screws.

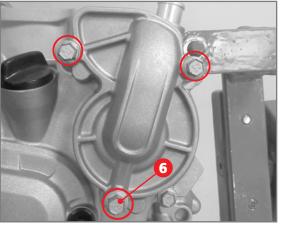

Coolant pump cover: pay attention to the washer 6.

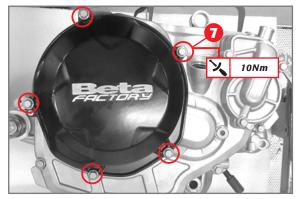

The screws 7 fastening the outer clutch cover to the internal cover.

Couple the inner clutch cover to the right crankcase half and turn the water pump impeller until the pump shaft perfectly inserts in the housing on the countershaft which drives it.

Apply the screws by following the figure diagram and its relevant table.

Colour	Screw size		Tightoning
	Threading diameter [mm]	Screw length	Tightening torque [Nm]
	M6	25	10
	M6	60	10


Couple the water pump cover to the inner clutch cover applying the M6x60 screws, making sure to apply the copper washer **6** to the lower screw of the pump cover. Fasten all screws at the indicated torque following a criss-cross pattern.


Screv	Tiektonine		
Threading diameter [mm]	Screw length	Tightening torque [Nm]	
M6	60	10	

If only the outer clutch cover was removed, put it back on the inner cover, fasten the screws **7** and tighten to the indicated torque.





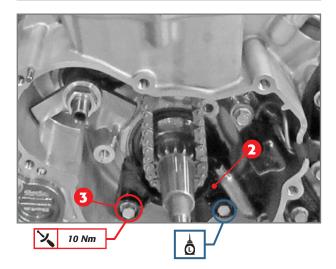

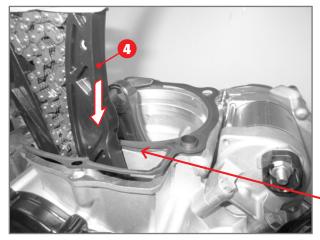

# 3.14 CHECKING AND COUPLING OF TIMING CHAIN, FIXED AND MOBILE PADS

The chain has the task of transmitting motion from the crankshaft to the camshafts present on the cylinder head. The links must be checked to make sure there is no excessive radial or axial play between them.

Both the fixed and mobile pads ensure that the chain slides properly. The tensioner ensures the correct tensioning. It is possible to assemble the tensioner only after the thermal system and the camshafts have been re-assembled.


Make sure that the guides do not have deep traces caused by the rotation of the chain.

Insert the chain 1 and engage it in the control gear on the crankshaft.


Place the lower guard 2.

Insert the special bushes and screws **3** into the eyelets after applying some medium strength threadlocker. Tighten to the specified torque.


Insert the fixed pad 4, apply the specific bush and the screw 5 in the lower eyelet, after application of medium strength threadlocker. Tighten to the specified torque.

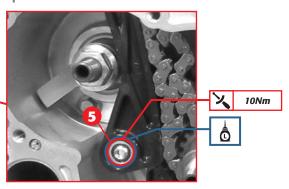




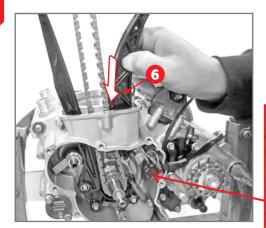

Insert the sliding pad 6, apply the specific bush and the screw 7 in the lower eyelet, after application of medium strength threadlocker. Tighten to the specified torque.

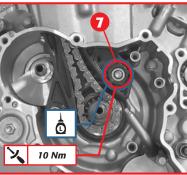

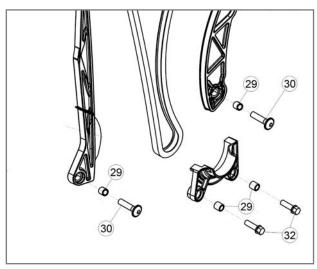

Mounting bushes in lower eyelets of pads.





# 3.15 IGNITION SYSTEM


Before reassembling the ignition system, it is recommended to make sure it is in good working order. The ignition system consists of the magnetic pick-up, the stator unit and the flywheel. The system is completed by the electronic control unit, the ignition coil and the spark plug, which are not dealt with in this text.

# 3.15.1 CHECKING THE IGNITION SYSTEM

Accurately degrease the various elements and carry out the checks.

The main check is the one concerning the electrical inspection which can be done by using a standard tester. The resistance values detected at the terminal heads must respect those carried in the table (at 20°C).

Element	Cables	Resistance values
Pick up	Red – Green	<b>100</b> Ω ± <b>20</b> %
Stator	Black - Black	<b>0,46</b> Ω <b>±20</b> %

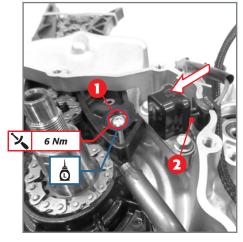




# 3.15.2 COUPLING OF IGNITION SYSTEM TO CRANKCASE

Set the pick-up on the crankcase so that the two holes on its support coincide with the two holes on the crankcase. Cover the threading of the two screws 1 with medium strength threadlocker and tighten them to the indicated torque.


Push the cable gland **2** in its seat. Then apply a small quantity of motor silicone on the area indicated.






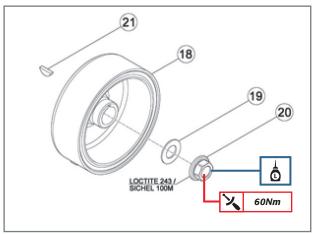


Exploded view of flywheel. 18) Flywheel; 19) Elastic washer; 20) M12x1 nut; 21) Woodruff key

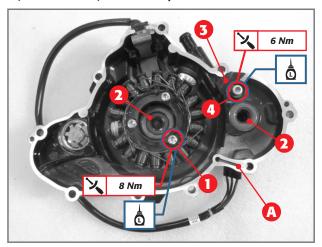

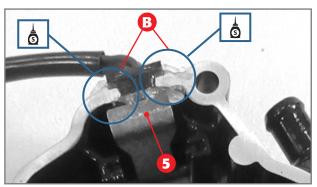

Application of cable protection plate 5. Note the two zones B where a drop of gasket paste must be applied.

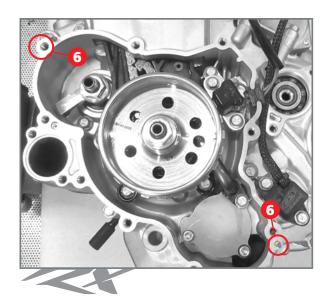

Thoroughly degrease the crankshaft conical section, apply the Woodruff key 21 in the appropriate groove present on the crankshaft, couple the flywheel 18, the elastic washer 19 and the nut 20, after having spread the threading with medium strength threadlocker. Tighten the nut to the indicated torque.

Couple the stator to the flywheel cover by means of screws 1. Cover the threading with medium strength threadlocker and tighten them at the torque indicated. Insert the cable gland in its specific seat and check its perfect tightness.

Check the state of use of the two oil seals **2** . If they are deteriorated, they must be replaced.


Blow compressed air in the hole A making sure the lubrication pipe is perfectly clean. Also check the state of use of the chain guide 3. If it is deteriorated, it must be replaced. In that case, before putting on the screw 4, apply it with medium strength threadlocker and tighten it to the indicated torque.

Reposition the plate **5** which must be inserted in the relevant guides and pressed towards the outside of the cover.

When coupling it to the left crankcase half, apply a drop of gasket paste in the two zones **B**, in order to ensure perfect sealing between the cover and the crankcase half in the concerned zone.

Insert the centring pins **6** on the crankcase and fasten a new gasket.



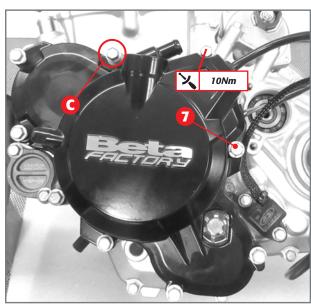

Flywheel cover coupled to crankcase.

Grease the oil seal on the flywheel cover and couple it to the left crankcase with the M6x25 screws **7**.

Notice that a copper washer (12x6.3x1) **C** must be applied to the screw.

Tighten the screws at a torque of 10Nm.





Position to measure the outside diameter of the piston.

### 3.16 THERMAL UNIT

Before assembling the thermal unit, thorough controls must be carried out on the cylinder, piston, pin bolt, piston rings, cylinder head and the timing unit described hereafter.

## 3.16.1 CHECKING THE PISTON, PIN **BOLT AND PISTON RINGS**


Remove carbon sediment from the top of the piston and wash the entire piston with specific degreasing


Do not use sharp points or tools for cleaning.

Then carry out a careful analysis of the piston which must be free from forcing, scratches, cracks or any type

Analyse the outside diameter of the piston whose service limit is carried in the table below concerning their specific class. The diameter must be measured at a distance X from the inner edge of the skirt, perpendicularly to the axis of the pin bolt.

Displacement [cm3]	Measurement X [mm]	Service limits based on relevant class [mm]		
Displacement [cm³]		1	2	
450	6	96.94	96.95	

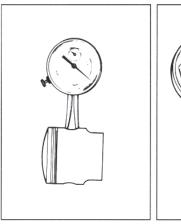

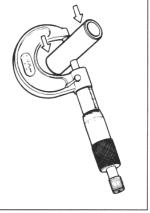


Measurement of pin bolt seat and pin bolt.

Check the size of the pin bolt seat located on the piston and the size of the pin bolt. This last control must be made at the end of the pin bolt itself in the area where it is engaged with the piston.

Displacement	Size limit [mm]		
[cm³]	Pin bolt seat	Pin bolt	
450	19.02	18.98	

To check the small end of the connecting rod, see the section on checking the crankshaft and connecting rod (par. 2.2).



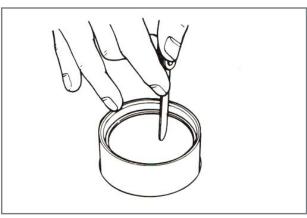

Elastic band wear limit check.


In order to check the state of use of the elastic band and oil-scraper band, the band must be inserted in the cylinder so that its axis is aligned with the axis of the cylinder. Then measure the distance between the two opposite edges.

The respective service limits are set out in the table below.

Displacement [cm³]	Service limit of elastic band [mm]	Service limits of upper and lower oil- scraper band [mm]
450	0.8	1.0





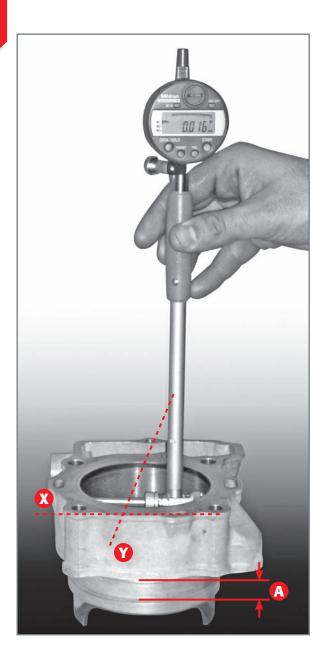

## 3.16.2 CYLINDER CHECK

Make sure the bore is within the service limits of the relevant class carried in the table below.

Carry out measurement at a distance A from the top of the cylinder (surface between cylinder and cylinder head). To measure it correctly, it must be done according to the X and Y directions orthogonal to each other. Consider the maximum measurement to determine the cylinder wear.

The difference between the two measurements is the ovalization.

This measurement must be carried out by placing the bore meter in such a way that its axis is perpendicular to the axis of the crankshaft.

Displace-	Meas-	Service limits based on relevant class [mm]		
ment [cm³]	urement A [mm]	1	2	Ovalization [mm]
450	30	97.022	97.035	0.015

## 3.16.2.1 Coupling clearance


The following table sets out the coupling play between cylinder and piston.

In order to calculate the coupling play between cylinder and piston, a subtraction must be carried out between the diameter of the cylinder and that of the piston.


Displacement	Coupling p	Coupling play based on relevant class [mm]			Coupling play limit based on relevant c [mm]	
[cm³]	Cla	ss 1	Cla	ss 2	Class 1	Class 2
	Min	Max	Min	Мах	Class 1	
450	0.035	0.057	0.037	0.060	0.10	0.10






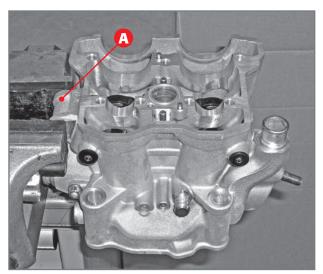

Blocking cylinder head on vice.

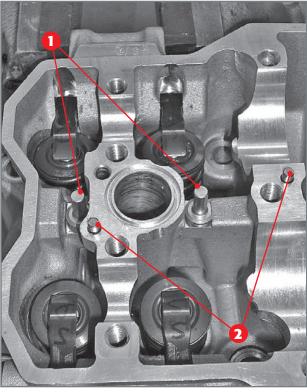

The oil jets 1 for the lubrication of the cylinder head and the two centring pins 2.

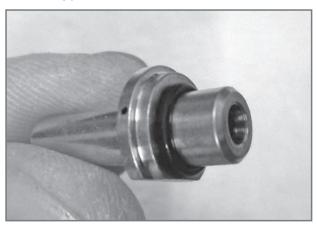

Detail of the lubrication oil jet 1.

# 3.16.3 CYLINDER HEAD: DISASSEM-BLING AND CHECKING AUX-ILIARY DEVICES

Before disassembling the cylinder head, clean the entire unit thoroughly. The various elements must be cleaned and decontaminated bit by bit as they are disassembled. Proceed as follows for disassembly and inspection of the cylinder head. Lock the head in the vice with the protective jaws, gripping it from the head connection **A**. Proceed with the disassembly of the spark plug using the specific plug wrench (code 020440100 000).


# 3.16.3.1 Lubrication jets and centring pins

Pull out the two oil jets 1 for lubricating the cylinder head and make sure the holes are free from any impurity. Take off the O-rings. If damaged, replace them.


Pay attention to the two centring pins 2.






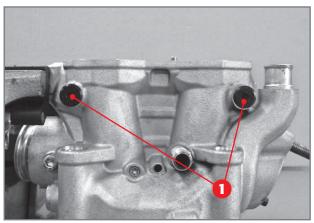

Closing caps for rocker arm support shaft seats.

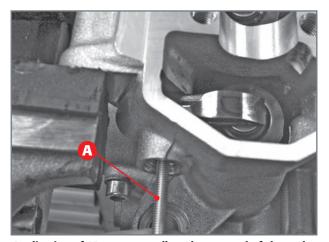

Application of M4 screw to allow the removal of the rocker arm support shafts.

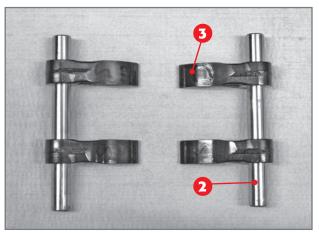

Rocker arm/shafts unit.

## 3.16.3.2 Rocker arm pins unit

Disassemble the two caps 1 which keep the rocker arm pins in place.

Make sure the face of the cap facing the shaft does not have deep traces or signs of wear. If so, replace the caps.

Check the state of use of the two O-rings between the caps and the cylinder head.


The rocker arm pins have a threaded hole (M4) at the end so that they can be extracted. To pull them out, just screw a sufficiently long M4 screw A in this hole and pull out. In this way, the rocker arms can be extracted.

Make sure the outside diameters of the pins 2 and the inside diameters of the holes on the rocker arms 3 respect the following service limits:


Shaft service limit: 6.98mm Rocker arm service limit: 7.03mm Play limit: 0.05mm

Check to see that the contact areas between the rocker arm and the calibrated discs, and between the rocker arm and the cams are not chipped or particularly worn. If so, replace the rocker arm.



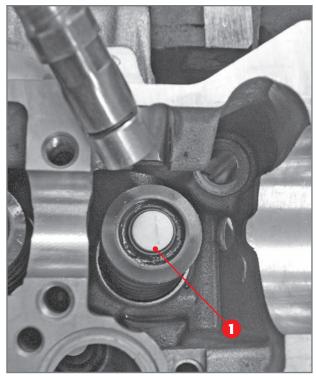

Removal of calibrated discs from seats.

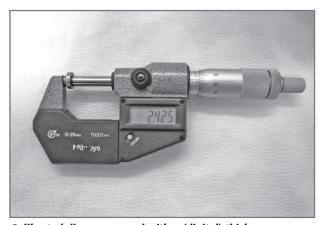

Calibrated discs measured with a (digital) thickness gauge.

# 3.16.3.3 Calibrated discs for valve backlash adjustment

Using a magnet, pull out the calibrated discs 1 from the seats in the cups.

Once the calibrated discs are extracted, measure them with a thickness gauge.

The calibrated discs range from 2.00mm to 3.200 according to the intervals carried in the table below.


Thickness interval[mm]	Step [mm]	
2.000 ÷ 2.300	0.050	
2.325 ÷ 3.000	0.025	
3.050 ÷ 3.200	0.050	

Once you have done the measurement, take note and mark the calibrated disc depending on its original position.


Should the calibrated discs be deteriorated, replace them with others having the same dimensions. Thus you can know whether to replace it with a thicker or thinner calibrated disc when determining the valve backlash.






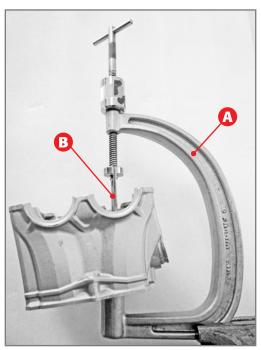

Positioning of cylinder head on device for valve spring disassembly.

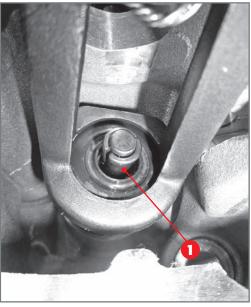

Extraction of half-cones.

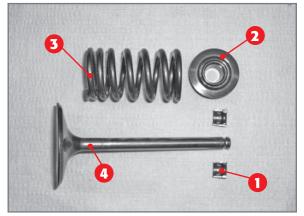

Valve unit.

# 3.16.4 CYLINDER HEAD: DISASSEM-BLING AND CHECKING THE VALVE UNITS

Lock in place the spring assembly/disassembly jaw **A** (code 0100043 000) in the vice and apply the spring assembly/disassembly tool **B** (code 006140030 000). Then position the cylinder head and disassemble the springs.


Compress the spring as much as necessary to extract the half-cones 1.

After extracting the half-cones, release the spring and extract the cup **2**, the spring **3** and the valve **4**.


## ATTENTION!

Mark all the pieces you disassemble. Pay particular attention to the valves.



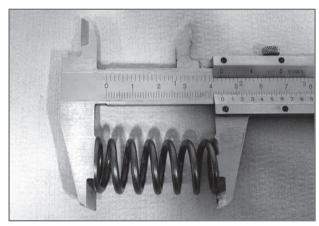

Measuring length of free spring.

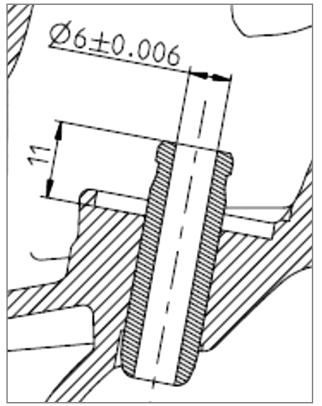

Reference dimensions for processing and fitting the valve quide.

## 3.16.4.1 Springs

Each valve is retained by a spring. The length of these springs must be checked while they are loose:

#### service limit = 42 mm

Should the springs be shorter, have them replaced.

## 3.16.4.2 Valve guides, valves and seats

Make sure that the valve guides are free from scratches or any type of nicks. To check that the diameter is correct, insert the control gauge *code* 006140180 000 in the valve guide from the combustion chamber side. If the gauge can enter, the valve guide must be replaced at a rectification workshop.

To this purpose, comply with the data shown in the drawing.

Remember that when replacing the valve guides, the seats of the valves must be repassed as described later on.

Brush the valve mushroom head thoroughly and degrease the entire valve.

Make sure that the valve stems are free from scratches or any type of nicks. Measure the diameter of the valve stems, making sure it is not less than the service limit:

## Valve stem diameter service limit: 5.95mm

Otherwise, replace the valve.

Play between the valve and the valve guide must not be greater than the limit carried below:

## Play limit between valve and valve guide: 0.08mm

Check that the valve mushroom and seat contact area is not dented: if so, replace the valve.

Check the state of wear of the valve seats and the sealing surface. In order to do this, apply a light layer of Prussian blue paint on the contact zone of the valve with the seat. Then insert the guide valve until you press it against the seat and turn it on its own axis.






Taking the valve out, the paint will be missing in the contact zone. Its width must not be greater than the following service limit:


### Width service limit of valve seat contact zone: 1.9 mm.

The contact zone can principally take on three different appearances, as shown in the figure:

- A correct;
- B- incorrect (contact face damaged);
- C incorrect (uneven seat width).

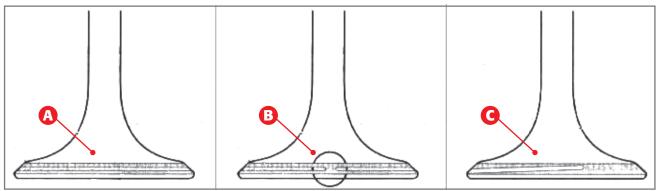


Valve-seat contact conditions: A) Correct; B) Incorrect - contact face damaged-; C) Incorrect - uneven width.

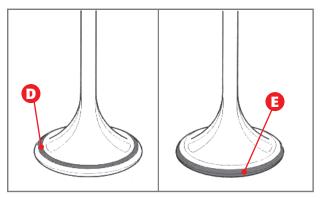

Positioning of contact area: D) too high; E) too low.


Also check the correct positioning of the contact area. It must be neither higher (case **D**) or lower (case **E**). Should the incorrect conditions described above occur, the valve seats must be rectified, respecting the conditions carried in the following drawing.

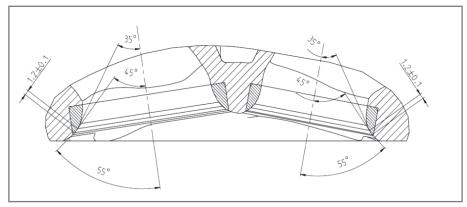


Taking the valve out, the paint will be missing in the contact zone.

If the valve seats are beyond recovery, replace the cylinder head.




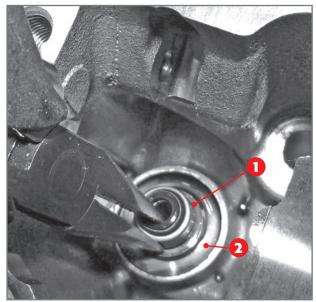

Removal of valve stem oil scraper rings.

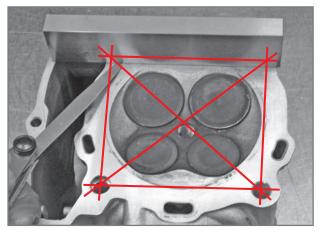

Reference dimensions for processing and fitting.

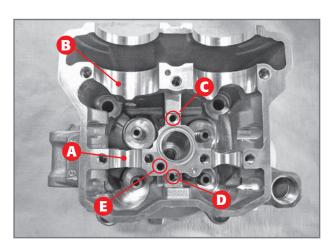

## 3.16.4.3 Oil-scraper rings and lower cup

Should there be excessive oil consumption or a whitelike exhaust smoke which cannot be blamed on the oil-scraper bands on the piston, replace the oil-scraper rings 1, intended to prevent excess oil leakage.

It is recommended to replace them every time the cylinder head is overhauled.

In order to replace them, use needle-nose pliers to pull them out, being careful not to nick the valve guide. Once the oil-scraper ring is extracted, the lower cup can be pulled out **2**.

# 3.16.5 CYLINDER HEAD: CHECKING THE CYLINDER HEAD BODY

Check the flatness between the head and cylinder coupling surfaces.

This can be done with a rectified block and a thickness gauge by positioning the block according to the directions shown in the figure.


The service limit is as follows:

cylinder head service limit: 0.05mm


Check that the state of use of the sliding zones **A** with the camshafts and **B** of the camshaft support bearing housing are free of scratches or signs of meshing. Clean the oil passages for lubricating the cylinder head by blowing compressed air into the holes **C**, **D** and **E**.





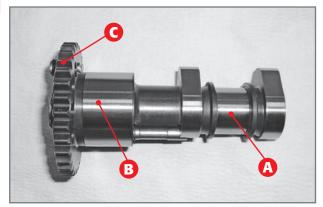

Cam zones to be checked.

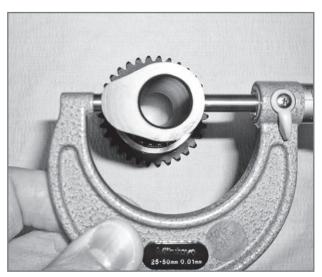

Cam height measurement.

## 3.16.6 CHECKING THE CAMSHAFTS

Verify the zones **A** and **B** on the camshafts making sure they have no traces of meshing or abnormal wear. Make sure the sides of the teeth **C** are not chipped or have no trace of abnormal wear.


The zone **A** comes into contact with the cylinder head becoming part of a hydrodynamic support bearing. Zone **B** on the other hand supports the roller bearing.

Make sure that the shafts in the cam zones are free of abnormal colouring which is typical when working without oil.

Use a thickness gauge to check the wear limit of the cams referring to the values carried in the table.

Sometimes the cams can be scratched and this can be accepted, provided that the profile is within the envisaged limits of wear.

	Intake		Exhaust	
Displacement [cm³]	Nominal size [mm]	Limit size [mm]	Nominal size [mm]	Limit size [mm]
450	34.1	34	33.75	33.65

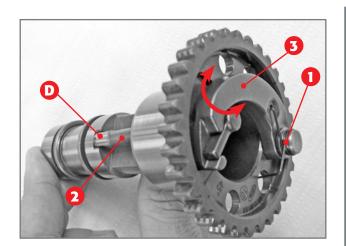


Check on the exhaust camshaft that the spring 1 of the centrifugal decompressor recalls the rest of the device so that the cylinder segment **D** of the rod **2** protrudes completely without any play.

Turn the lever **3** all the way to make sure the device is not jammed.


Make sure that the cylinder segment **D** of the decompressor is not worn or chipped.

Should it be deteriorated, replace the decompressor shaft.



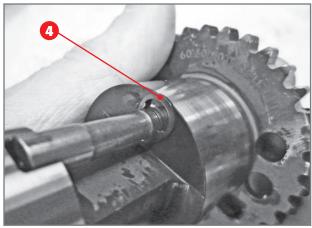

Extraction of Benzing ring from decompressor shaft.

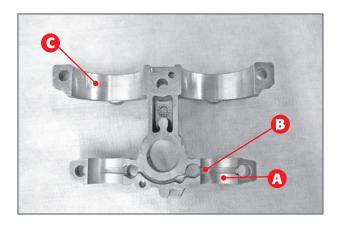

In order to extract it, remove the Benzing ring 4 and pull the shaft out. Operate inversely to reassemble it. When replacing the decompressor shaft, replace the Benzing ring as well.

# 3.16.7 CHECKING THE CAMSHAFT CLOSING BRIDGES


The camshafts supports fasten the shafts so that they maintain the correct position while operating. The support in the zone **A** has a channel **B** intended to lubricate the camshaft to allow the hydrodynamic support of the shaft itself. Therefore, make sure that the zones **A** are free from scratches or traces of corrosion. Make sure the zones **C** for housing the roller bearings have no traces of meshing or scratches.

## ATTENTION!


If the support needs to be replaced, the cylinder head must be replaced as well.





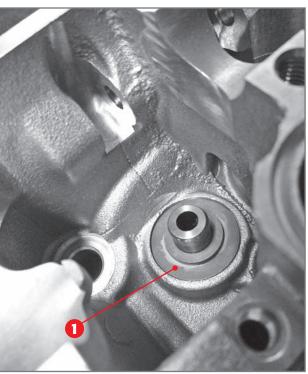

Insertion of lower cup.

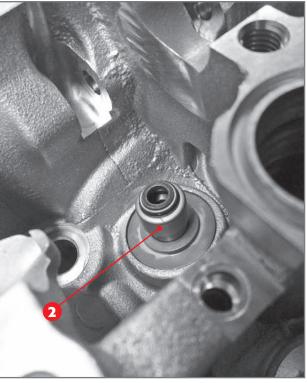

Insertion of oil-scraper ring.


# 3.16.8 CYLINDER HEAD: INSERT-ING THE LOWER CUP AND OIL-SCRAPER RING

If the lower cups and oil-scraper rings were disassembled\*, reassemble them as follows.


First insert the lower cup 1 facing the flat part downwards. Lubricate the upper part of the valve guide lightly and insert the oil-scraper ring 2. Pay close attention that while inserting the valve stem seal, its axis is aligned with that of the valve guide. The oil-scraper ring must be pressed towards the bottom of the cylinder head until it is flush with the valve guide.



<sup>\*</sup> Remember the valve stem seals must be replaced once they have been taken off.

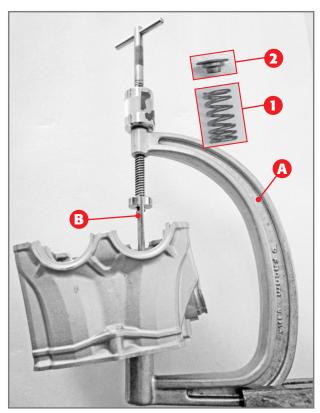

Positioning of cylinder head on device for valve spring disassembly/assembly.

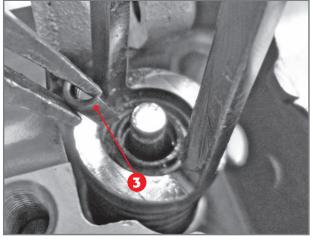

Spring compression, half-cones insertion. Insertion of valve stem seal.

# 3.16.9 CYLINDER HEAD: ASSEMBLY OF THE VALVE UNIT

Lock in place the spring assembly/disassembly jaw **A** (code 0100043 000) in the vice and apply the spring assembly/disassembly tool **B** (code 006140030 000). Insert the valve stem in the valve guide\* from the combustion chamber side.

Place the valve in the specific lower housing of the jaw and insert:


- The spring 1, being careful to insert it so that the segment with the smaller pitch faces downwards;
- The upper cup **2**, turning the flatter part upwards.

Compress the spring as much as necessary to extract the two half-cones **3**. To facilitate their insertion, apply a small amount of grease on the stem in the half-cone housing zone.







<sup>\*</sup> If the valves, valves guides and their seats have not been replaced, the valves must be put back in their original positions.

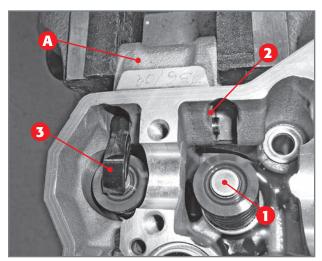

Insertion of pin 1, external rocker arm 2.

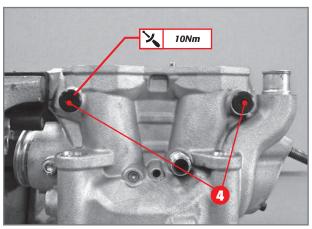

Application of two rocker arm pin caps.

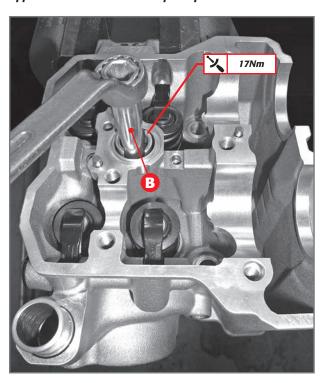

# 3.16.10 CYLINDER HEAD: REPOSITION-ING CALIBRATED DISCS. ASSEM-BLING ROCKER ARM PINS AND ROCKER ARMS AND COUPLING THE SPARK PLUG

Clamp the cylinder head using protective jaws, gripping it at the head connection **A**.


Put back the calibrated discs 1 (if not worn out, see par. 2.17.3.3) in their original position.

Insert the rocker arm shaft 2 partly in the specific seat as much as needed to be able to insert the outermost rocker arm 3 into the cylinder head first. Having fastened the outermost rocker arm to the shaft, push the shaft further until it reaches the seat of the innermost rocker arm. Having coupled the innermost rocker arm to the shaft, push it all the way into the cylinder head.


Couple the two caps **4** with the O-rings to the cylinder head.

They must be tightened to the indicated torque. *code* 020440100 000), insert the unit in the specific housing and tighten to the indicated torque.



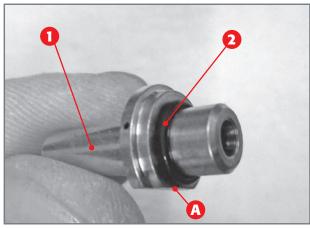

Oil jet with O-ring. Note flat reference area A on the side of the jet.

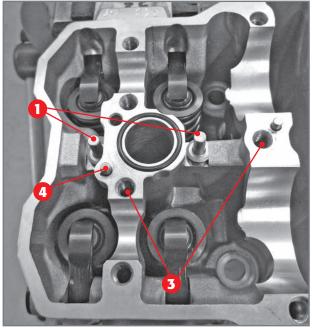

Overhead view of complete cylinder head.

# 3.16.11 CYLINDER HEAD: INSERTING THE OIL JETS, CENTRING PINS AND SPARK PLUG O-RING

Insert the oil jets 1 with the O-rings 2 in their specific seats on the cylinder head.

The positioning of the jets **A** is univocal thanks to the specific flat side.

If the centring pins **3** have been removed, put them back in place on the cylinder head. Apply the spark plug housing sealing O-ring **4** between the cylinder head and the camshaft bearing bridge.






#### 3.16.12 **PISTON**: **FITTING** THE **OIL-SCRAPER AND SEAL** STRIPS, FITTING THE CIRCLIP


#### 3.16.12.1 **Piston:** fitting the oil-scraper and seal strips

Oil the segment seats abundantly and apply the central oil-scraper band in the lower seat of the piston 1, paying close attention that the two ends face one another but do NOT overlap.


The two ends must be aligned in axis with the pin bolt.

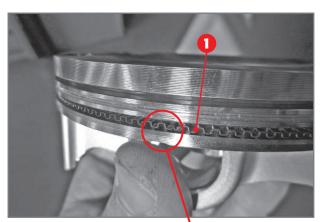

Application of the central oilscraper band.

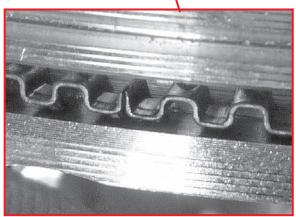

Detail of positioning of two edges.

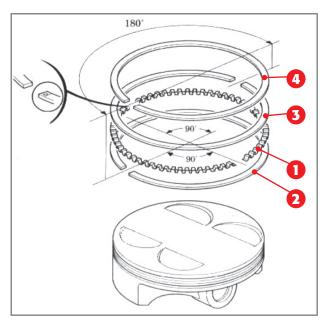


Application of piston segments.

Apply the two lower 2 and upper oil-scraper rings 3 and then the seal band 4.


The two oil-scraper rings must be placed so that their openings face the higher segment of the skirt and at 180° to each other. Assembly of the seal band 4 must be done keeping the reference (letter or number) facing upwards and the opening must face the same way as the opening of the lower oil-scraper ring 2.






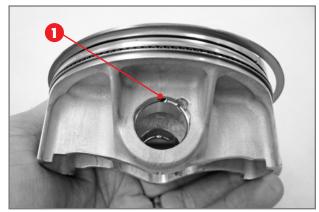

Application of circlip 1 to piston.

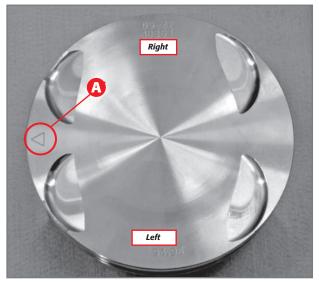

Identification of piston right and left side.

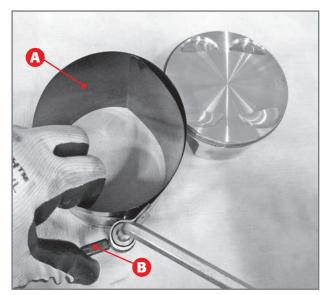

Preparation of elastic friction band A.

# 3.16.12.2 Piston: fitting the circlip

Generously lubricate the seats for the pin bolt with motor oil and the circlip 1 in the left pin bolt seat, being careful to position it so that the lug on the circlip inserts itself in the specific seat on the piston.

In order to identify the right and left side of the piston, as a reference just use the arrow **A** stamped on the piston crown which must face the exhaust manifold.

# 3.16.13 FITTING THE PISTON TO THE CYLINDER

To couple the piston to the cylinder, place the cylinder while keeping the top facing upwards. Oil the cylinder with plenty of motor oil.

Prepare the elastic friction band **A** (code 006140170000) as shown in the figure.


Press the green locking lever **B** and turn the hex key anti-clockwise until the band reaches a dimension similar to that of the piston. Oil the inside of the band abundantly and insert the piston with all its segments inside of it. Press the green locking lever again and turn the hex key clockwise to tighten the segments and piston well.

## ATTENTION!


The elastic band has edges which could be sharp. Be very careful when handling it.





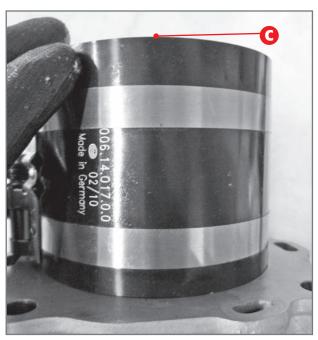


Application of the complete piston band on cylinder.

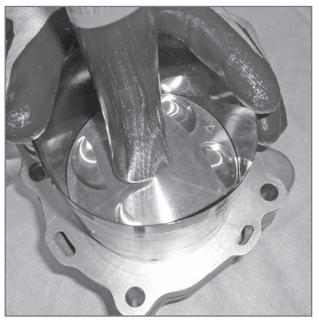

Insertion of piston into the cylinder.



 Application of pin bolt to piston.



Note: When positioning the complete band-piston unit on the cylinder, be careful to place them so that the arrow stamped on the crown of the piston faces the exhaust manifold.


Holding the band firm with one hand, push the piston inside the cylinder, making sure that the axis of the piston is aligned with that of the cylinder. Towards the end of insertion it might be necessary to use the wooden handle of a hammer or a similar tool to lightly tap the piston crown in order to facilitate its complete insertion in the cylinder.

#### ATTENTION!

During the whole operation, hold the band firm with one hand without moving it. Make sure that the segments insert themselves correctly in the cylinder when passing through the band. Should there be excessive resistance when inserting the piston into the cylinder, do not insist in order not to deteriorate the parts: assess the cause.

When the piston has been inserted into the cylinder and the band has been removed, press the piston towards the bottom of the cylinder so that the pin bolt seats come out from the lower edge. Apply the pin bolt 1 into the right-hand seat as much as needed to allow it to be coupled with the connecting rod.




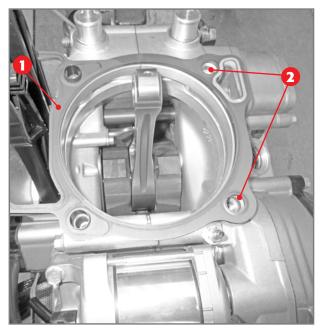

Application of cylinder/crankcase gasket and of centring bushes.



Passing the chain through the cylinder.

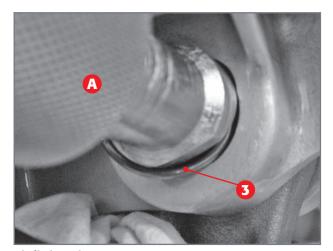

Circlip insertion.

# 3.17.14 FITTING THE PISTON-CYL-INDER COUPLING TO THE CRANKCASE

Apply a new piston-cylinder gasket 1 to the crankcase and couple the two centring bushes to the left crankcase 2.

Lubricate the foot of the connecting rod abundantly with motor oil.

Displace- ment [cm³]	Cylinder/crankcase gasket thickness [mm]	Quantity
450	0.5	2

Insert the timing chain in the proper compartment in the cylinder and bring the piston/cylinder unit close to the connecting rod.

Once the pin bolt reaches its housing in the foot of the connecting rod, push the pin bolt inside until it is inserted all the way. It may be helpful to use an aluminium cylinder (or similar tool) during this phase.

#### ATTENTION!


The elastic band has edges which could be sharp. Be very careful when handling it.

Apply the lug to the circlip **3** in the pin bolt seat. Insert the cylindrical part of the special tool **A** into the pin bolt and, having one of the two flat surfaces of the tool coincide with the part of the circlip to be inserted, turn and push the special tool towards the engine until the circlip is fully inserted into a seat.


Once the operation is complete, remove the previously inserted cloth.





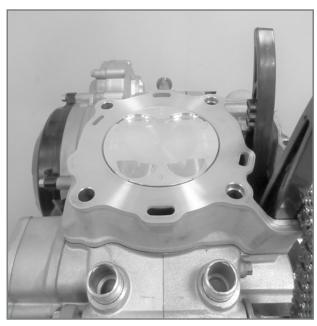

Coupling cylinder to crankcase.

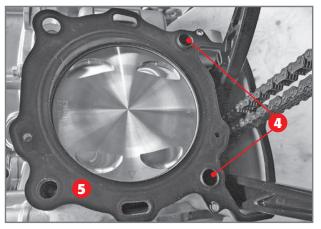


Application of guide bushes 4 and gasket 5 to cylinder.


Push the cylinder towards the crankcase making sure the two centring bushes on the left crankcase are correctly inserted in the seats in the lower part of the cylinder.

Apply to the cylinder the two guide bushes **4** and the gasket **5** coupling with the cylinder head.



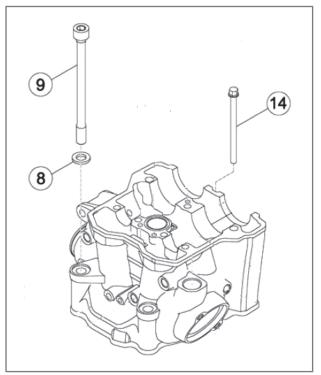

Application of components for coupling the head and cylinder to crankcase.

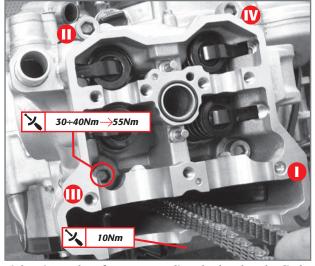

Tightening order of screws coupling the head and cylinder to crankcase.

# 3.16.15 COUPLING THE HEAD TO THE CYLINDER

Introduce the timing chain in the compartment on the cylinder head. Keeping the chain tight, place the head on the gasket making sure it inserts perfectly into the two centring bushes on the cylinder.

Lubricate the four washers **8** and insert them into their specific seats on the outside and inside of the cylinder head. Then insert the four M10x1.25 screws **9** - after having lubricated them- and the M6x80 screw **14** which connect the head and cylinder to the crankcase.

Tighten the four screws in two stages following a crisscross pattern and starting with one of the two screws inside the head.

The first tightening can be done at 30÷40Nm, while the second and last one is fixed at 55Nm.


The screw **14** must be tightened to the indicated torque. Keep the chain lifted so that it does not fall inside the chain compartment.






# B

Positioning camshaft.

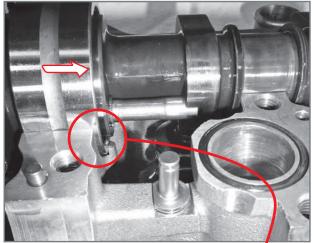

Positioning camshaft bearing.

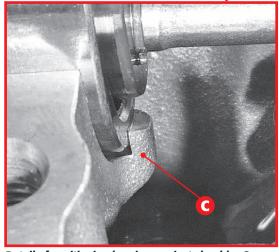

Detail of positioning bearing against shoulder C.

# 3.16.16 COUPLING THE CAMSHAFTS TO THE CYLINDER HEAD AND TIMING


Couple the bearings to the camshafts and lubricate them with motor oil.

Widening the timing chain, insert the exhaust camshaft upon whose gearwheel the timing chain must be placed. It is advisable already in this phase to position the shaft so that the reference notches **A** are horizontal with the cams facing upwards according to the approximate direction **B**.


Lift the camshaft slightly and move the bearing so that it is flush with the shoulder **C**.

Having carried out the above-mentioned positioning, rest the camshaft on the cylinder head.




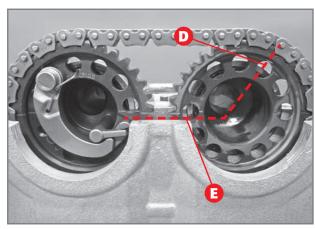

Application of components for coupling cylinder head

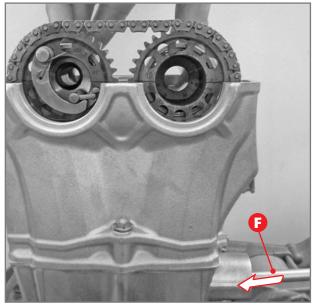

Phasing check. Note the pressure that the cylinder F exerts on the chain.

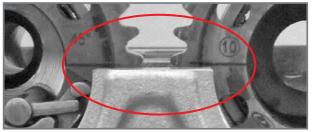

Detail of correct alignment of engraved notches on gearwheels of camshafts.

Lift the chain again and insert the intake camshaft placing the chain on the gearwheel. Place the shaft so that the cams face upwards according to the approximate direction **D** and the references **E** carved on the gear are horizontal.

Position the bearing in the same way as for the exhaust camshaft.

Holding the camshaft still with one hand, insert an aluminium cylinder **F** in the housing of the hydraulic tensioner as far as needed to be able to push the movable guide against the timing chain. Make sure that the notches engraved on the two gearwheels are aligned one with the other. If so, the phasing is correct. If not, release the cylinder **F**, lift the timing chain so that the gearwheels disengage allowing the needed rotation to obtain correct phasing.

Having checked phasing, extract the cylinder F.




Lubricate the entire camshaft unit with motor oil and apply the support 1, making sure it is perfectly engaged both on the shafts and on the centring pins.

## ATTENTION!


Make sure that pins, oil jets and O-rings are present, as detailed in par. 3.17.11

Apply the fixed pad 2 and insert the three M7x38 screws 3 in the holes on the chain side and the four M7x33 screws 4 in the four remaining holes.

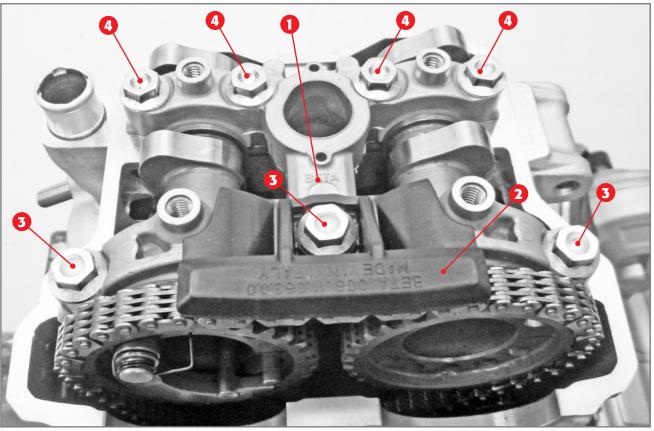


Application of camshaft bearing bridge 1, fixed pad 2, three M7x38 screws 3 and four M7x33 screws 4.



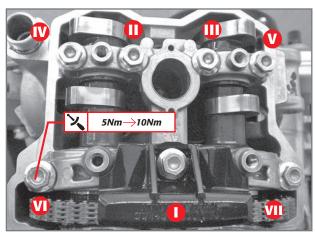

Tightening order of camshaft bearing bridge screws.

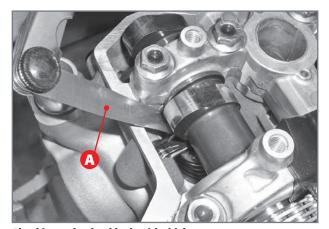

Checking valve backlash with thickness gauge.

Tighten the seven screws by hand until they stop. Check the correct position of the camshaft bearings as described on page 138.

Proceed with tightening in two moments, following the order indicated in the figure.

Carry out the first tightening operation at a torque of 5Nm and the second at 10Nm. At the end of this operation, make sure the camshaft moves freely.

## 3.16.17 VALVE BACKLASH

Checking for valve backlash must be carried out by placing a thickness gauge **A** (code 006140210000) in between the cam and the rocker arm. This control can be done even without the hydraulic tensioner coupled to the engine.

#### ATTENTION!

The piston must be positioned at the Top Dead Centre (par. 3.7)! Following the order of this text, this position is already fixed. Play must be within the values carried on the table below.

If the play measured is greater than that indicated, the calibrated disc must be replaced with a thicker one.

Side	Minimum [mm]	Maximum [mm]
Intake	0.10	0.175
Exhaust	0.125	0.20


On the contrary, if the valve backlash is less than that indicated, replace the calibrated disc with a thinner one

The value of the needed thickness can easily be assessed by calculating the difference between the detected play value and the one required.

The following is a layout for calibrated disc replacement.






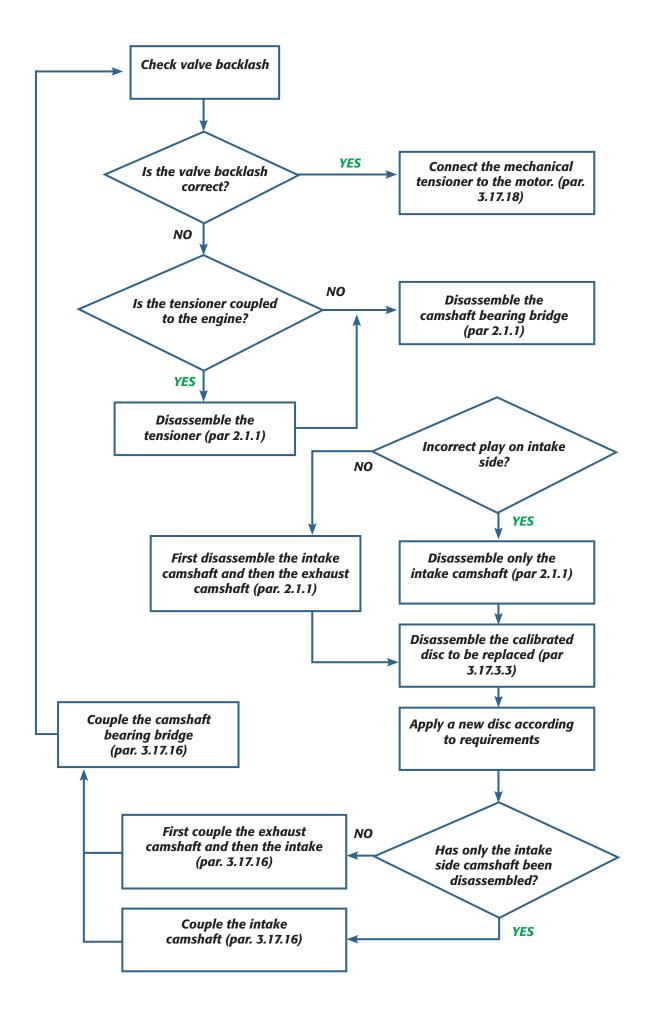







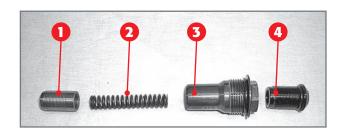

# 1mm

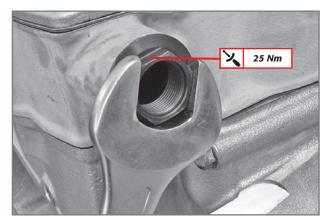

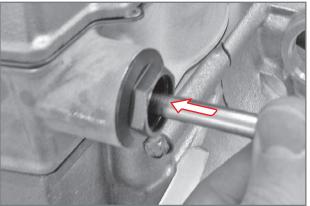

# 3.16.18 CHECKING AND COUPLING THE MECHANICAL TENSIONER TO THE ENGINE

The mechanical tensioner consists of:

- 1. a piston;
- 2. a spring;
- 3. a support;
- **4.** a cap.

Make sure the piston shows no signs of abnormal meshing.

Check that the length of the spring is not lower than the following limit value:


Spring limit length: 74mm


Insert the piston into the support and push it until it sticks out of the edge of the support by approximately 1 millimetre.

Insert the tensioner support in the specific seat on the cylinder, tightening it to the indicated torque and push the piston towards the front of the engine.






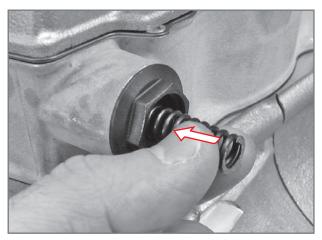

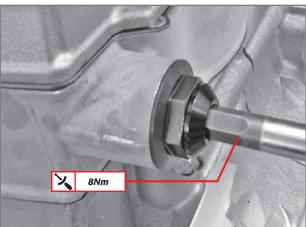



Insert the spring in the support and apply the cap to be tightened to the indicated torque.



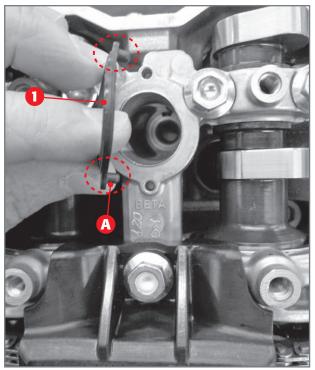

Application of spark plug gasket.

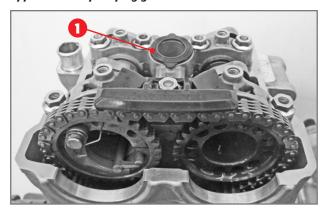

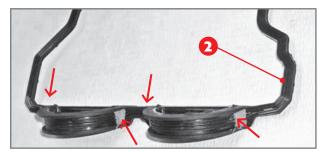

Edges where the gasket paste must be applied.



Insertion of gasket in groove on cylinder head cover.

# 3.16.19 COUPLING THE CYLINDER HEAD COVER GASKETS AND CYLINDER HEAD COVER


Apply the spark plug gasket 1 to the camshaft bearing bridge inserting the two pegs A in the specific seats and positioning it so that it recopies the shape on the support.

Apply a few drops of gasket paste in the edges of the cylinder head cover gasket **2**.

Insert the gasket in the cylinder head cover so that the protruding part fits perfectly into the groove in the cover.






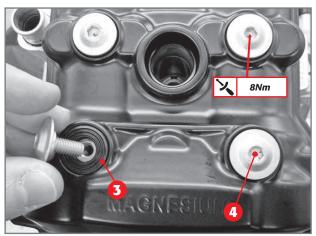

Application of rubber rings 3 and fixing screws 4.

Place the complete cover on the cylinder head making sure that the gasket covers the surface correctly. Apply the four rubber rings 3 to the cover and insert the four screws 4 which fasten the cover to the cylinder head. Tighten the screws in a criss-cross pattern to the indicated torque.

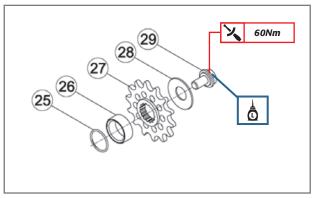


Exploded view of pinion unit. 25) O-ring 25x12x1.78; 26) Spacer 27) Pinion; 28) Washer; 29) Screw.

# 3.17 PINION COUPLING

If the O-ring **25** has not been coupled to the secondary shaft (par. 3.5), insert it after the spacer **26**. Then apply the pinion **27**, the washer **28** and the screw **29** which must be spread with medium strength threadlocker: tighten to the specified torque.

## ATTENTION!

Do not use pneumatic devices!

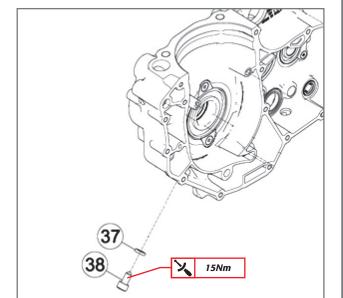

# 3.18 RELEASING THE CRANK-SHAFT

Remember that according to the order of this text, the crankshaft is blocked at the Top Dead Centre.


The crankshaft is released by removing the screw **38** (or the special tool code *006.14.011.0.000*). In case the special tool is used, replace it with the screw **38** and apply the copper washer **37** to said screw. Therefore reapply the screw-washer unit, tightened to the specified torque.



## 3.19 COUPLING OIL CAPS

Couple the engine oil drain plug **24** in the lower part of the right crankcase half, complete with O-ring **25**, with wire metal filter **27** and O-ring **26**. Tighten to the specified torque.

Apply the magnetic screw **28** with the O-ring **29** to the gear oil drain hole: tighten to the indicated toque.

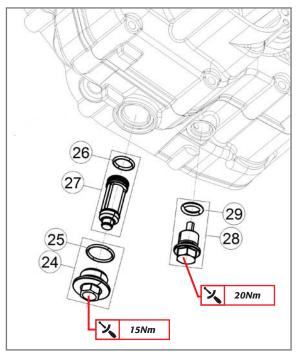

EXPLODED VIEW OF OIL DRAIN CAPS.


- 24) Motor oil drain plug;
- 25) 27x2 O-ring;
- 26) 20x1.5 O-ring;
- 27) Metal filter;
- 28) Magnetic screw;
- 29) 11x2.5 O-ring.





#### **COUPLING THE GEARSHIFT 3.20 LEVER**

Couple the gearshift lever to the drive shaft by positioning it so that the part **A** of the lever coincides with the upper edge of the oil level inspection window. Tighten the screw 1 to the specified torque after having applied medium strength threadlocker.

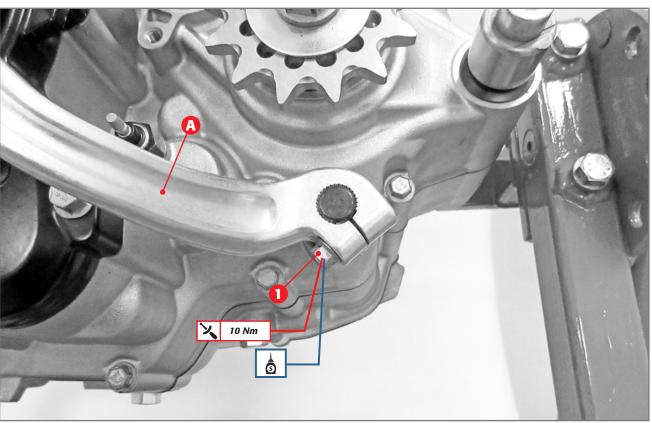


Positioning of gearshift lever.






### **REASSEMBLING THE ENGINE ON THE VEHICLE** 4

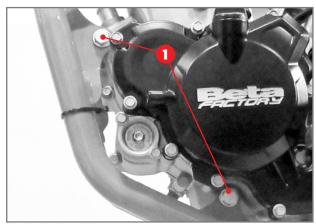

Insertion of engine pins.

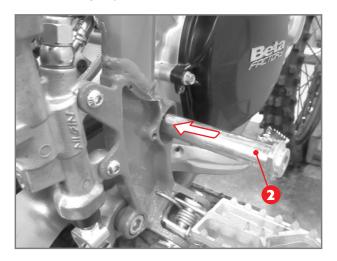

the swingarm pin 2 from the right side.


Reposition the swingarm in its correct position. Insert

Insert the engine in the frame. We recommend insertion

from the frame's left side. Insert the engine pins 1.






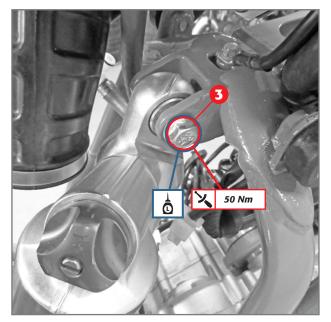

Insert the shock absorber upper pin 3 and the upper pin **4**.


**Note:** pay attention that the notch on the pin head is


aligned with the notch on the frame.

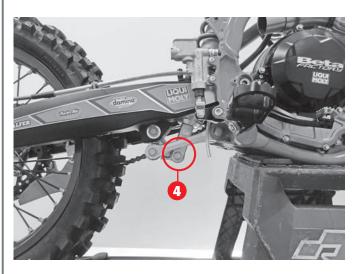





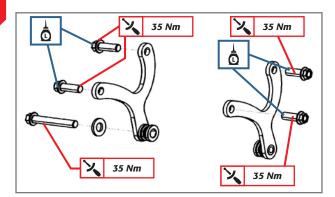

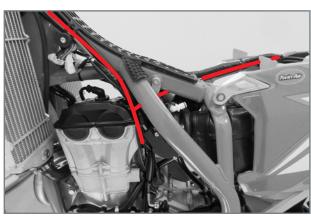

Apply the head connections.

Tighten the nuts and bolts following the table below.


**Note:** make sure to run the electrical system as shown in the figure

Fixing	Screw	Torque [Nm]	Threadlocker
Head connection bracket to frame. Front fixing Head connection bracket to	M8 x 16	35	Medium-resistance threadlocker
Head connection bracket to frame.  Rear fixing Head connection brackets to	M8 x 16	35	Medium-resistance threadlocker
Head connection brackets to engine	M8 x 70	35	
Engine pins	Special	45	
Swingarm pin	M16 x 245	125	







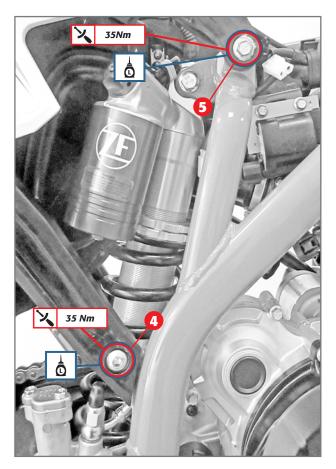

Put the throttle body on the engine.

Rotate the filter box in its normal position. Apply the lower fixing screws **4** (one each side) prior application of medium strength threadlocker and fasten to the indicated torque.

Tighten the upper screws 5 to the indicated torque.


Note: we recommend removing the upper screws (one each side) and apply medium strength threadlocker.

## ATTENTION!


During rotation, make sure the injector does not hit anything.





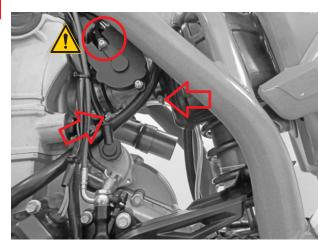



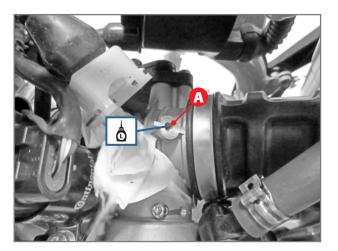

Make sure the filter box sleeve is correctly inserted inside the throttle body, fasten the two filter box side and manifold side straps.

Set the gas cable on the left side of the frame and make it pass outside the head connection.

Apply the gas cable to the throttle body and tighten

Apply the gas cable to the throttle body and tighten the nuts.

## ATTENTION!

At the end of the operation, check for correct gas play.


Secure the electrical wiring as shown in the figure. Reassemble the engine steam vents.


Apply a drop of medium resistance threadlocker to threaded bore  ${\bf A}.$ 


Remove the protective cloth previously applied in the injector housing.

Put the injector into its seat on the throttle body and push it all the way in.



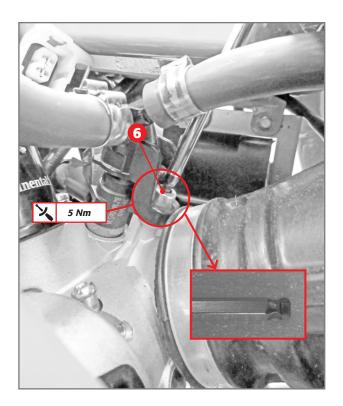

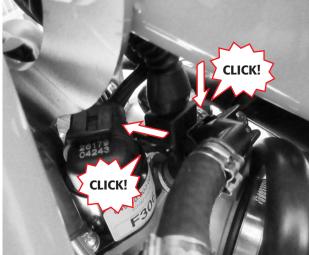

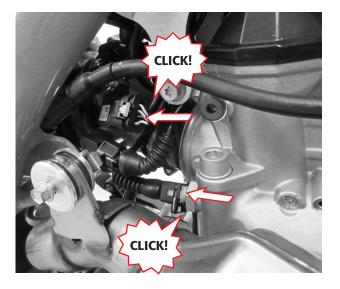

Fit the screw 6.


#### ATTENTION!


Take the utmost care to make sure screw 6 is perfectly aligned with the respective threading. Should the screw not be perfectly aligned with the threading, **DO NOT FORCE IT while tightening.** Instead, remove it and reposition it properly. We recommend using a key like the one shown in the figure during handling. Tighten to the specified torque.

Connect the electric connectors as shown in the figure.


**Note:** before making the connection, it is advisable to blow compressed air in the connectors and treat them with spray for electrical contacts.



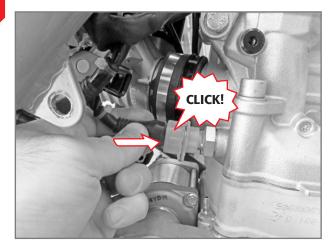

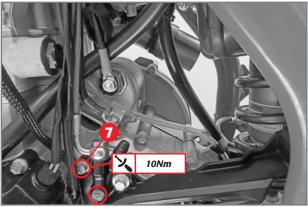



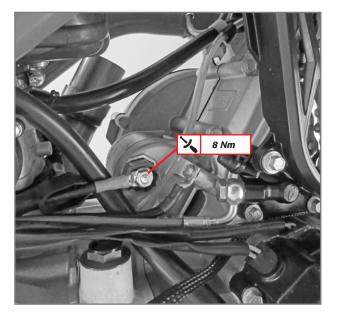

Apply the unit clutch actuator to the two fixing screws **7**. Tighten to 10Nm.


Apply the spark plug cap.


Apply the start motor cable and tighten the nut to the indicated torque.


Cover the connection using the specific protective cap.

**Note:**it is advisable to protect the electrical connector with a light veil of technical petroleum jelly.



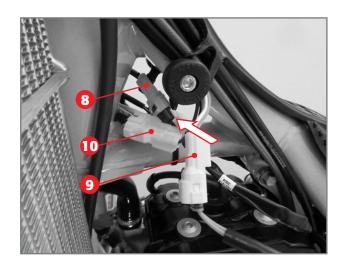

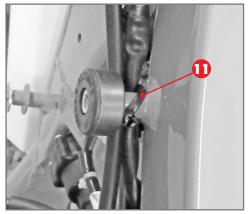

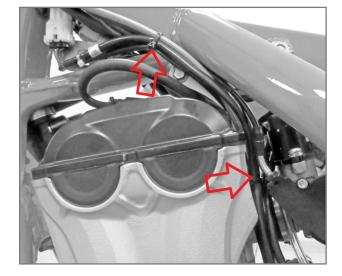

Insert connector **8** as shown, and connect it to the electrical system.

Connect the connector 9 to the electrical system.

Connect the connector **10** to the electrical system.


Apply a plastic tie **11** in order to collect the cables and pipes as shown.

Connect the ventilation pipes to the engine.


Fix the cables from the engine to the gear actuator tube.





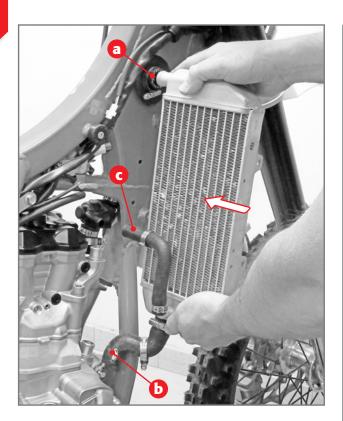

Apply the right radiator to the frame. The operation is easier if pipes are inserted observing the order shown in the figure.

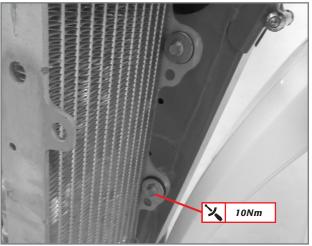


Apply the fixing screws and tighten them to the specified torque.




Tighten the clamps indicated.



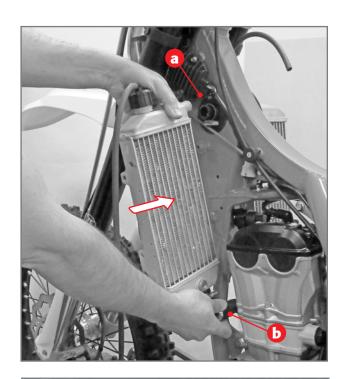

Apply the left radiator to the vehicle. The operation is easier if pipes are inserted observing the order shown in the figure.

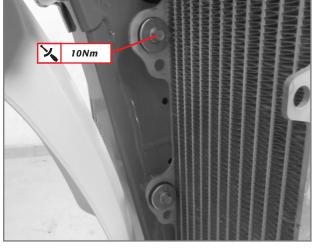

Apply the fixing screws and tighten them to the specified torque.




Tighten the clamps indicated


Apply the radiator grids paying attention to their correct insertion.

Insert the liquid coolant. Remember to keep the vehicle in vertical position. To optimize draining tilt the vehicle slightly to the right.





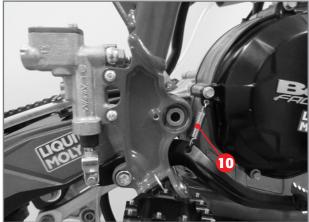

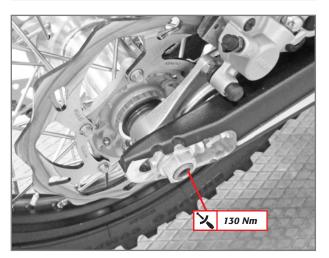

Apply the brake pedal return spring 10.

Mount the chain on the pinion.

Move the wheel towards the rear, mounting the adjustment frames according to the image.


### ATTENTION!

Before fastening the rear wheel, check for its correct alignment.


Tighten the nut to the indicated torque.





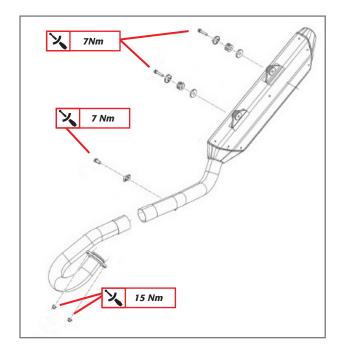

Apply the silencer to the vehicle and then the exhaust manifold; fasten to the torque indicated in the figure.

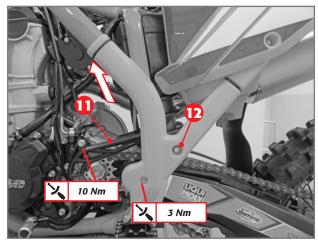



Apply the pinion guard 11 and the frame side guards 12 and 13.


Tighten the screws at 10Nm and apply the fixing straps between side guards and frame.





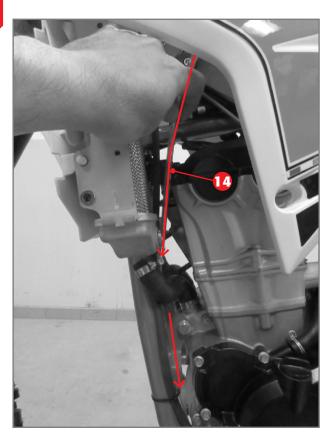

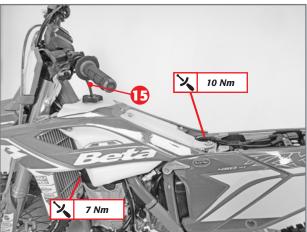

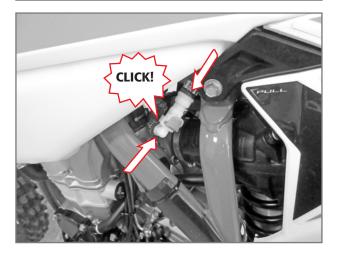

Insert pipe **14** observing its path as shown in the figure. Push the tank towards the front and downwards.


Tighten the tank screws to the indicated torque. Reconnect pipe **15**to the tank.


Connect the petrol fittings by fully engaging them.


### ATTENTION!

Make sure that the petrol quick-release couplings are fitted properly.



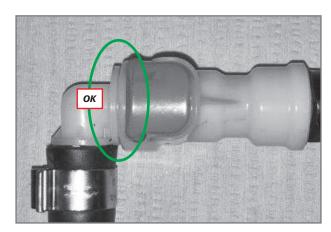

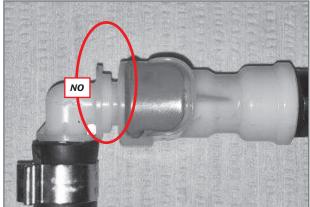

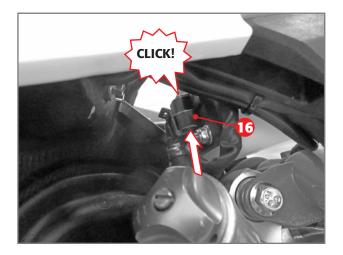

### ATTENTION!

Make sure that the petrol quick-release couplings are fitted properly.

Fasten the screws to the tank to the indicated torque.

Apply the seat.

After removing the motorcycle from the stand, reapply the engine guard plate with the three fixing screws. Tighten to 10Nm.

Reconnect the petrol pump connector 16.



# **TABLE OF ENGINE COMPONENTS TIGHTENING TORQUES**

Fixing	Threading diameter x length [mm]	Quantity	Threadlocker	Torque [Nm]	Notes
	Outer side right cr	ankcase half	,		
Oil seal fixing plate	M5 x 10	2	Medium-resistance threadlocker	6	
Oil incline	M5 x 10	2	Medium-resistance threadlocker	4	EN AW7075
	Inner side right cr	ankcase half			
Crankshaft bearing fixing plates	M6 x 12	2	Medium-resistance threadlocker	8	
Gearbox main shaft bearing fixing plate	M6 X 12	1	Medium-resistance threadlocker	8	
Secondary gearbox shaft bearing fixing plate	M6 X 12	1	Medium-resistance threadlocker	8	
Desmodromic control bearing fixing	M5 X 12	2	Medium-resistance threadlocker	4	EN AW7075
	Outside left cran	kcase half			
Countershaft bearing fixing	M6 X 12	12	Medium-resistance threadlocker	8	
Oil jet	M5	1	Medium-resistance threadlocker		Tighten all the way
Oil jet	M4	1	Medium-resistance threadlocker		Tighten all the way
Neutral sensor	M5	2		6	
	Inside left cran	kcase half			
Crankshaft bearing fixing plates	M6 x 12	2	Medium-resistance threadlocker	8	
	Cranksh	aft			
Left-hand side nut	M32	1	Medium-resistance threadlocker	150	
Right-hand side nut	M20	1	Medium-resistance threadlocker	150	Left thread
Crankshaft blocking	M8x16	1		15	With copper spacer
	Gearsh	ift			
Stop cam	M6 x 30	1	Medium-resistance threadlocker	10	
Gear stopping device lever	M6 x 20	1	Medium-resistance threadlocker	10	
Gearshift lever	M6 x 25	1	Medium-resistance threadlocker	10	
	Electric kickstar	ter device			
Torque limiter	M6 x 25	1	Medium-resistance threadlocker	10	
Starter motor	M6 x 20	2	Medium-resistance threadlocker	10	
Ignition gear	M5 x 12	2	Medium- resistance threadlocker	4	EN AW7075





Fixing	Threading diameter x length [mm]	Quantity	Threadlocker	Torque [Nm]	Notes				
Engine lubrication									
Oil jet	M4	10	Medium-resistance threadlocker	6					
Oil pump covers	M5 x 12	5	Medium-resistance threadlocker	4	EN AW7075				
Chain oil jet	M5 x 12	1	Medium-resistance threadlocker	6					
Oil pressure control screw	M12 x 10	1		20					
Paper oil filter cap	M6 x 16	2		10					
	Co	untershaft							
Locking nut	M12	1	Medium-resistance threadlocker	50					
		Clutch							
Drum nut and clutch case	M18	1	Medium-resistance threadlocker	120					
Clutch pressure cap	M6 x 25	6		10					
Clutch actuator	M6 x 20	2		10					
Clutch actuator	M6 x 30	1		10					
Outer clutch cover	M6 x 25	6		10					
Outer clutch cover	M6 x 30	1		10					
Inner clutch cover	M6 x 25	10		10	See water pump cover screws as well				
Inner clutch cover	M6 x 60	5		10	See water pump cover screws as well				
	W	ater pump							
Impeller blind nut	M6	1	Medium-resistance threadlocker	6					
Cover	M6 x 40	4		10					
	Timing	g chain guards							
Fixed and movable guides	M6 x 25	2	Medium-resistance threadlocker	10					
Chain guide on flywheel cover	M5 x 10	1	Medium-resistance threadlocker	4					
Chain guard	M6 x 20	2	Medium-resistance threadlocker	10					
	Igni	ition system							
Pick-up unit	M5 x 12	2	Medium-resistance threadlocker	6					
Pick-up unit plate	M5 x 12	2	Medium-resistance threadlocker	6					
Stator winding	M5 x 30	3	Medium-resistance threadlocker	6					
Flywheel	M12	1	Medium-resistance threadlocker	60					
Spark plug	M12	1		17					
Cover	M6x25	9		10					





Fixing	Threading diameter x length [mm]	Quantity	Threadlocker	Torque [Nm]	Notes				
Head									
Rocker arm pin caps	M10	2		10					
Head	М10	4		40→55	Lubricate threading and washers. Follow a criss-cross pattern				
Head	M6	1		10					
Camshaft support	M7 x 38	3		<b>8</b> ⇒10	Follow a criss-cross pattern				
Camshaft support	M7 x 33	4		<b>8</b> ⇒10	Follow a criss-cross pattern				
Exhaust flange stud	M8 x 30	2	Medium- resistance threadlocker						
Electric fan sensor	M12	1		20					
AIS valve fitting	M10	1		10					
Cover	M6 x 12	4		8					
	Mech	anical tensio	ner						
Tensioner cap	M24	1		25					
Small tensioner cap	M16	1		8					
	C	hain pinion							
Pinion	M10 x 18	1	Medium- resistance threadlocker	60	Do not use pneumatic devices!				
	Gearb	ox oil fumes							
Bored screw	M6x1	1	Medium- resistance threadlocker	6					
Oil drains									
Motor oil plug	M20	1		15					
Gearbox oil magnetic screw cap	M14	1		20					
	Pedal ki	ckstart (Kicks	tarter)						
Kickstart lever	M8 x 26	1	Medium- resistance threadlocker	25	Do not use pneumatic devices!				





# **TABLE OF FRAME/ENGINE TIGHTENING TORQUES**

Fixing	Diameter x pitch [mm]	Quantity	Threadlocker	Torque [Nm]	Notes
Front engine pin	M10 x 1.25	1		45	
Lower engine pin	M10 x 1.25	1		45	
Head connection bracket to front frame	M8x20	2	Medium- resistance threadlocker Medium-	35	
Head connection bracket to rear frame	M8x16	2	Medium- resistance threadlocker	35	
Head connection brackets to engine	M8x65			35	
Swingarm pin	M16 x 1.5	1		125	

# **TABLE OF SUPERSTRUCTURE TIGHTENING TORQUES**

Fixing	Diameter x pitch [mm]	Length [mm]	Quantity	Threadlocker	Torque [Nm]	Notes
Tank to the frame	M6 x 1	30	1		10	Application of grease
Tank side panel to the radiator	M6 x 1	20	2		7	





### **RECOMMENDED ENGINE MAINTENANCE**

The required engine maintenance strictly depends on the level of use and compliance with inspection frequency. The following frequency intervals refer to normal use, as long as the engine has not worked in extraordinary conditions and that the periodic inspections and interventions have been correctly carried out.

ENGINE	Break-in	Service 1 10 hours	Service 2 20 hours	Service 3 30 hours	Service 4 40 hours	Service 5 50 hours	Service 6 60 hours	Service 7 70 hours	Service 8 80 hours	After every use
Engine oil	R	R	R	R	R	R	R	R	R	С
Gearbox and clutch oil	R	R	R	R	R	R	R	R	R	С
Paper oil filter	R		R		R		R		R	
Metal mesh oil filter	P	P	P	P	P	P	P	P	P	
Engine fixing screws	С	С	С	С	С	С	С	С	С	
Head screws	Т				С				С	
Gear lever	С		С		С		С		С	
Spark plug cap									R	С
Spark plug					R				R	
Vent pipes	С		С		С		С		С	
Countershaft bearings									R	
Crankshaft bearings									R	
Connecting rod									R	
Piston and segments					R				R	
Cylinder					С				С	
Cam superficial appearance					С				С	
Valve backlash	С		С		С		С		С	
Valves					С				С	
Valve guide					С				С	
Valve springs					С				С	
Timing chain									R	





ENGINE	Break-in	Service 1 10 hours	Service 2 20 hours	Service 3 30 hours	Service 4 40 hours	Service 5 50 hours	Service 6 60 hours	Service 7 70 hours	Service 8 80 hours	After every use
Timing chain pad									R	
Drive clutch discs			С		R		С		R	
Clutch Belleville washers			С		С		С		R	
Clutch hub - case			С		С		С		С	
Gearbox bearings (main shaft)									R	
Gearbox superficial appearance									С	
Water pump oil seals									R	
Oil pump control gearwheels									R	
Silencer sound-absorbing material			R		R		R		R	

- Check (Cleaning, adjustment, lubrication, replacement if required)
- R Replacement
- A C T Adjustment
- , Cleaning Tightening

## **RECOMMENDED LUBRICANTS AND LIQUIDS**

APPLICATION	PRODUCT	QUANTITY
Gearbox and clutch	Liqui Moly racing Synth 10W50	800 ml* - 750ml**
Engine	Liqui Moly racing Synth 10W50	800 ml* - 750ml**
COOLANT LIQUID	Liqui Moly Coolant ready mix RAF 12 PLUS	1300 ml*





Following the complete engine overhaul. Following routine maintenance interventions.

NOTE:			







## BETAMOTOR S.P.A.

PIAN DELL'ISOLA, 72 50067 RIGNANO SULL'ARNO (FIRENZE) ITALIA INFO@BETAMOTOR.COM WWW.BETAMOTOR.COM