




Cyclops 7000 Lumen LED Bulb Part# AB-22001

Fits: All 2010+ RR,RS,RR-S 4-strokes & 2-strokes 2-strokes MUST USE Cyclops 2-T Rectifier or LED will fail

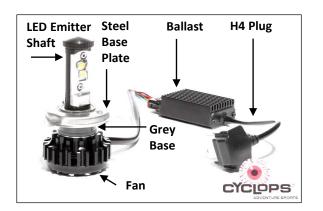

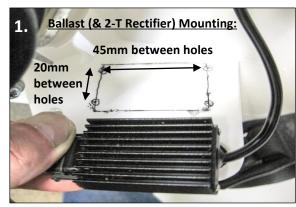

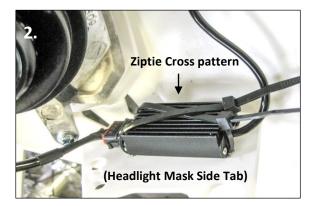



Installation Instructions (if not using stock dust cover):

Tools: Phillips screwdriver, needle-nose pliers, razor blade &/or small scissors.

Notes: Read both instruction pages before proceeding. You can use the stock headlight dust cover for the LED bulb (recommended, details on pg. 2), but it requires cutting a hole in the top dust cover, or opt not to cut/install the dust cover (1st page) & leave it in place to be reused.

- 1. Detach headlight mount straps, release locating tab from front fender, & pull headlight forward. Pull back stock bulb's rubber dust cover from headlight housing.
- 2. Unclip the bulb mounting spring clamp by pushing down on the spring's side tab (Fig. 7) releasing it from under the spring locating hook.
- 3. Note how clamp seats into bulb's mounting base plate, prior to lifting spring clamp up to remove stock bulb.
- 4. Mount LED bulb into headlight, align all 3 steel tabs of LED base plate with 3 reflector housing slots. (for older Cyclops bulbs it's optional to drill two 3mm relief holes for the baseplate's two phillips screws).
- 5. If not using rubber dust cover, fit the spring clamp into LED bulb base plate & plug LED into the stock H4 3-prong connector. *All 2-strokes MUST USE 2-stroke Rectifier installed between LED ballast & stock headlight plug.*
- 6. For mounting LED ballast (& 2-T rectifier), mark headlight mask's inner sidetabs (Fig 1.) Hold ballast/rectifier on inner side-tab & draw a line around it, mark two sets of holes @ 20mm X 45mm apart for zipties.
- 3M dual-sided tape is optional to adhere the ballast & rectifier. Insert zipties but don't connect or tighten yet, as they'll be connected later in a cross pattern, Fig 2.
- 8. If you're cutting & using the stock rubber dust cover, don't mount ballast or rectifier yet, **but proceed to Pg. 2 for dust cover cutting & install.**
- 9. If not using stock dust cover, install the ballast & rectifier, tighten zipties snugly so they both stay firmly in place.
- 10. Secure LED bulb, ballast (& rectifier if applicable) wires to ensure there's no pinching or chafing, & check that all other wires behind headlight are routed correctly.
- 11. Turn on ignition to check LED's high & low beam function. Headlight aiming shouldn't be needed with the 7000 Lumen LED. LED low beam pulls 25 watts, & will run cooler & last longer than if left on high beam unnecessarily.



Cyclops 7000 Lumen LED Bulb Part# AB-22001 Fits: All 2015+ 2-Strokes & 4-Strokes 2-strokes MUST USE Cyclops 2-T Rectifier or LED will fail







Installation Instructions: (with stock rubber Dust Cover)

- 12. Cutting a 20mm (@ ¾") hole in dust cover enables it to seal around LED reflector like stock: On older Cyclops LED's, unscrew the 2 small phillps screws from the LED bulb baseplate & remove baseplate from bulb.
- 13. Mark a 20mm (3/4") dia. hole around stock wires for cut out (Fig's 4 & 5).
- 14. Detach stock running light bulb from reflector base by turning it 90* & pull out, it will be re-inserted with LED bulb. Remove wiring from the dust cover by pulling it through the 20mm hole.
- Slip dust cover down the LED emitter shaft & over the 2 grey tabs, & fit it around the grey base, locating it between the grey tabs & fan housing. The wider part of the cover will face forward (Fig's 5 & 9).
- 16. Pull rubber dust cover backwards behind/over LED fan housing (Fig 6). Slide steel baseplate back over LED emitter shaft & screw into place.
- 17. Insert LED bulb into headlight housing, fitting spring clamp correctly into well of the steel baseplate (Fig's 7 & 8). Needle-nose pliers help guide spring clamp tips past rubber dust cover & into place.
- If unsure how spring clamp tips fit into steel base plate, reinsert stock bulb & note how it clamps; the LED bulb base plate will clamp/locate in the same way under the dust cover.
- Slide dust cover forward over base plate & seal it around headlight reflector like stock (Fig's 9 & 10). Ensure fan vents are unobstructed & can cool the LED driver properly.
- 20. Recheck wiring, reinstall headlight & shroud. Turn on ignition & check LED bulb high & low beam function. Headlight aiming shouldn't be necessary.
- 21. LED low beam pulls @ 25 watts & will run cooler & last longer than if left on high beam unnecessarily.

