




BulletProof Radiator Guards

Part#'s: AB-21130, AB-21138, AB-21154, 21156

All 2013-2019 RR, RS, RR-S, XTrainer

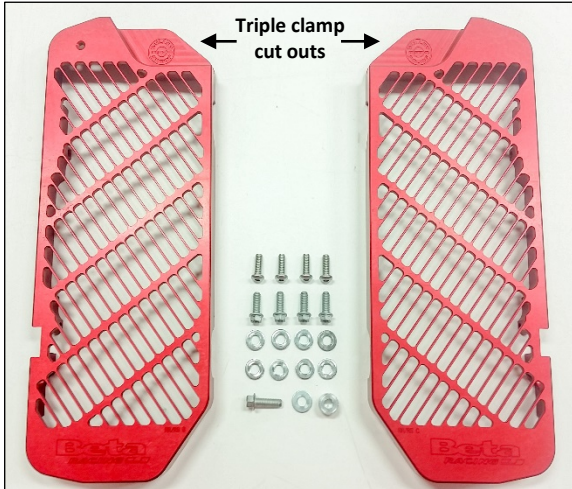

Installation Instructions:

Tools required: 8mm hex wrench, 4mm allen wrench, phillips screwdriver.

1. Remove the seat, remove radiator side shrouds, remove both radiator plastic front louvres.
2. Remove both upper & lower radiator frame-mount screws from both radiators.
3. Pull both radiators slightly away from their mounting posts.
4. Slide bulletproof radiator braces onto each radiator, noting the guard side cut-outs that match the radiators side plate mounts & flanges.
5. Position the front cut-out section of each guard toward the upper-inside, which will provide clearance for the fork triple clamp.
6. Confirm the guards are correctly positioned & all mounting holes are aligned.
7. Mount the radiator guards two inner 8mm screws with their washers.
8. Mount the two outside screws & reposition the horn if necessary.
9. Check that guards & all mounting screws are secure.
10. Check that there's enough clearance between the guards & triple clamps.
11. Reinstall radiator side shrouds & seat, do not discard plastic louvres.

