







# Beta Power Valve Spring Kit

Part# AB-22004

Fits: 2013+ RR 2-Stroke & 2015+ XTrainer Power Valve

## Installation Instructions:

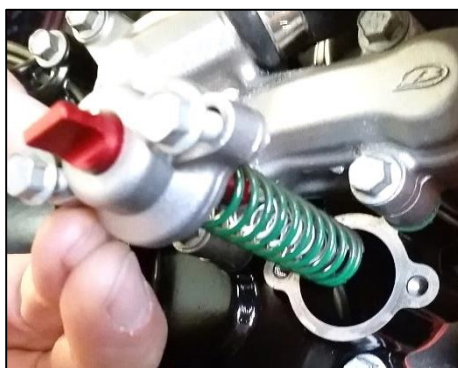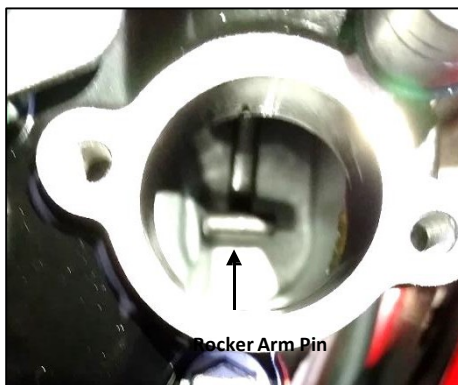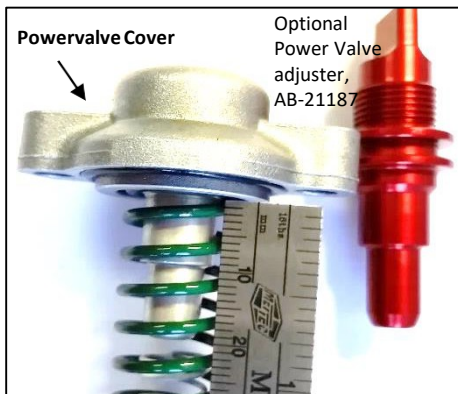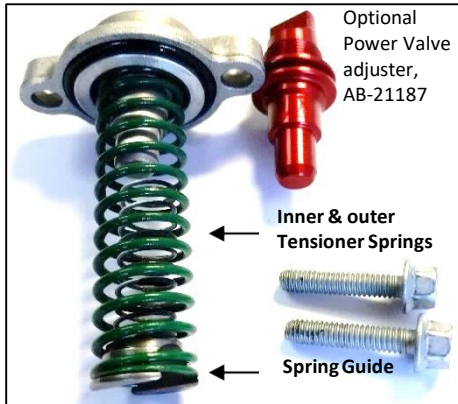

1. Remove both 8mm Power Valve cover mounting screws.
2. Remove the Power Valve cover with valve, both tensioner springs & spring guide, noting how they mount into the Power Valve cover's inner groove, as shown.
3. Replace the smaller inner power valve spring with a softer or stiffer spring for a different power delivery.\*
4. Re-insert the tensioner springs with spring guide into the cover's inner groove, turning the spring guide's groove horizontal to mate with the Rocker Arm Pin, as shown.
5. Install the assembled Power Valve & tensioner springs with spring guide into the engine, ensuring spring guide groove mates onto the Rocker Arm Pin in the engine, as shown.
6. Recheck your fitment, then use the two 8mm screws to remount the Power Valve cover. Do not overtighten.
7. \*Note, a softer inner spring increases "hit" of the engine, a stiffer spring smoothens the power and softens the hit. (The optional AB-21187 Beta Power Valve adjuster allows for on-the-fly spring tension adjustment without tools).