




BulletProof Radiator Guards

Part#'s: 22101-BL/R/S/BK

All 2020+ RR,RR-S

Installation Instructions:

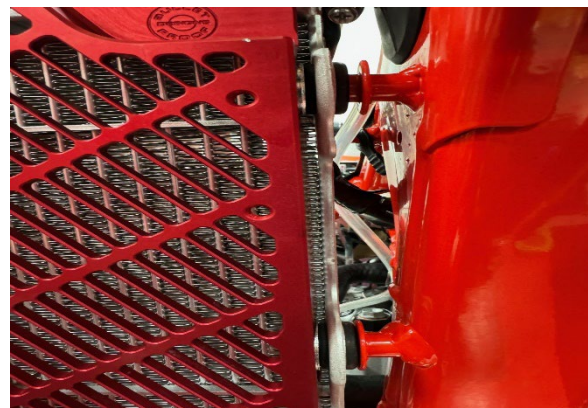

1. Remove the seat, remove radiator side shrouds, fuel tank, remove both radiator plastic front louvres.
2. Remove both upper & lower radiator frame-mount screws from both radiators.
3. Pull both radiators slightly away from their mounting posts.
4. Slide bulletproof radiator braces onto each radiator, noting the guard side cut-outs that match the radiators side plate mounts & flanges.
5. Position the front cut-out section of each guard toward the upper-inside, which will provide clearance for the fork triple clamp.
6. Mount the radiator guards two inner 8mm screws with their washers. You will ALSO reuse the large oem washer as seen in image.
7. Confirm the guards are correctly positioned & all mounting holes are aligned. Mount the two outside screws
8. Check that guards & all mounting screws are secure.
9. Check that there's enough clearance between the guards & triple clamps.
10. Reinstall radiator side shrouds, tank & seat, do not discard plastic louvres.

