



Beta Explorer Lever Install

Part# AB-22247

Fits: 2024+ Beta Explorer

Installation Instructions:

1. Use a 2mm hex key to remove the set screw from the lever pivot pin.
2. Use a pick or small punch to push up the lever pivot pin from the master cylinder body. Pull the pin out from the top.
3. Use a 2mm hex key to screw the reach adjuster in (clockwise) until it releases from the adjuster clevis. Remove the lever from the master cylinder body.





Beta Explorer Lever Install

Part# AB-22247


Fits: 2024+ Beta Explorer

Installation Instructions:



4. Transfer the adjuster clevis to the Lever Assembly

5. Insert the 2mm hex key through the adjuster clevis and engage the adjuster screw. Turn the adjuster screw out (counter-clockwise) until the adjuster screw head is flush with the adjuster clevis.

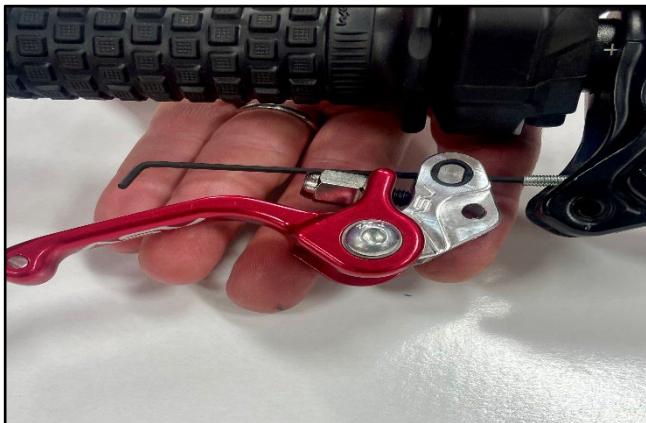

6. Insert the pivot pin through the master cylinder body and lever pivot, pushing the pin through until it bottoms. Apply a drop of blue lock tite to the set and tighten the set screw with the 2mm hex key.



7. Use the reach adjustment feature on the lever to fit your preference. (ASV Levers Only)

8. Your Explorer is ready to ride!