





Beta
motorcycles

Turn Signal Wedges

Installation Instructions for
Part# AB-12058
All RR and RS Models

Cut this template out before you start this installation

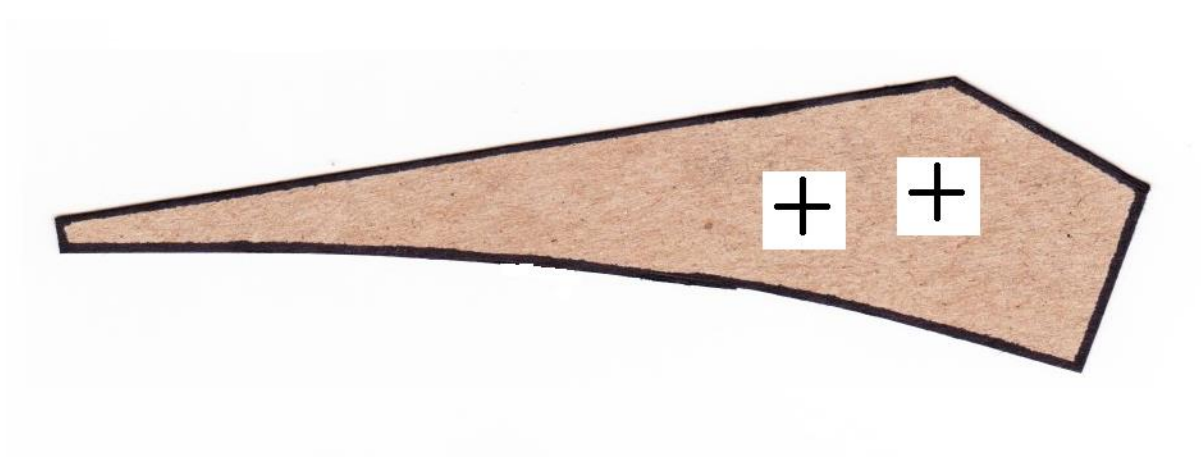


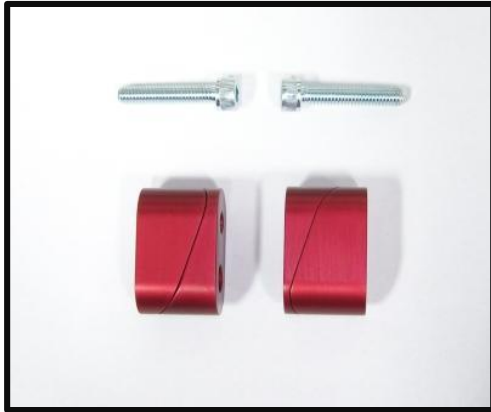

The turn signal wedge kit is designed to move your turn signals up to the “mid” fender or for those who wish to mount turn signals on an RR model. The kit includes two inner and two outer wedges along with two mounting bolts. RR Models have a rear fender and a mid fender. RS models have a rear fender, mid fender, and a lower fender. This kit is designed to be mounted on the mid fender only. Follow these steps to insure proper installation.



1) Hold the template provided to the mid fender to mark your holes with a sharp pic or other pointed device. Flip the template over and mark the other side of the fender. It is very important that the holes are drilled equal on each side to insure the turn signals will be mounted level.

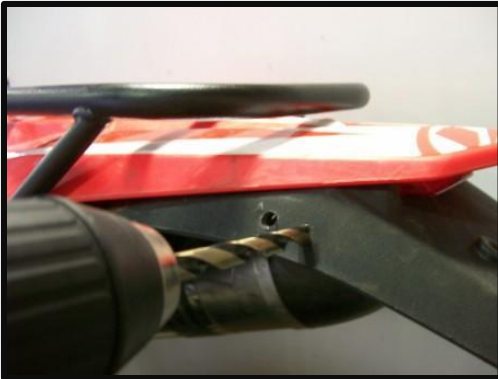

2) Drill the two holes on each side with a ¼” drill bit.



3) Insert the wire through the inner wedge on the inside of the fender and install the turn signal by threading the supplied 6mm bolt into the inner wedge. Repeat this step for the other side. Connect the turn signal wires to their correct side.



4) After both wedges have been installed, reinstall the rear mid fender making sure that no wires are in the way of the screws holding the mid fender to the rear fender.



This is how the turn signals should look when finished.