




# BulletProof Linkage Guard

Part# AB-21135

Fits: All 2015+ 2-Stroke & 4-Stroke

## Installation Instructions:

Tools required: 6mm Allen Wrench, Loctite 'Blue' threadlocker

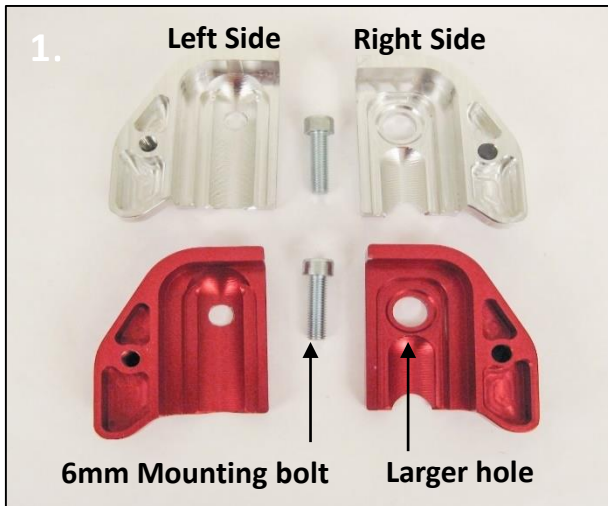

1. No need to disassemble the rear shock or linkage mounting nuts or bolts, as the link guard slips right over the lower rear shock clevis.

2. Separate both linkage guard halves & note the right side with larger hole fits over the shock clevis mounting bolt-head, Fig. 1.

3. Apply a small amount of blue Loctite to the last few threads of the 6mm allen bolt.

4. Slide the left side linkage guard cover over the left side of the shock clevis & center its hole over the clevis mounting bolt-tip, Fig. 2.

5. Slide the right half of the link guard over the shock clevis & align both halves flat & flush, keeping the left side parallel with the link arm.

6. Insert the 6mm allen bolt into its mounting hole & tighten it lightly prior to alignment of the link guard halves. Tighten the 6mm bolt securely.

7. Recheck the left side guard hole is centered over the clevis mounting bolt-tip, & that both sides of the Link guard are still flush & aligned.

8. Recheck that there's adequate, parallel clearance between left side of the link guard & the left linkage arm, this clearance is sufficient but it's tighter than the right side.

