


Bulletproof Front Disc Guard Part# AB-21145, AB-21155

AB-21145 Fits: pre-2019 RR, RS & RR-S Models AB-21155 Fits: 2019+ RR, & RR-S Models





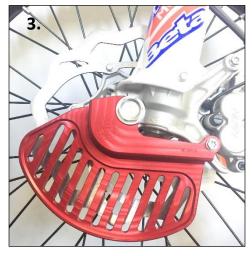

Installation Instructions:

The Bulletproof Front Disc Guard Kit includes:

- 1 Billet aluminum front Disc Guard
- 1 50mm lower-brake caliper mount bolt (for 2019+ models only)

Tools: Torque wrench, 24mm & 10mm sockets, 6mm allen wrench

- 1. Remove the left 24mm aluminum front axle nut, being careful not to round off its narrow shoulder.
- 2. Placing a paper towel over the nut will prevent it from being gouged by the steel socket.
- 3. Remove the lower brake-caliper 10mm mount bolt, cleaning out any remaining thread locker from the caliper's inner threads.
- 4. Wipe off any dirt or debris from the axle nut threads & caliper mount threads, & mount facings, as in fig 2.
- 5. Fit the disc guard to the lower fork lug, thread in the axle nut.
- 6. 2018 & earlier forks use the stock caliper mount bolt & washer.
- 7. 2019+ forks use the longer 50mm caliper mount bolt & washer.
- 8. Apply a small amount of medium (blue) thread locker to the brake caliper mount bolt.
- 9. Torque front axle nut to 50nm, torque caliper mount bolt to 35nm.
- 10. Marking these mounting fasteners afterwards with a sharpie provides a quick way to check for correct torque.