



BulletProof Radiator Guards



Part#'s: AB-21156

Fitment: 2018+ 125 RR-S



Installation Instructions:

1. Remove seat, air box cover, tank shrouds radiator louvers and four radiator mounting bolts.
2. Attach the 4 round pins to the braces by slipping 4 button head Allen bolts through the holes on the posts located on the outside edge of the braces and threading the pins onto the bolts.
3. Attach the 2 radiators to the frame by loosely installing the four hex head bolts and washers.(Refer to image 2)
4. Secure the outer edge of the braces to the radiator by threading a button head Allen and washer through the outer radiator holes into the threaded holes of the braces and tighten them then tighten the inner bolts.

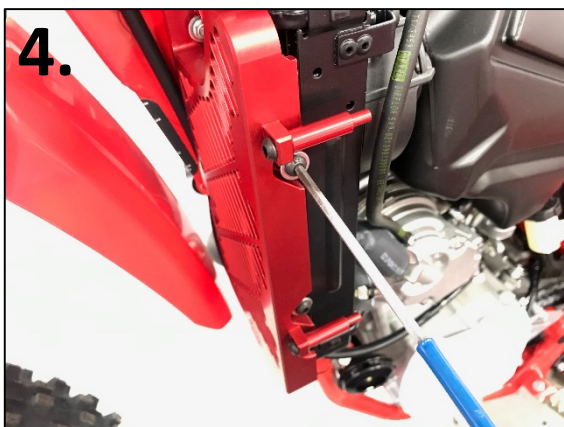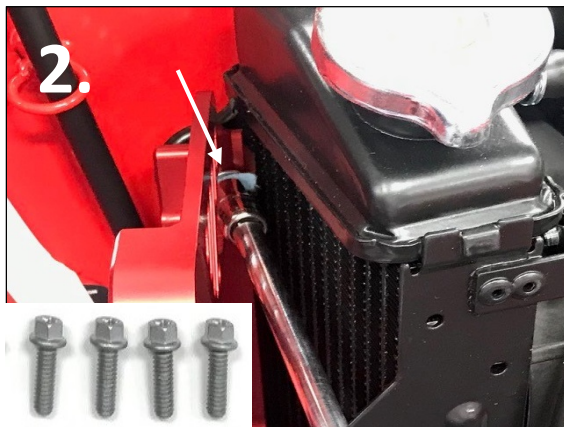




BulletProof Radiator Guards


Part#'s: AB-21156



6. Slip the locating holes of the right side shroud onto the locating pins then align the shroud bolt holes, install and tighten the shroud bolts. (You can loosen the 2 tank bolts and move the tank forward or backward to get the pins to rest in the locating holes).

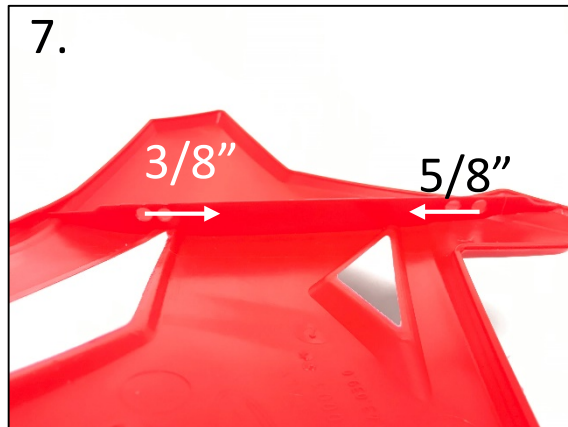

7. Drill new pin locating holes in the left side shroud next to the old ones, $3/8$ " lower from the center of the top hole and $5/8$ " above the center of the old lower hole.

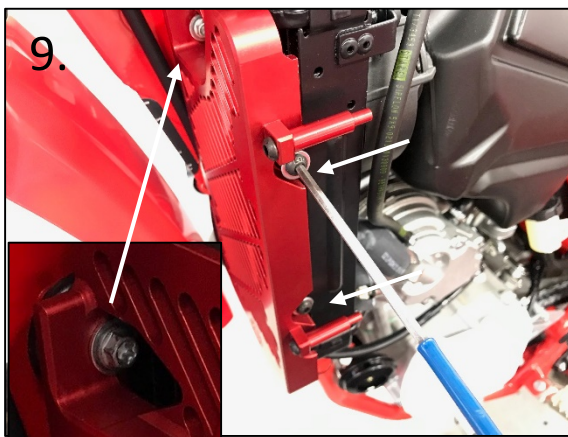

8. Slip the new locating holes of the left shroud over the locating pins then align the shroud bolts holes then install and tighten the shroud bolts.

9. Check that guards & all mounting screws are secure.



10. Check that there's enough clearance between the guards & triple clamps.
11. Reinstall radiator side shrouds & seat, do not discard plastic louvres.