




Beta P3 Carbon Pipe Guard

Part# AB-21238

Fits: 2019+ 200RR

Installation Instructions:

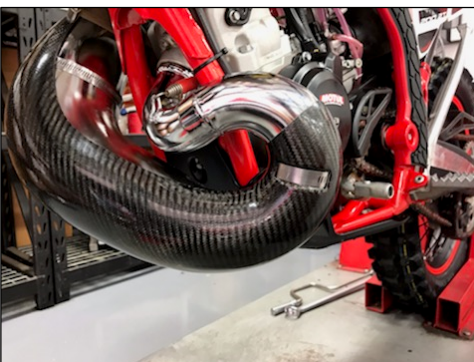

1. Remove packaging & position carbon pipe guard onto the pipe to determine proper location & best band clamp orientation.
2. In determining band clamp positioning, ensure there's access to the screw adjusters for ease of assembly & disassembly.
3. Route the band clamps through the carbon guard slots.
4. Place carbon guard onto pipe & tighten the clamps until snug. As both band clamps are tightened & mark clamp a half inch from screw and cut it off.
5. Once you're satisfied with the guard placement & clamp position, snug the band clamps securely but don't overtighten them.