



# Beta P3 Carbon Silencer Guard


Part# AB-21254-S, AB-21254-F

Fits: 2014+ Beta 4-strokes (except 125 RR-S)

## Installation Instructions:

Tools needed: 8mm socket wrench.

Note: AB-21254-S fits Beta stock silencer, AB-21254-F fits Beta FMF Powercore4 or Turbinecore4 silencers.

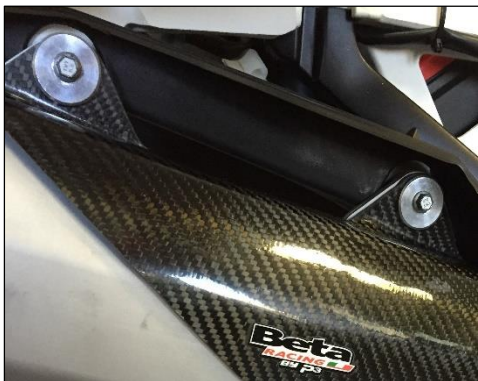

1. Remove the seat, & unscrew the right-rear body panel's two front mount screws.
2. Lift up the right rear side panel in order to access the silencer mounting screws.
3. Remove the two 8mm screws holding the stock silencer in place.
4. Remove both front & rear outer aluminum grommets.
5. Place the P3 carbon silencer snugly onto the stock or FMF silencer.
6. Test the fitment to ensure the silencer & carbon guard mount holes are all aligned.
7. Insert both aluminum grommets into the carbon guard holes & align them with the rear subframe silencer mounting holes.
8. Fasten both front & rear silencer mount screws securely, but do not overtighten them.
9. Ensure the silencer is mounted securely & the P3 guard is properly aligned.
10. Replace both side panel mount screws, checking that the smaller side panel mount tabs are inserted correctly into the main rear side panel.
11. Replace the seat & periodically check that the mount screws are tightened securely.
12. Hint: After tightening the silencer mount screws, mark them with a sharpie marker to enable quick visual inspections for tightness.