




Beta EFI Fuel Elbow

Part# AB-22014

Fits: 2015+ 4 Stroke EFI Models

Installation Instructions:

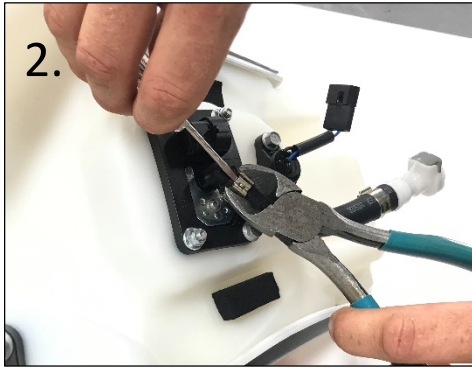

1. Remove fuel tank and drain fuel.
2. Remove clamp and fuel line from the stock elbow
3. Remove Torx screw and retaining plate from the regulator.
4. Install the new elbow into the regulator then install the retaining plate and Torx screw.
5. Reinstall the fuel line and clamp.
6. Test the fitment to ensure the elbow is sealed tightly and there are no fuel leaks. Re install tank and shrouds.
7. You are now ready to ride with your EFI elbow!