




Fuel Mixture Screw, Evo 4T

Part# AB-80164


Fits: 2007+ Rev/Evo 250-300 4 Stroke Models

Installation Instructions:

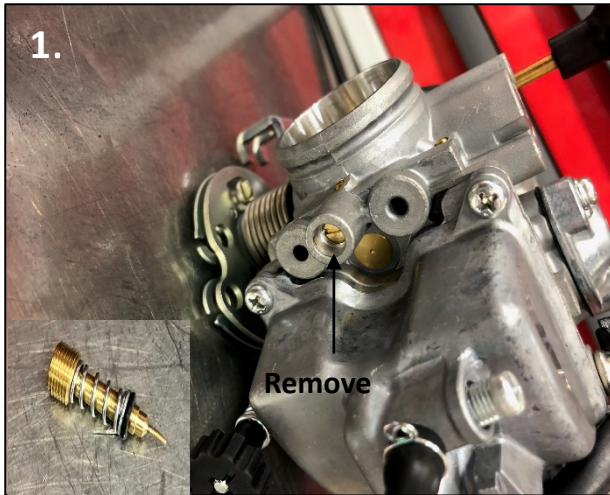

1. Use Philips head screw driver and back out the idle screw (IMG. 1)

2. Remove spring, washer, and o-ring from stock idle screw.

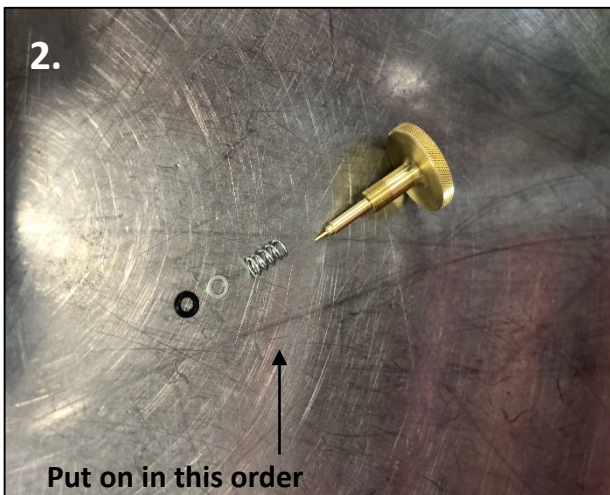

3. Use the spring, washer, and o-ring on new idle screw (AB-80164) in same order they came off of the stock screw.(IMG. 2)



4. Insert new idle screw with all components into the same spot you removed it from.

5. Once installed you are ready to ride!